



ZTE Tempo Headphone Jack Replacement

Headphone Jack

Written By: omar



INTRODUCTION

Headphone Jack

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Soldering Station](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Headphone Jack





- Pry open the back case to get to the back cover.
- Remove eight 5mm screws with a PH0 screw.
- Pry open the back cover with a plastic opening tool.
- Slide the plastic opening tool alongside the side seam twisting your hand forcefully to open the back cover.
- Note: Pry open by finding an edge and forcing it open with the plastic opening tool.

Step 2

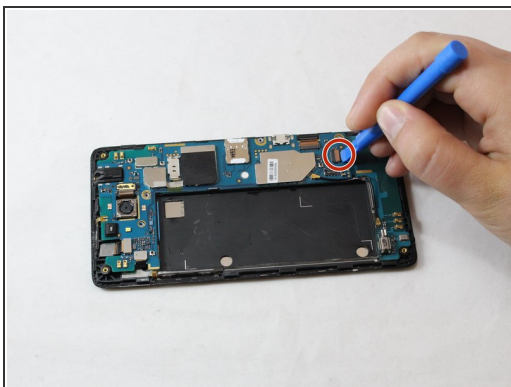


- Unplug wires by pushing up with the plastic opening tool

Step 3

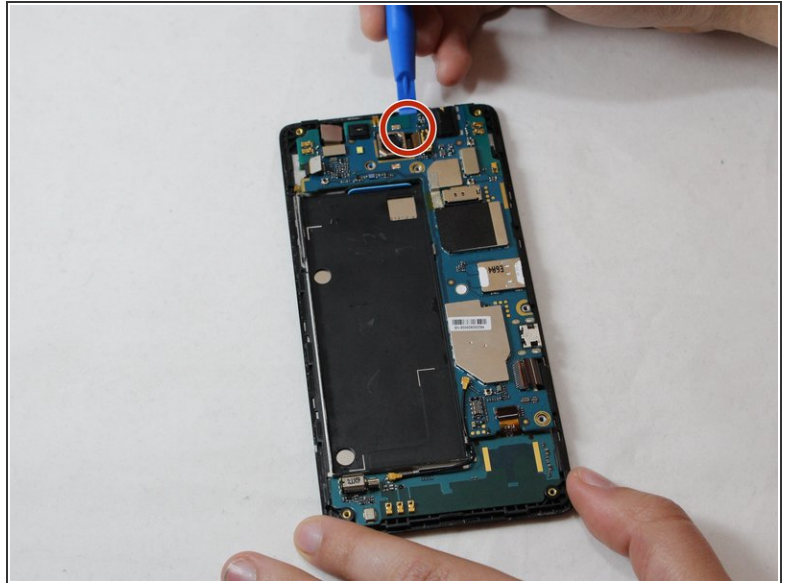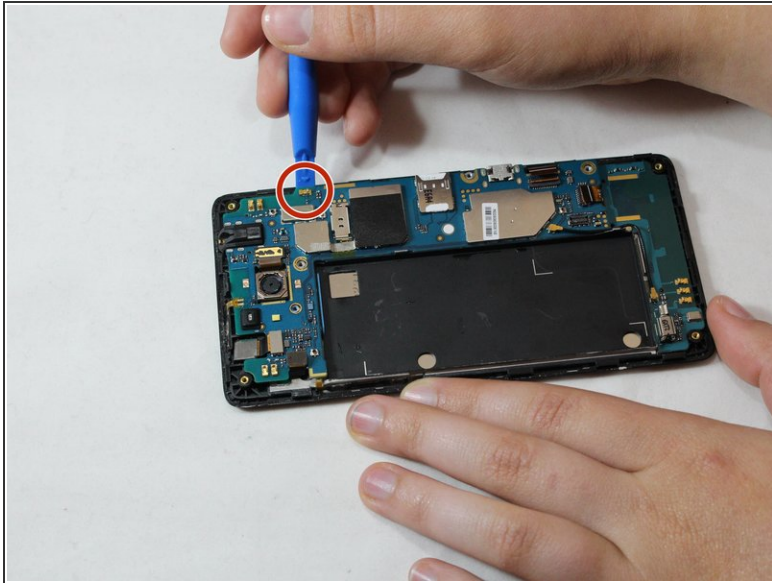

- Push up with the plastic opening tool to remove the motherboard.
- Slide the plastic opening tool alongside the side seam twisting your hand forcefully to open the motherboard.

Step 4

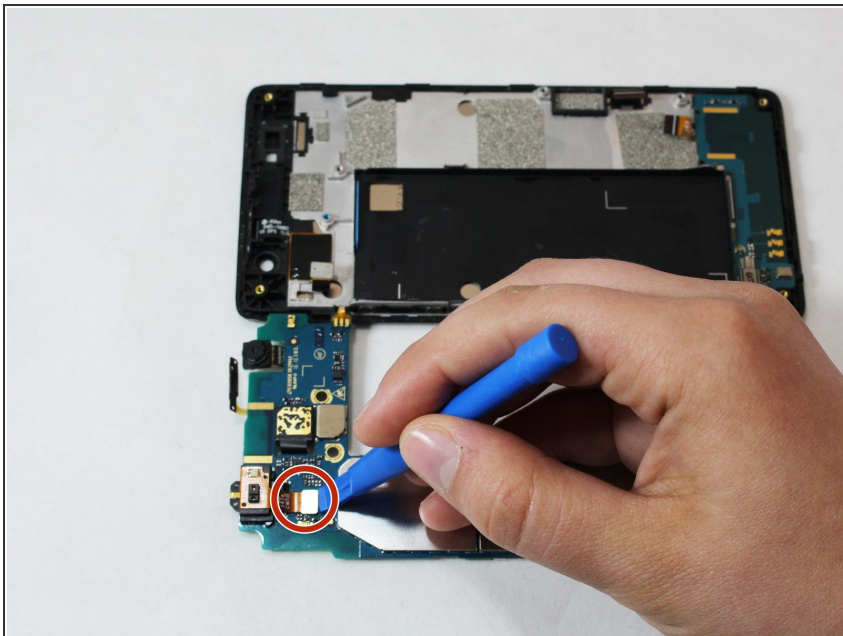

- Unplug the wire by pushing up with the plastic opening tool in the back of the motherboard.

Step 5



- Desolder and remove in front of the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 04:12:34 AM.