




Samsung Galaxy Note 10.1 3.5 mm Headphone Jack Replacement

This guide will help you replace the 3.5 mm headphone jack on the Samsung Galaxy Note 10.1.

Written By: Gavin Tipker

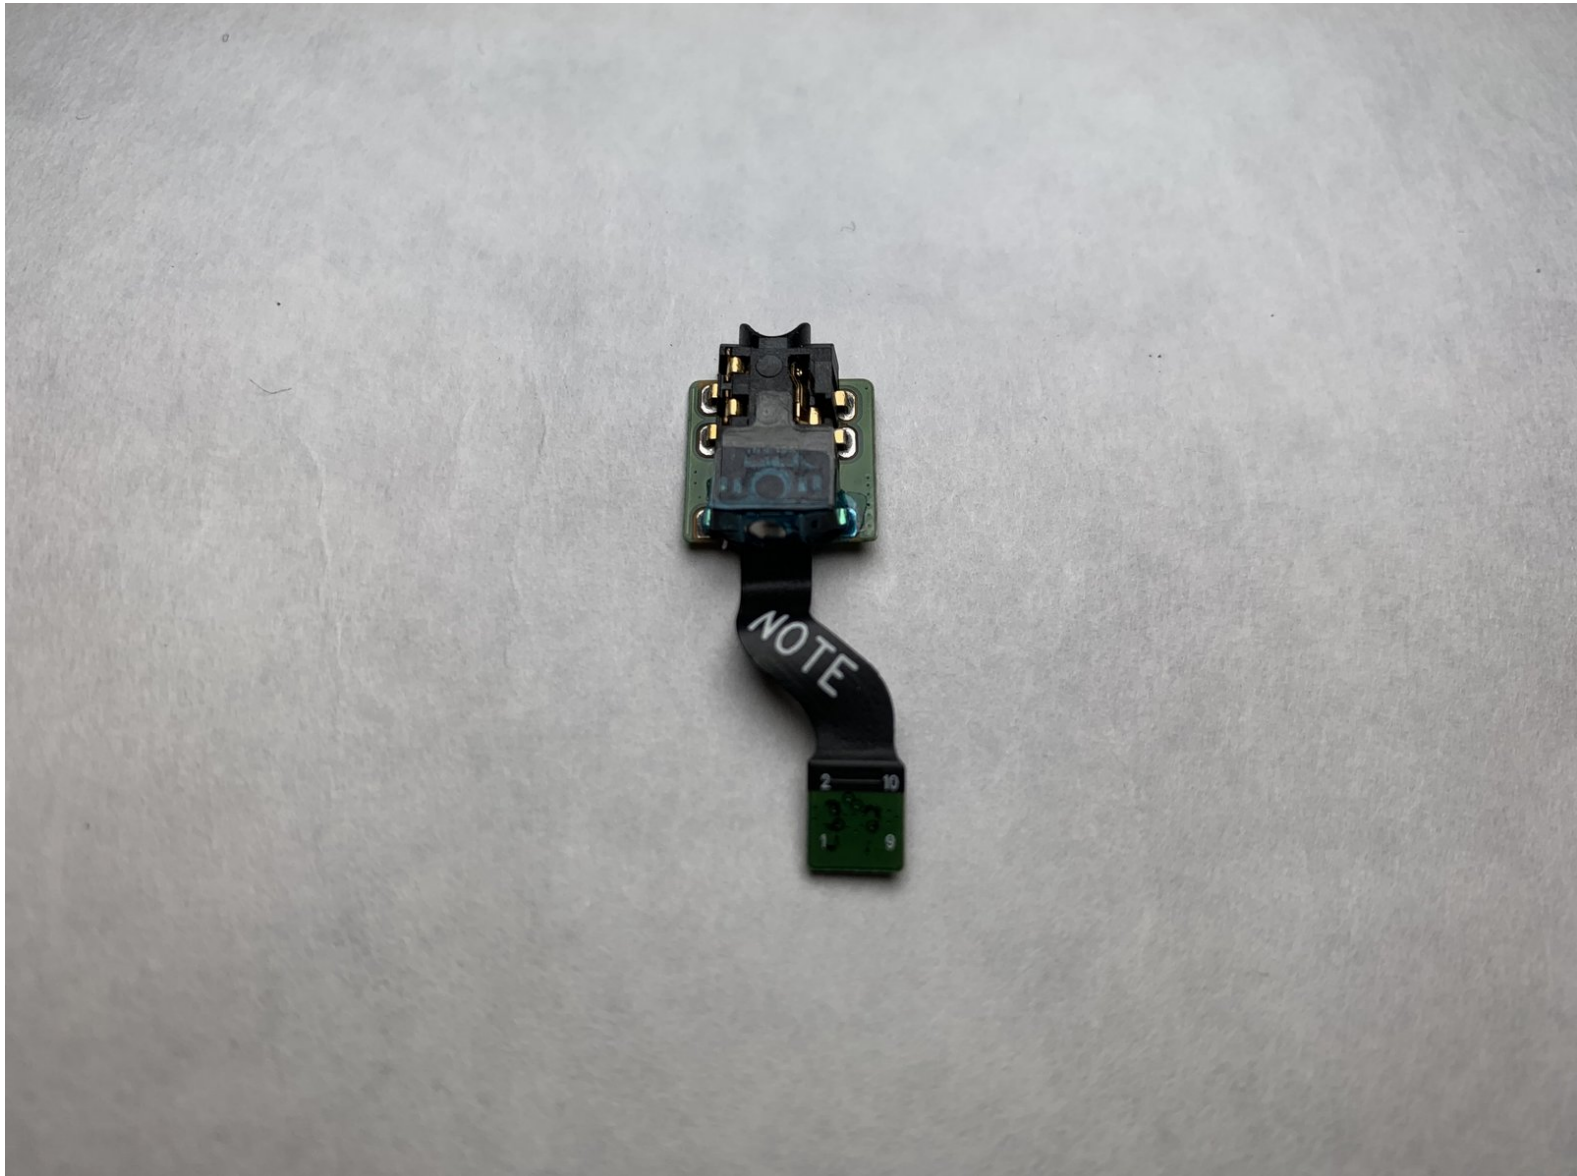

INTRODUCTION

If your headphones don't seem to be working properly when you plug them into your Samsung Galaxy Note 10, this guide should help you solve this issue. Before starting this guide, look into purchasing a tool set from iFixit's website, that is where you will find the tools referenced in this guide. As with any electronic device, be sure to wear anti-static gloves while performing repairs on the device.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

PARTS:


- [Galaxy Note 10.1 \(2012\) Headphone Jack](#) (1)

Step 1 — 3.5 mm Headphone Jack



- This is the back of the device and where you will begin to take it apart.
- It is necessary to remove the silver piece covering the camera first before removing the bigger back piece.
- Use a metal spudger to pop up the corner of the silver piece.
- Use the plastic opening tools to pry along the edges of the silver piece.
- Lift up the silver piece to reveal the rest of the back cover.


Step 2

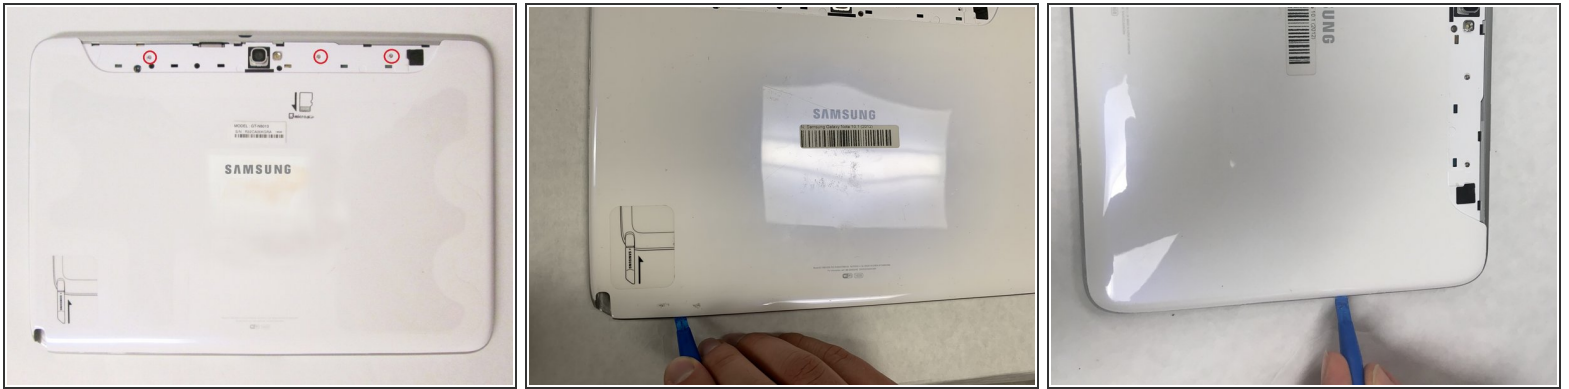

- Remove the three 5mm screws indicated by the red circles with the Phillips #00 screwdriver.
- Using the plastic opening tools pry along the bottom of the device, moving to the sides of the cover to the top.
- Remove the back cover.

⚠ At this point use anti-static gloves or do NOT take it apart on carpet.

Step 3

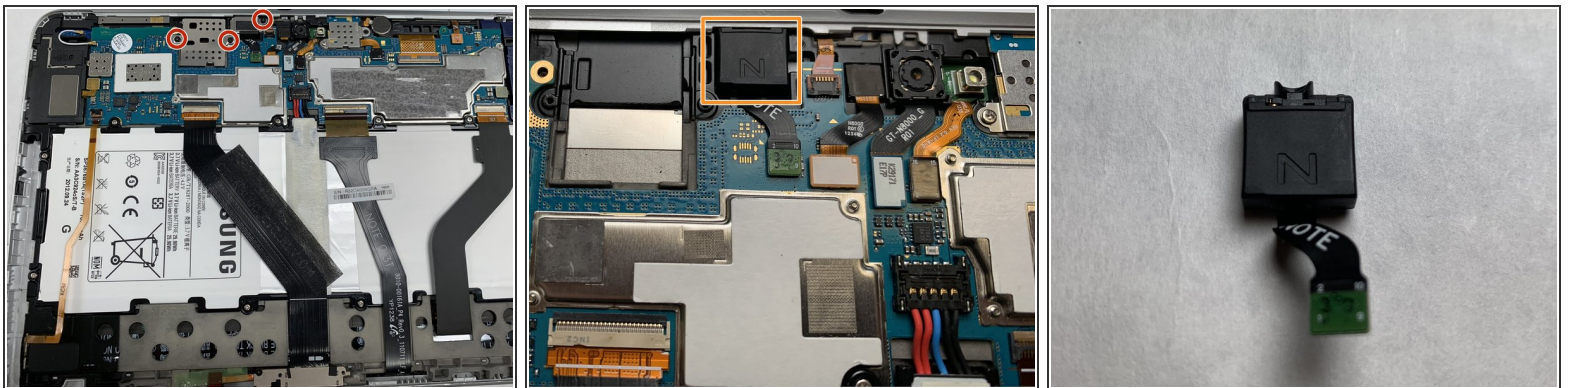

- Remove the three 2 mm screws indicated by the red circles with the Phillips #00 screwdriver.
- Starting with the black motherboard connector, remove the module indicated by the orange box in the second picture.
- Replace the 3.5 mm auxiliary port with a similar model.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-12 10:11:20 AM.