



MacBook Pro 13" Retina Display Late 2013 Feet Replacement

Replace broken or worn MacBook Pro Retina Late 2013 Feet

Written By: Taylor Dixon



INTRODUCTION

Have your MacBook Pro feet seen better days? Use this guide to give your late 2013 MacBook Pro a fresh set of feet.

TOOLS:

- [MacBook Pro and Air 5-Point Pentalobe Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Adhesive Cleanup Kit](#) (1)

PARTS:

- [MacBook Pro Retina Plastic Feet](#) (1)

Step 1 — Lower Case



- Remove the following ten screws securing the lower case to the upper case:
 - Two 2.3 mm Pentalobe screws
 - Eight 3.0 mm Pentalobe screws
- ☑ Throughout this repair, [keep track of each screw](#) and make sure it goes back exactly where it came from to avoid damaging your device.



Step 2



- Wedge your fingers between the upper case and the lower case.
- Gently pull the lower case away from the upper case to remove it.

Step 3



-  The lower case is connected to the upper case with two plastic clips near its center.
-  During reassembly, gently push down the center of the lower case to reattach the two plastic clips.

Step 4 — Feet



- Peel away any stickers from the backside of the rear case covering the feet you have chosen to replace.
- ☑ Any stickers you remove will most likely be unsalvageable for re-use. That's okay! Your MacBook does not need them to function.

Step 5




- Remove any broken or damaged feet.
 - ⓘ If the foot you are replacing is still intact, you can use your tweezers push it out from the inside.
- If the old foot is difficult to remove, use a hair dryer or a heat gun to apply some heat to the area and loosen the adhesive.

Step 6




- Scrub the foot cavity with adhesive remover to remove any remaining adhesive.

Step 7

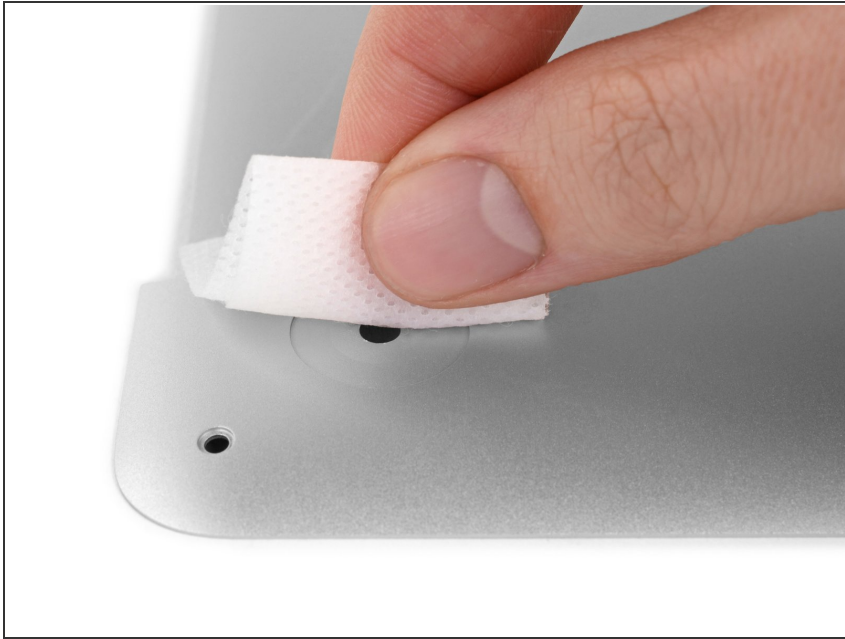


- Wipe the foot cavity with an isopropyl alcohol prep pad to remove any cleaner residue and prep the area for the adhesive on the new foot.

Step 8

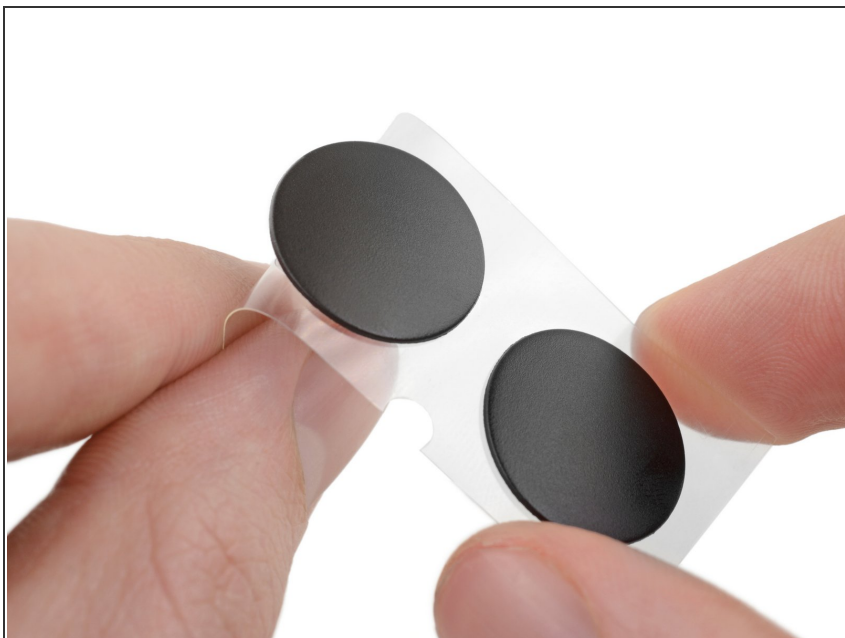


- Peel a replacement foot from the plastic backing.
- ⓘ The adhesive is fairly strong—make sure that you are peeling the foot up, not tearing the plastic backing.

Step 9

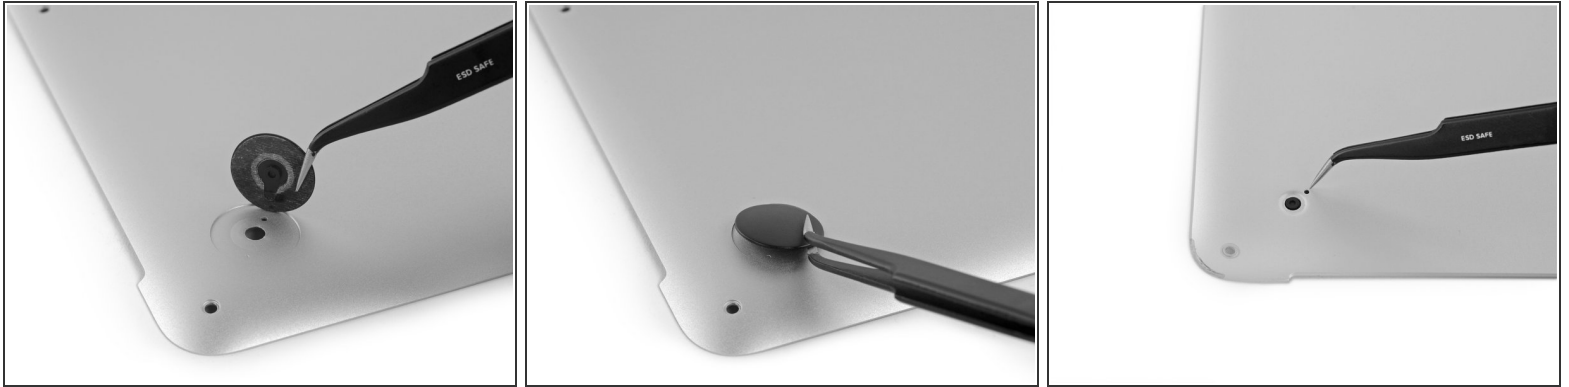

- Align the new foot inside the cavity.
 - ⓘ Make sure the alignment nub on the foot is lined up with the small hole near the perimeter of the pad.
- Lay the foot down while keeping it properly aligned.
- Check for proper alignment from the inside of the case. The alignment nub should be slightly visible through the alignment hole.

Step 10

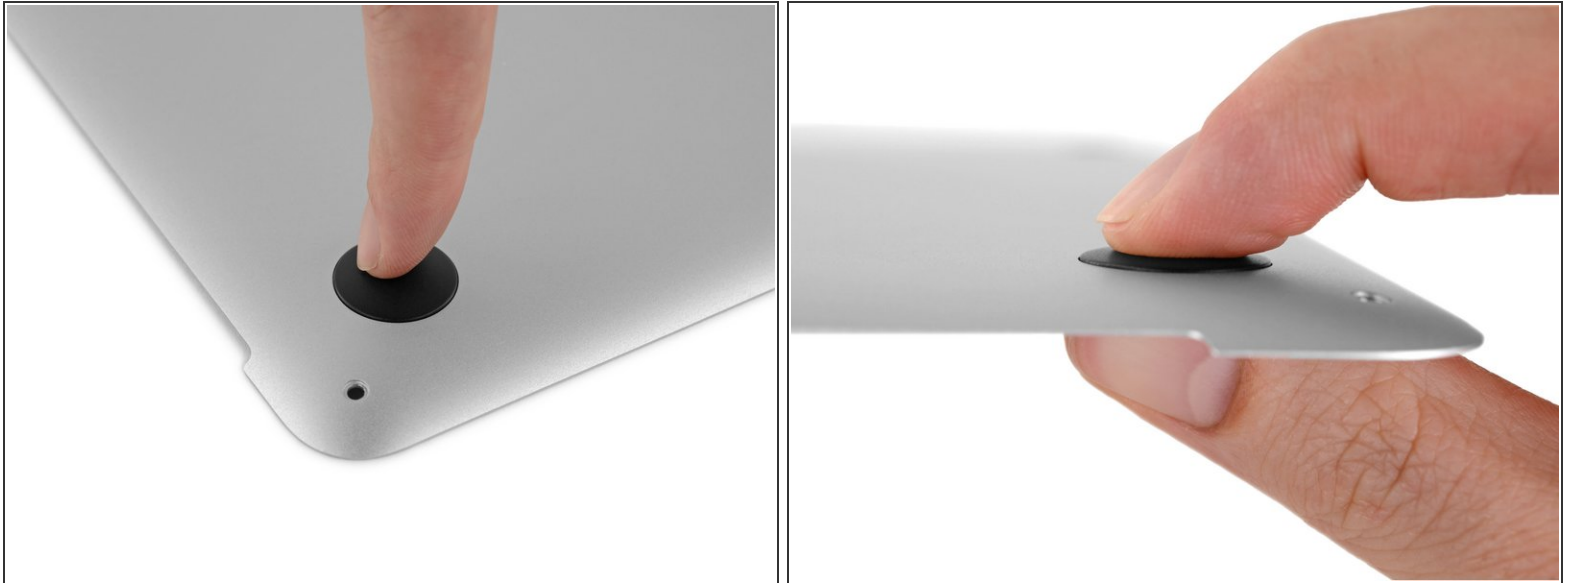

- Press the new foot into place firmly with your finger, then apply pressure by pinching the foot from either side of the case with your finger and your thumb.
- Maintain pressure for 30 seconds to set the pressure-sensitive adhesive.
- Repeat the last seven steps for any remaining broken or worn feet.

To reassemble your device, follow these instructions in reverse order.