




Samsung Galaxy S9 Midframe assembly Replacement

Remove the NFC coil assembly including the antennas and other plastic components.

Written By: Sam Azevedo

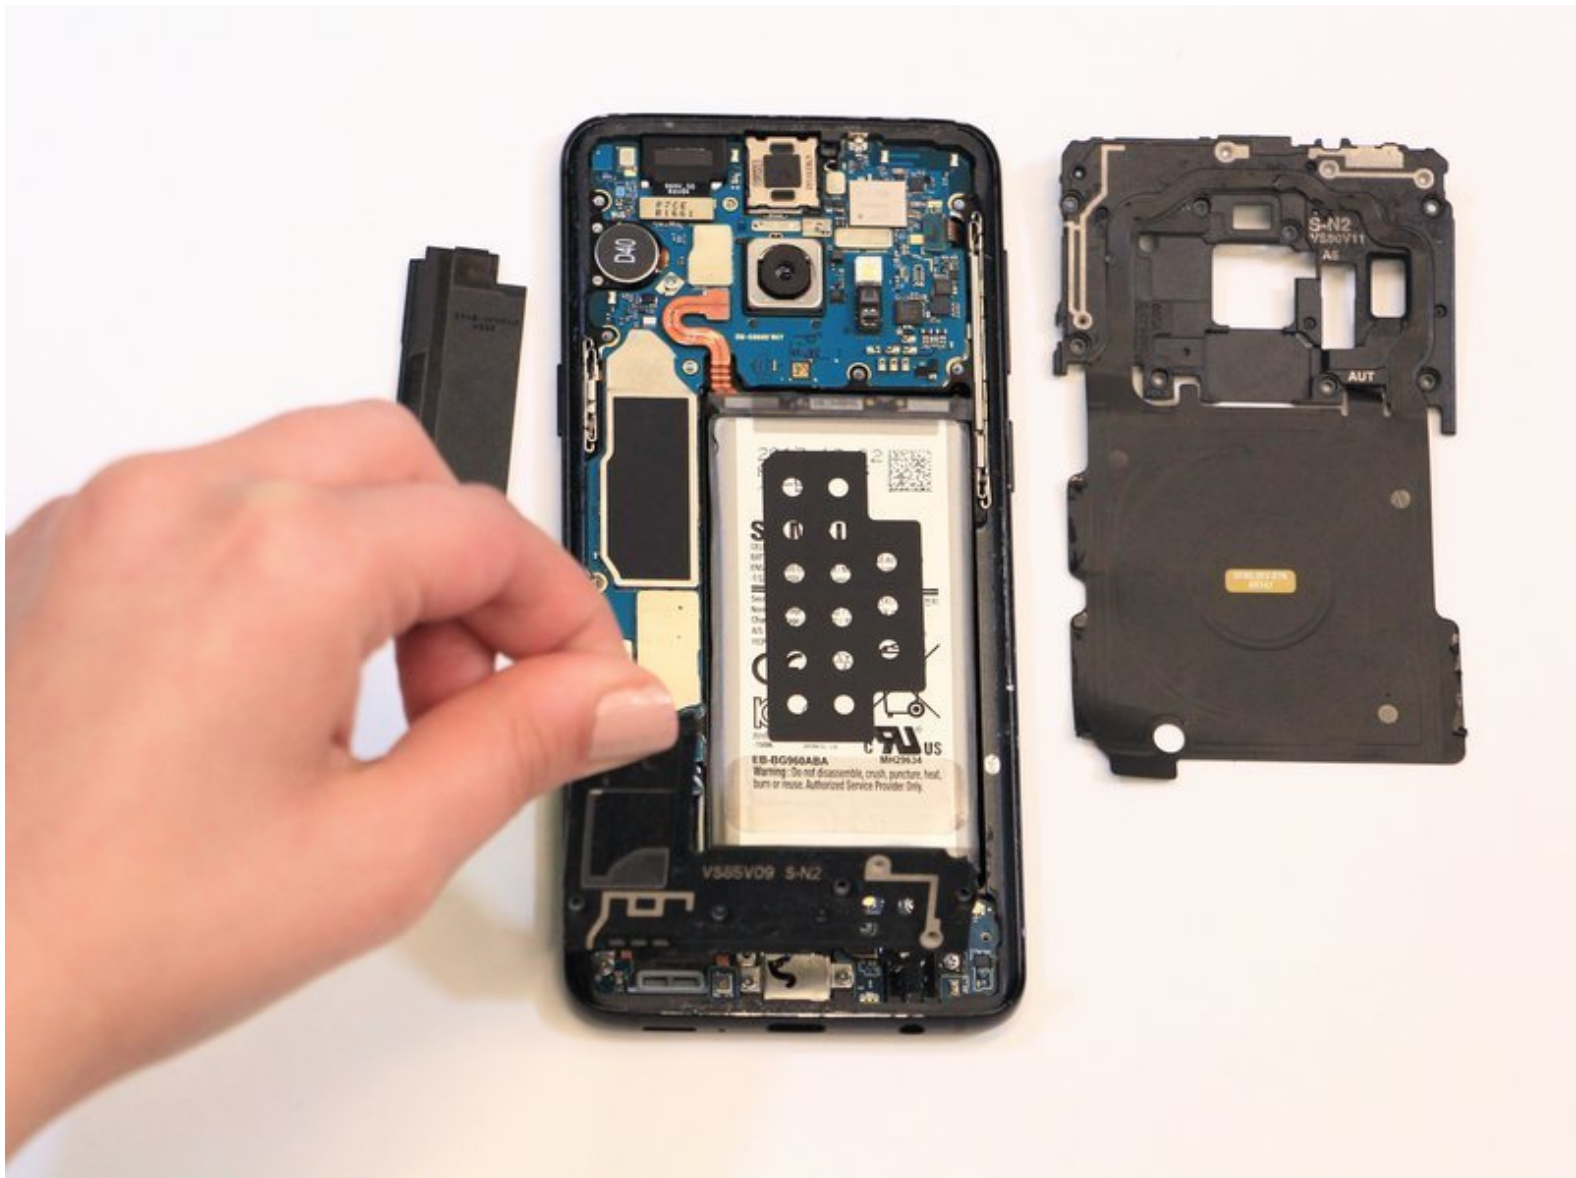

INTRODUCTION

Use this guide to remove or replace the plastic frames covering the phone internals, including the NFC coil and antenna assemblies.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Midframe assembly




- Remove fifteen 4mm screws with a #000 Phillips screwdriver.

Step 2



- Remove the NFC coil assembly.

Step 3

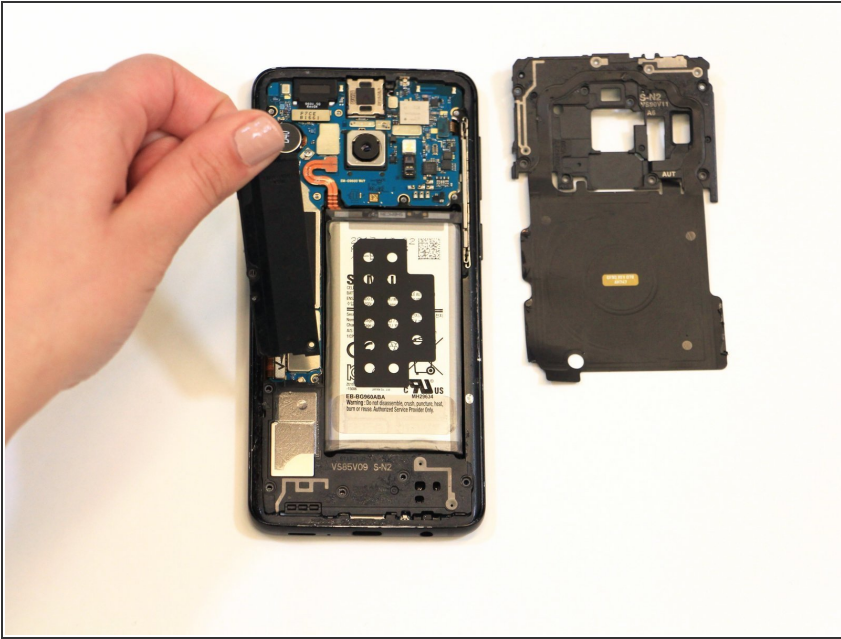

- Remove the motherboard bracket.

Step 4



- Remove the speaker cover/antenna assembly.

To reassemble your device, follow these instructions in reverse order.