



# MacBook Pro 13" Retina Display Late 2012 Headphone Jack Assembly Replacement

Prereq for removing the upper case.

Written By: Walter Galan



## INTRODUCTION

Prereq for removing the upper case.

---

### TOOLS:



- [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Headphone Jack Assembly



- Remove the two 3.4 mm T5 Torx screws securing the headphone jack to the upper case.

## Step 2

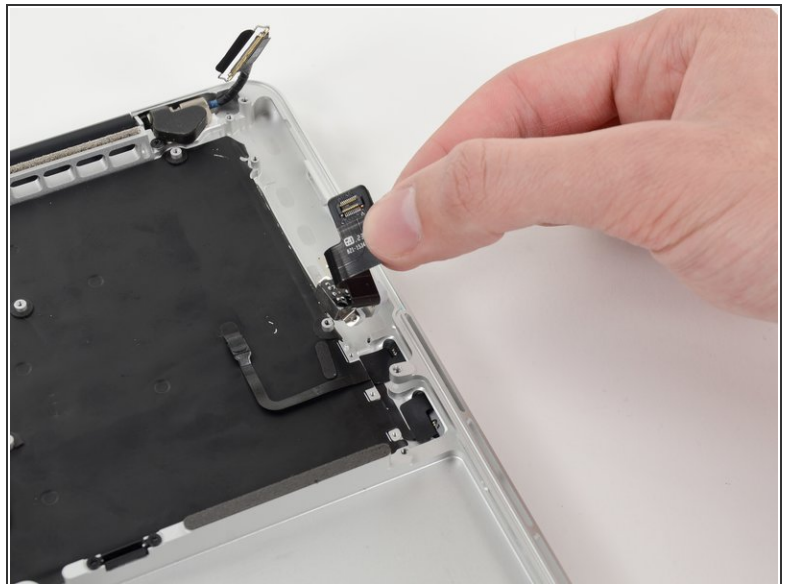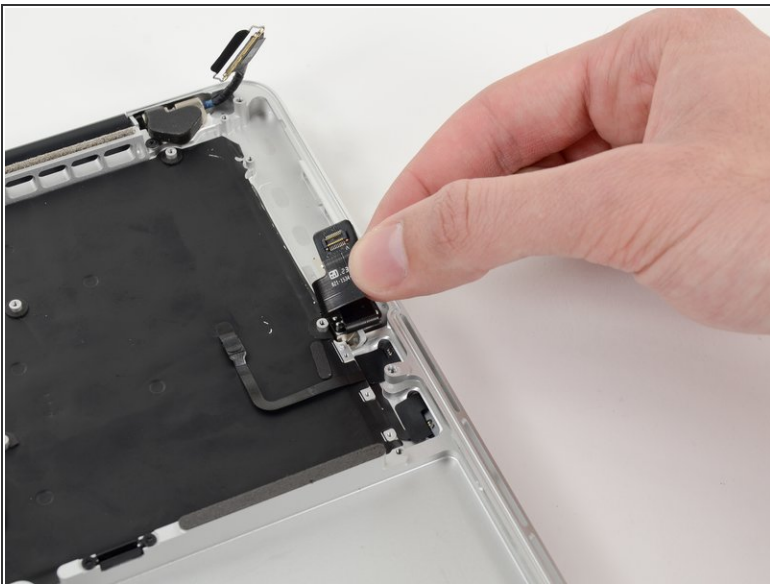

- Lift and remove the headphone jack out of the upper case.

To reassemble your device, follow these instructions in reverse order.

