



---

## INTRODUCTION


Prerequisite to remove the fan after the hard drive brackets.

---

### TOOLS:


- [T10 Torx Screwdriver](#) (1)
-

## Step 1 — Fan

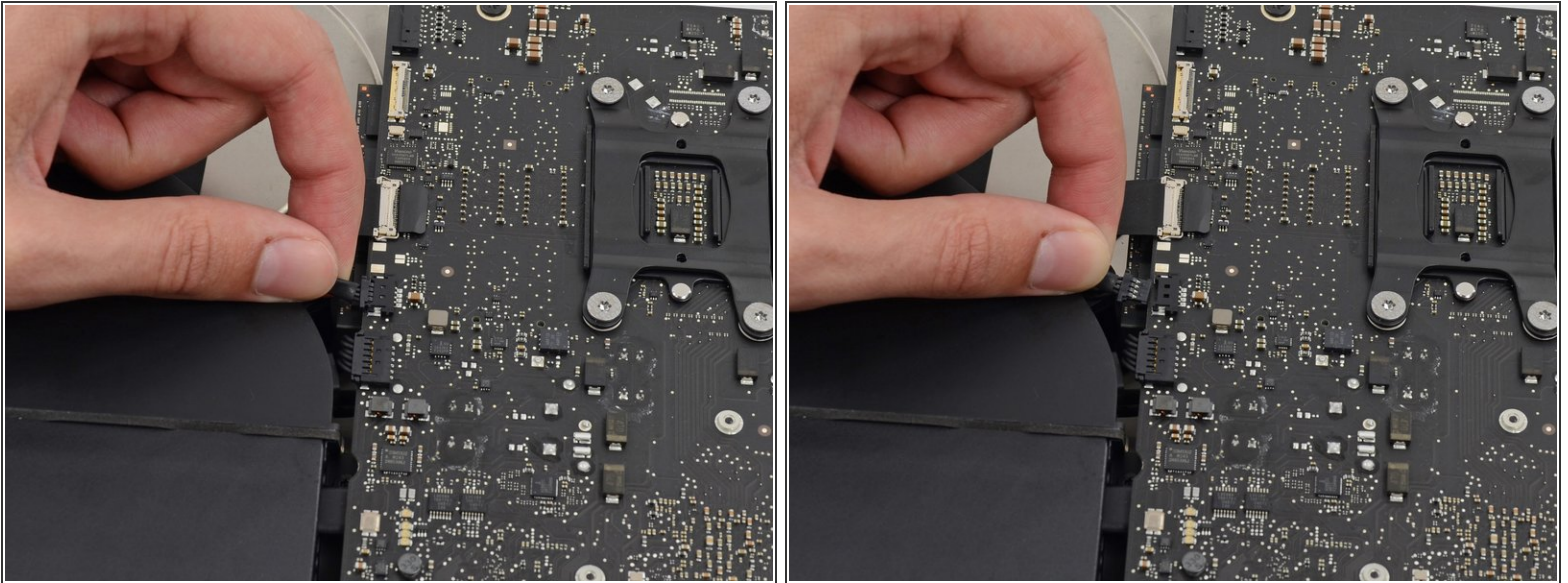

- Gently pull the fan cable connector straight away from its socket on the logic board.


## Step 2

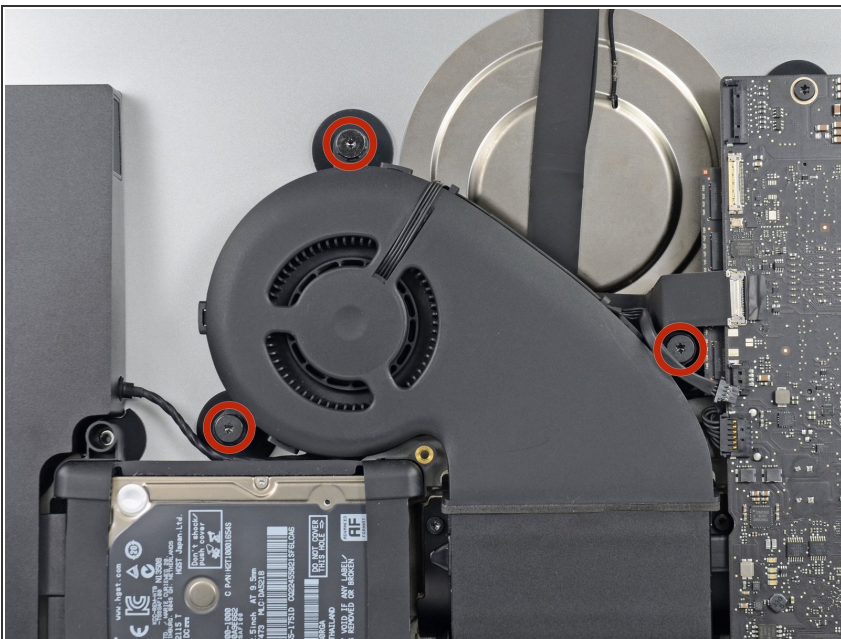

- Remove the three 12.3 mm T10 shoulder screws securing the fan to the rear enclosure.



## Step 3

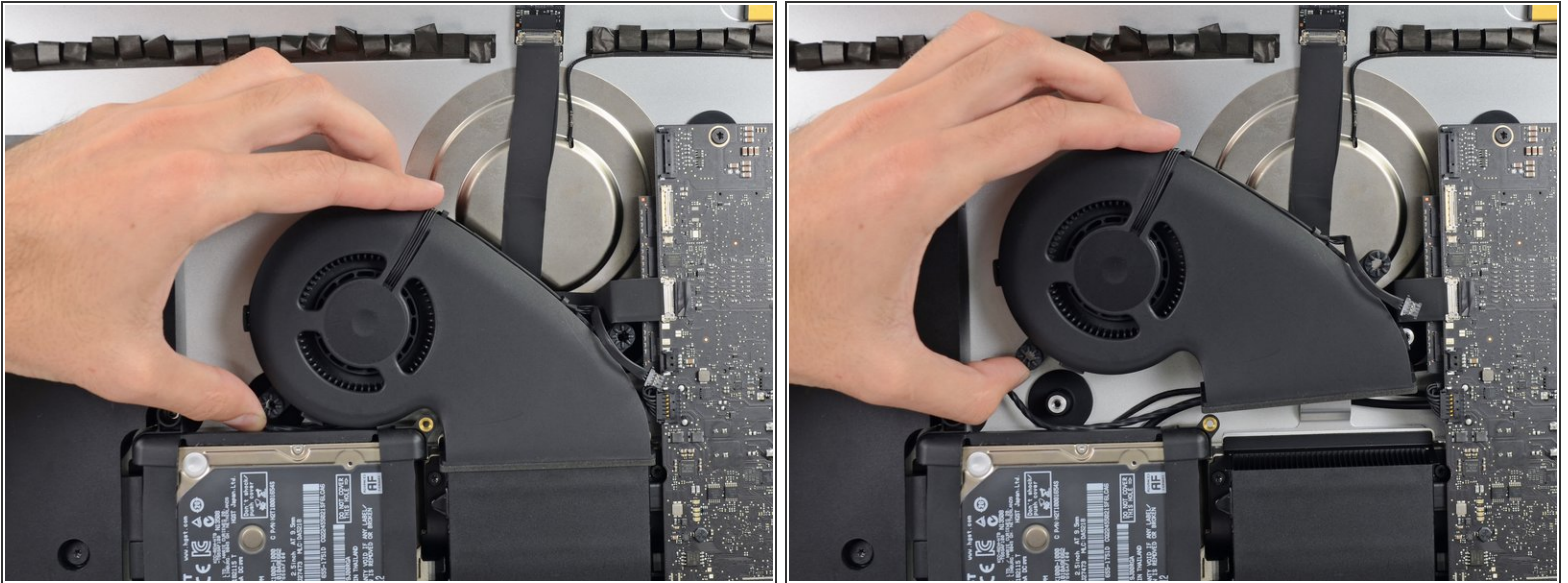

- Remove the fan from the iMac.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-25 10:22:25 PM.