




Motorola Moto Q Back Casing Replacement

Written By: Luis Herrera

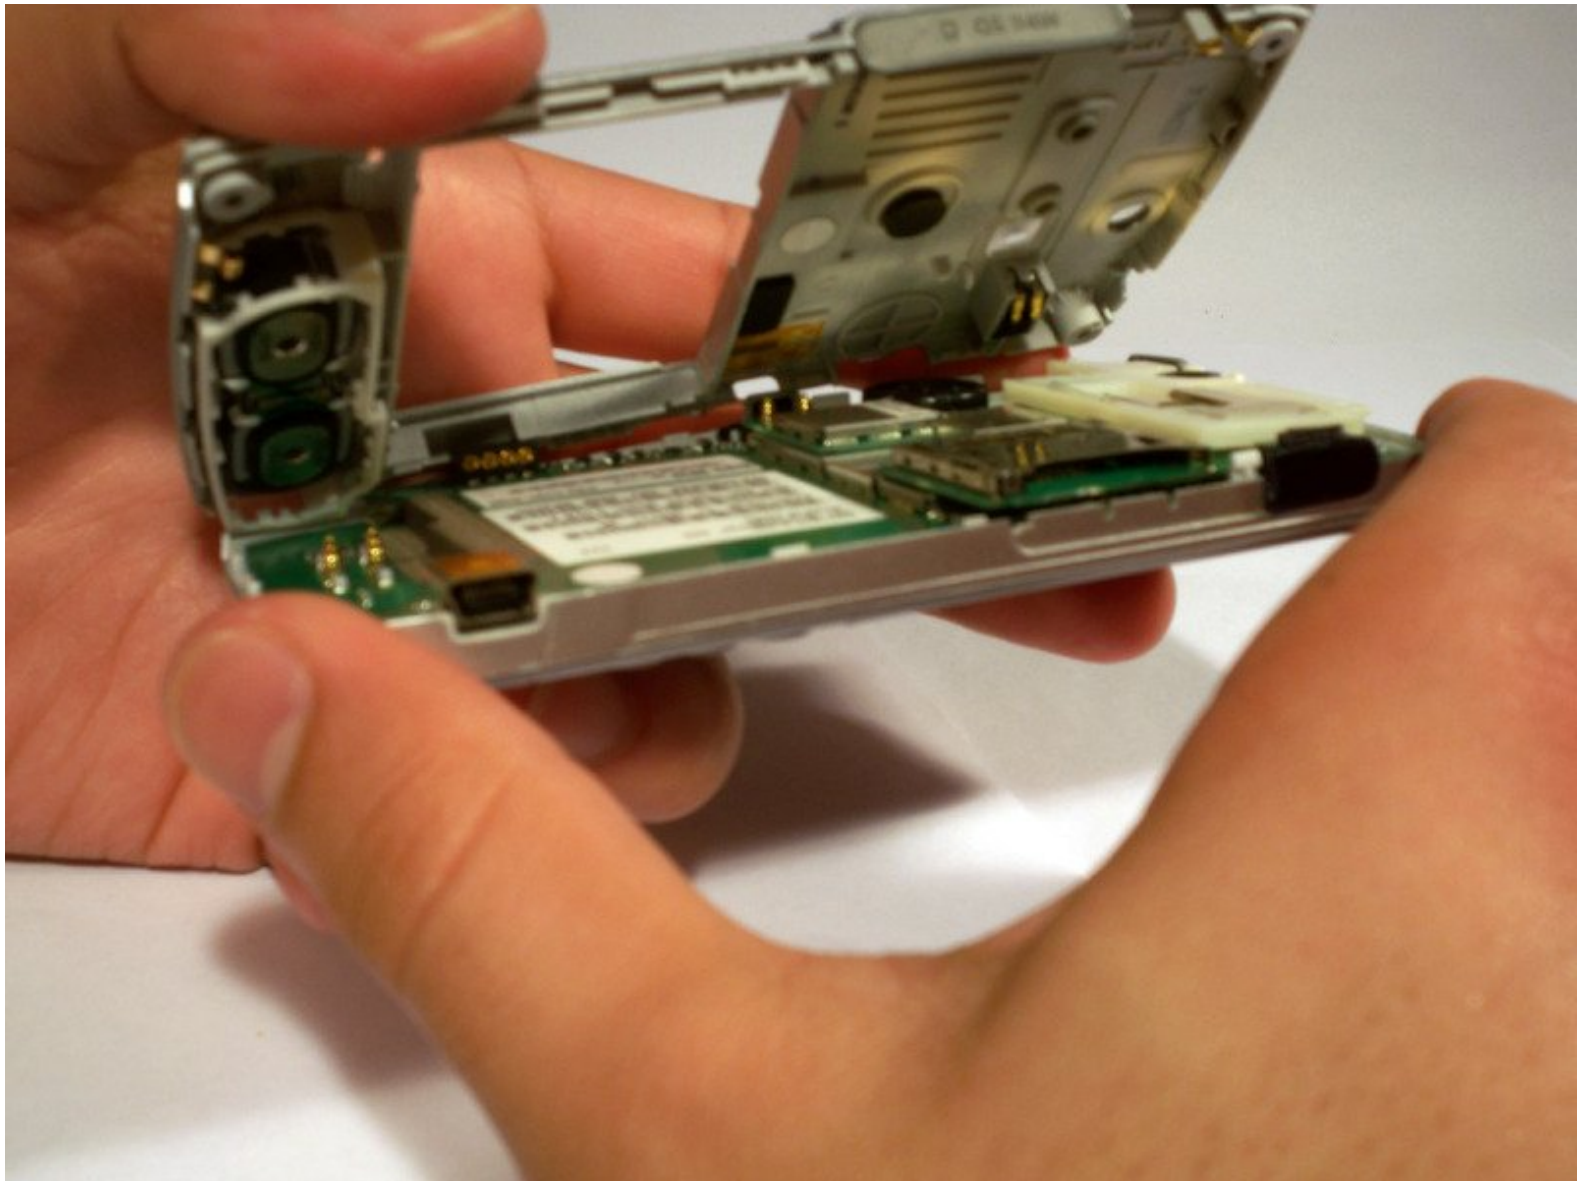

INTRODUCTION

This guide will show you step-by-step how to replace the back casing.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Push Pin](#) (1)
- [T6 Torx Screwdriver](#) (1)



PARTS:

- [Motorola Moto Q Back Casing](#) (1)
- [Motorola Moto Q Replacement Battery](#) (1)

Step 1 — Back Casing



- Use the Push Pin to remove the rubber screw covers by pushing the needle into the rubber and pulling up.

⚠ Be careful not to poke yourself when handling the push pin because it is very sharp.



Step 2



- Use the T6 screwdriver to remove the four screws holding the casing together.


ⓘ Note: they are in the same place where you removed the four rubber coverings

Step 3

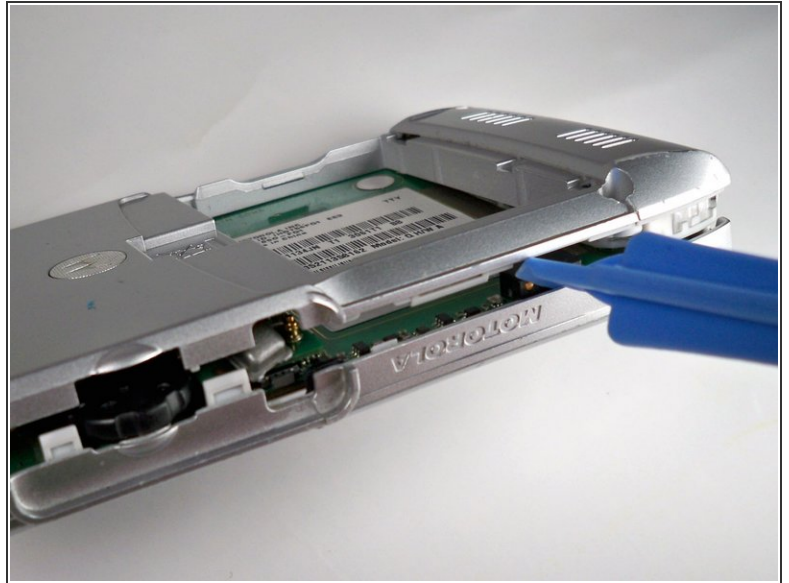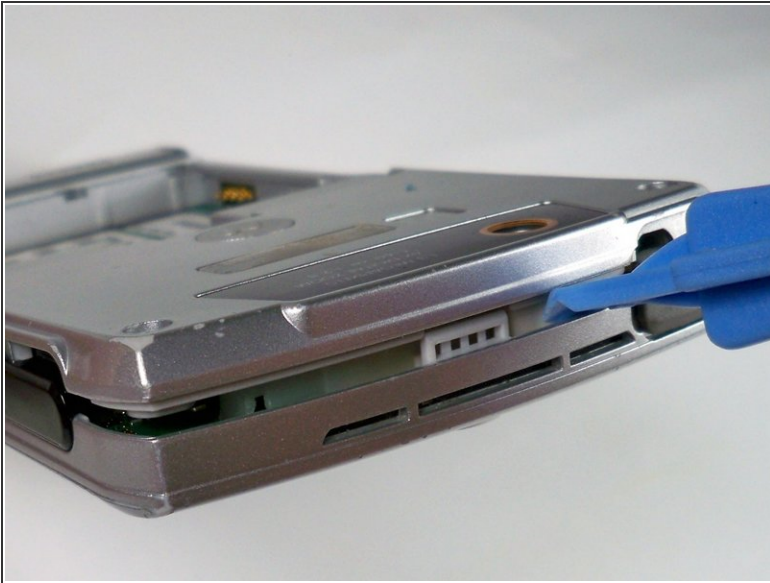

- ⚠ Wedge the plastic opening tool in between the top and bottom casings. This may require a little or a lot of force so be careful.
- i Note: the phone should be face up and the plastic opening tool should be face downwards
 - Once you get the plastic opening tool in, slide it across the side of the phone, making sure to keep the plastic opening tool wedged in between the two casings.
 - Repeat the 3 steps above for the top, bottom, and opposite side.

Step 4

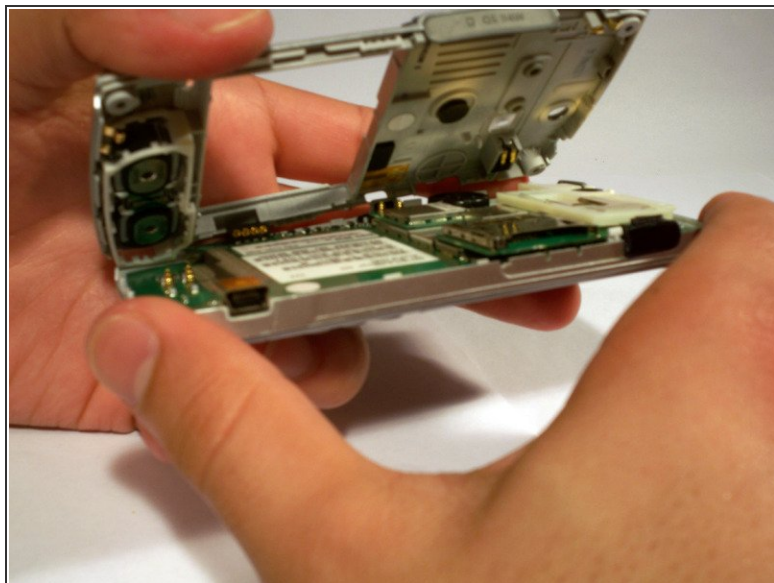

- Gently lift and remove the back casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 07:24:59 PM.