



Huawei Ascend P6-U06 Back Panel Replacement

Learn how to replace the back panel on your Huawei Ascend P6-U06.


Written By: Alison Jones



INTRODUCTION

Follow this guide to replace the back panel on your Huawei Ascend P6-U06.


Step 1 — Back Panel

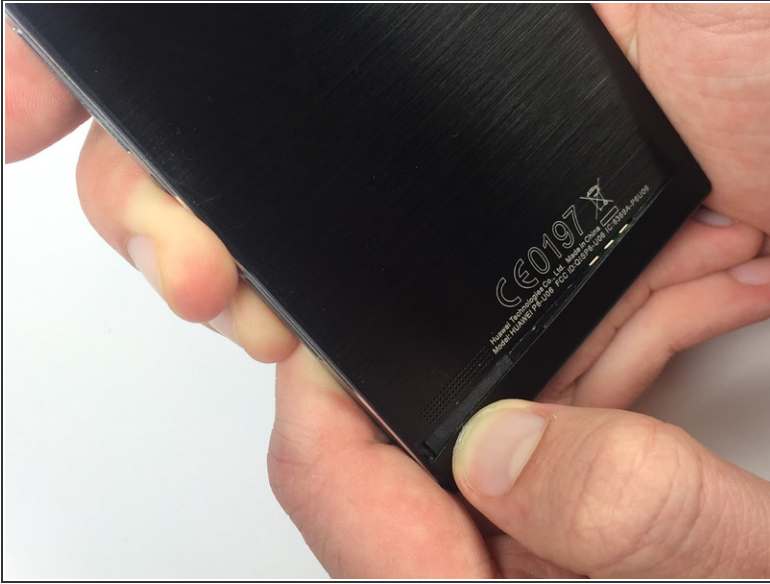

- Firmly push down on the black plastic covering at the bottom of the phone, and pull down.

i You may need a sharp thin object to get underneath the plastic.

Step 2

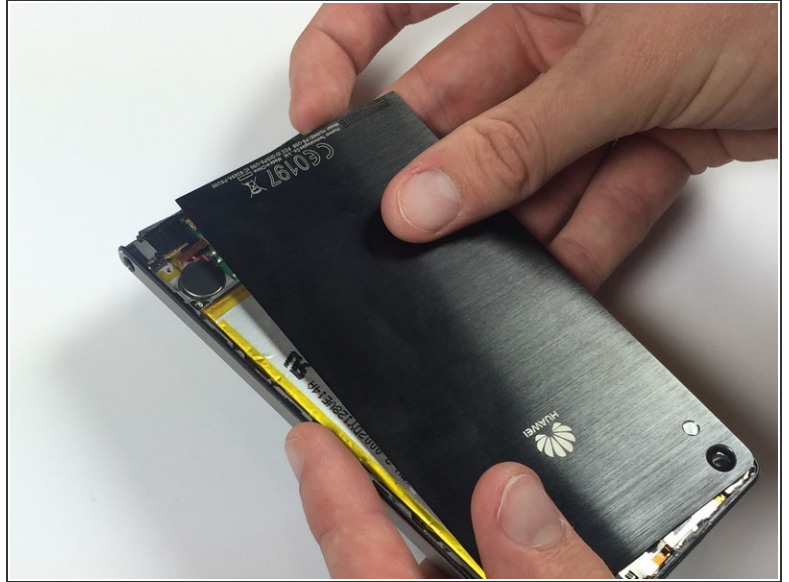

- Rotate the phone 180 degrees so that the bottom of the phone is now facing up.
- Firmly push up on the back panel with your thumbs.
- Lift up the back panel from the top right corner and gently pull it away from the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 11:22:41 PM.