



# iPod 4th Generation or Photo Headphone Jack Replacement

Written By: iRobot



## INTRODUCTION

No audio? Replace the headphone jack!



### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T6 Torx Screwdriver](#) (1)



### PARTS:

- [iPod 4G 20 GB Headphone Jack](#) (1)
- [iPod 4G 40 GB Headphone Jack](#) (1)
- [iPod 4G Headphone Jack Cable](#) (1)
- [iPod Photo 20 30 GB Headphone Jack](#) (1)
- [iPod Photo 40 60 GB Headphone Jack](#) (1)
- [iPod Photo 40 60 GB Headphone Jack Cable](#) (1)

## Step 1 — Rear Panel



**i** Before opening your iPod, ensure that the hold switch is in the locked position. The orange bar should be visible, indicating hold is active.

## Step 2




- Insert an opening pick as far as possible into the seam between the plastic front and the metal rear panel, on the right edge of the iPod.
  - ⓘ You may need to rock the pick back and forth to slide it in farther.
- Use the opening pick to pry up against the plastic front panel and release five retaining tabs (seen in the third photo).
- Slide the pick along the edge of the iPod and continue prying to release the rest of the retaining tabs.
- After all five tabs along the right side are free, the case should easily open.

## Step 3



- ⓘ The iPod case is now open, but don't separate the two halves just yet. There is still an orange ribbon cable connecting the headphone jack to the logic board.
- Open the case like a book with the dock connector edge at the top, and lay the rear panel next to the front half of the iPod.

## Step 4

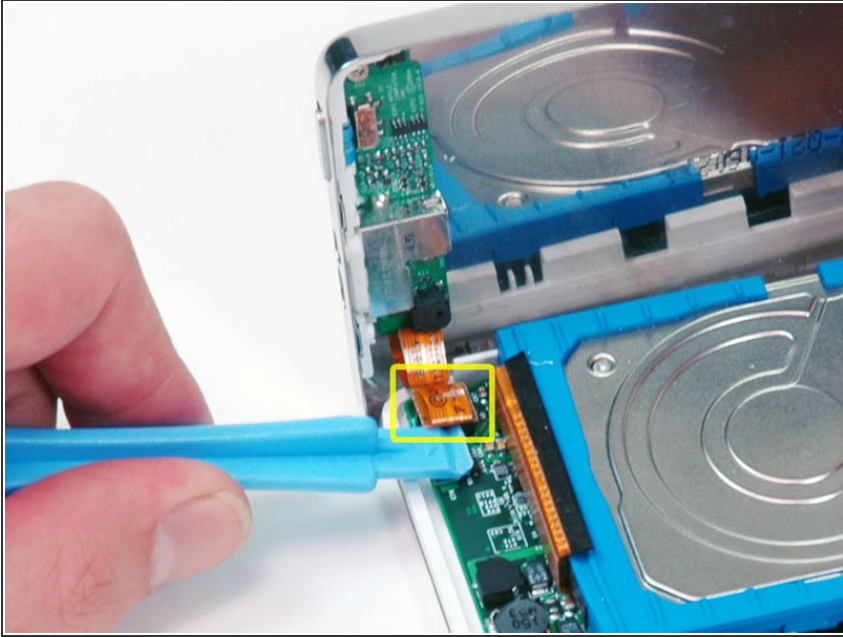


- Use a plastic tool or your fingernails to carefully disconnect the orange headphone jack cable. Be sure to pull straight up on the connector, not the cable itself.

## Step 5 — Headphone Jack




- Remove the 2 silver T6 Torx screws from the headphone jack.

## Step 6

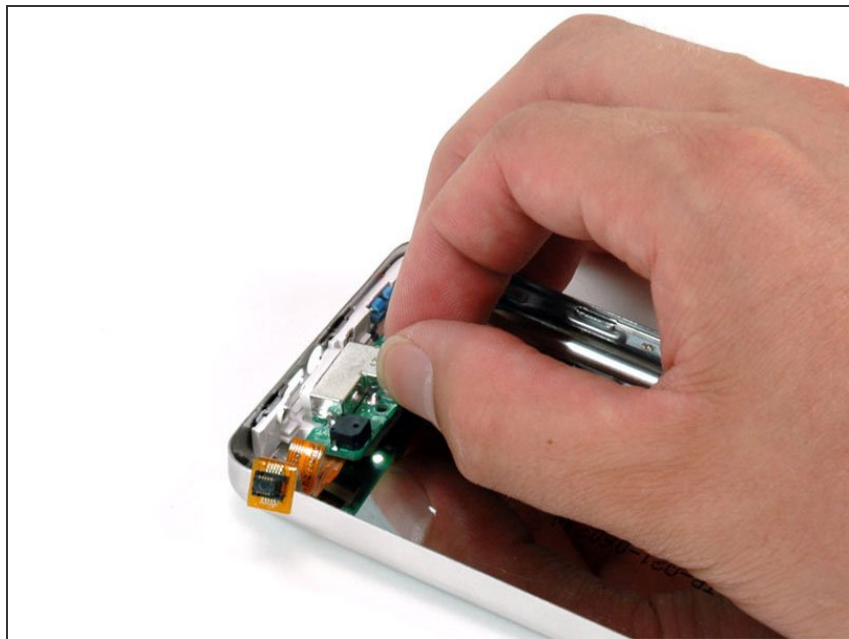


- Grasp the headphone jack board and lift it out of the iPod.

## Step 7

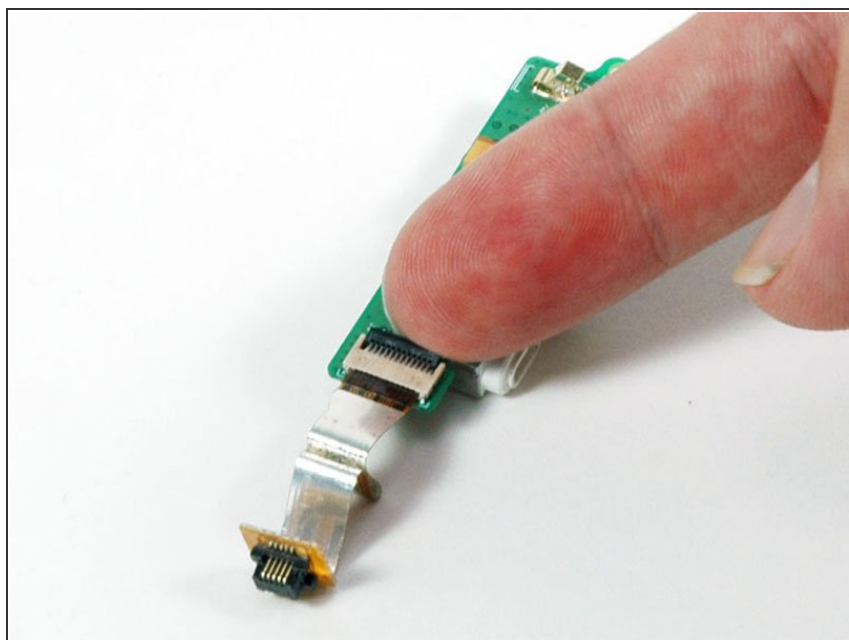

- Turn the headphone jack board over.
- Use the tip of your finger or a spudger to carefully flip up the black connector holding the headphone jack cable connector in place.

## Step 8

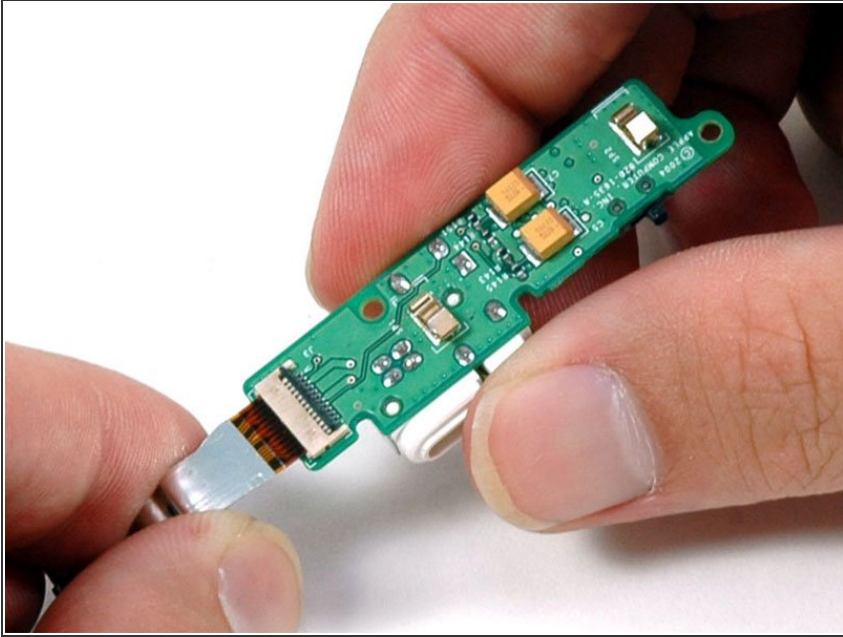

- Pull the orange headphone jack cable directly out of its connector.

To reassemble your device, follow these instructions in reverse order.