



# ZTE Axon Teardown

The whole teardown video of the ZTE new flagship phone AXON.

Written By: Alex Lin



---

## INTRODUCTION

A video step teardown of the ZTE Axon.

---

### TOOLS:


- [Essential Electronics Toolkit \(1\)](#)
-

## Step 1 — ZTE Axon Teardown



- Remove the card tray, upper and lower back covers.

## Step 2

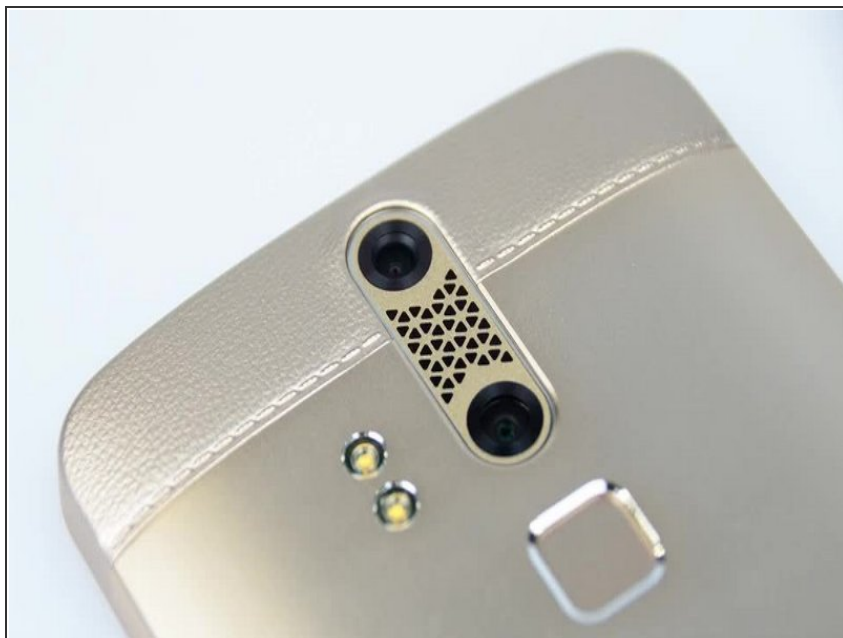


- The back covers and screw locations.

### Step 3



- Remove the screws securing the back housing assembly.

### Step 4

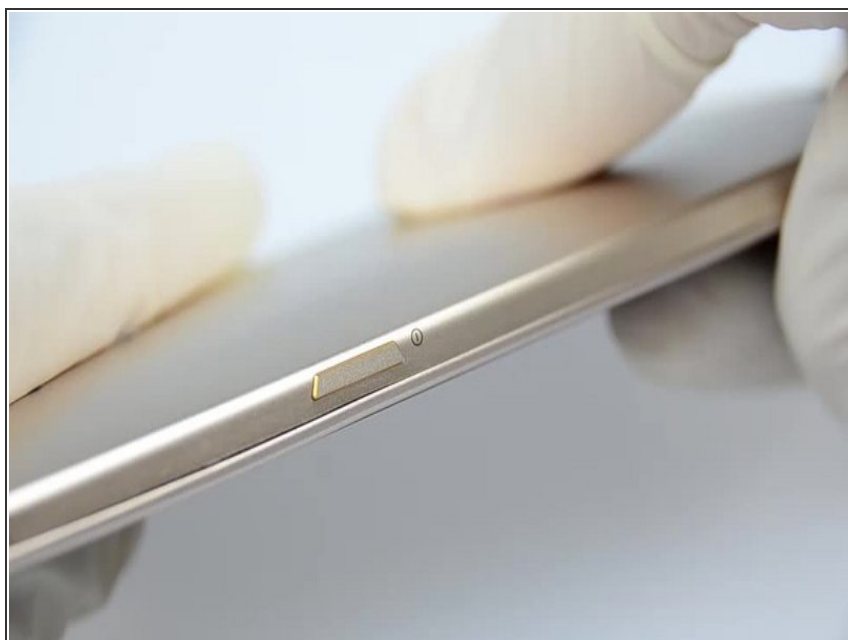


- Open the back housing assembly.

## Step 5




- Remove the back housing assembly.

## Step 6

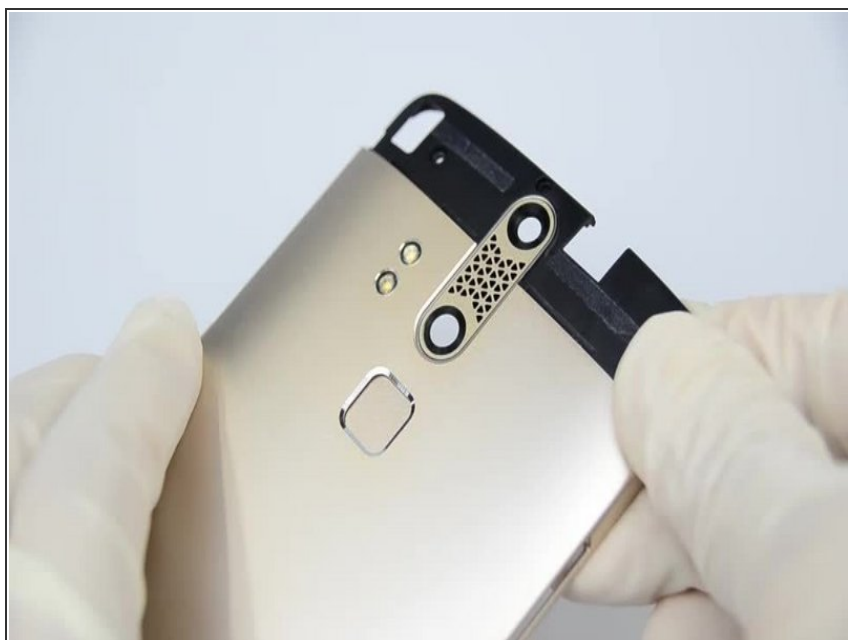

- Remove the fingerprint sensor and flash sub-board.

## Step 7

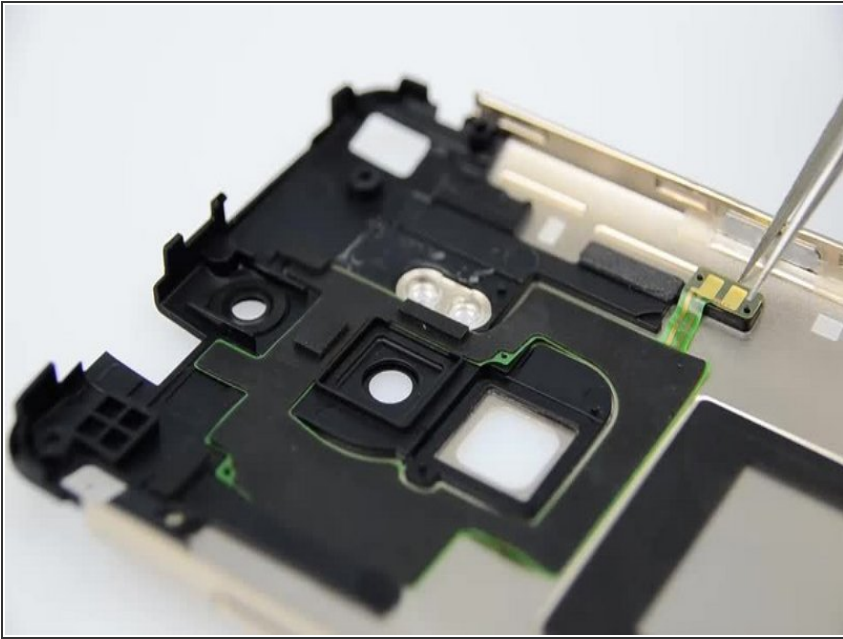

- Remove the NFC sensor.

## Step 8



- Remove the speaker box.



## Step 9



- Free the front camera and disconnect the connectors.

## Step 10



- Free the RF cable and remove the screws securing the mainboard.

## Step 11



- Remove the mainboard. The CPU, RAM and ROM of AXON.

## Step 12



- Remove the earpiece speaker, back camera and vibrator unit.



## Step 13




- Remove the battery.

## Step 14



- The heat pipe radiator. Remove the sub-board.

## Step 15



- Composing of AXON, part 1.

## Step 16



- Composing of AXON, part 2. The end.

This document was last generated on 2019-07-10 04:20:11 PM.