



# Sony Xperia Z1 Compact Screen Replacement

Written By: jaanparker



 **TOOLS:**

- [Heat Gun](#) (1)
- [iFixit Opening Tools](#) (1)
- [Suction Handle](#) (1)

 **PARTS:**


- [Sony Xperia Z1 Compact Display Adhesive Strips](#) (1)

## Step 1 — Apply heat




- Apply heat to the edges.

## Step 2 — Start prying

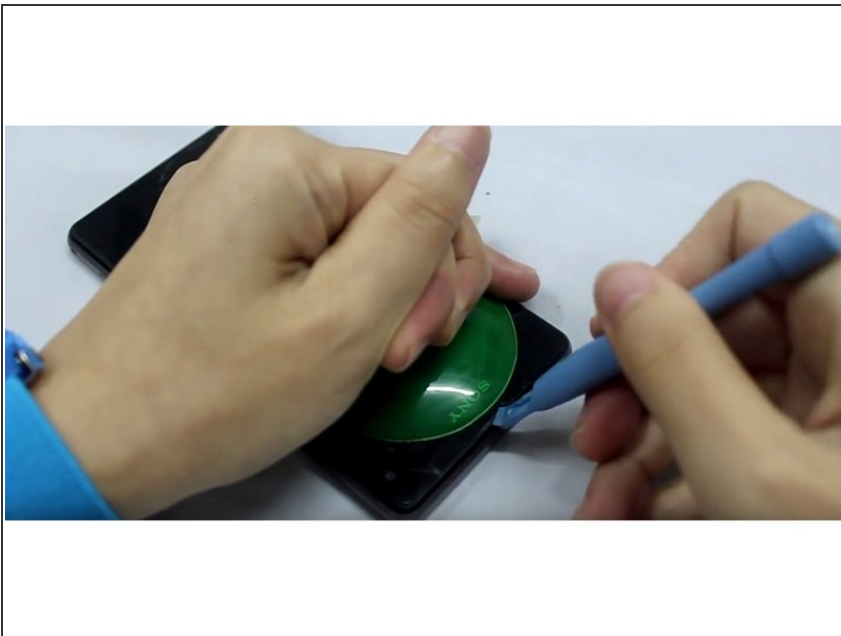


- When the glue is warm slowly start prying from the top corner.

### Step 3 — Add more heat if necessary

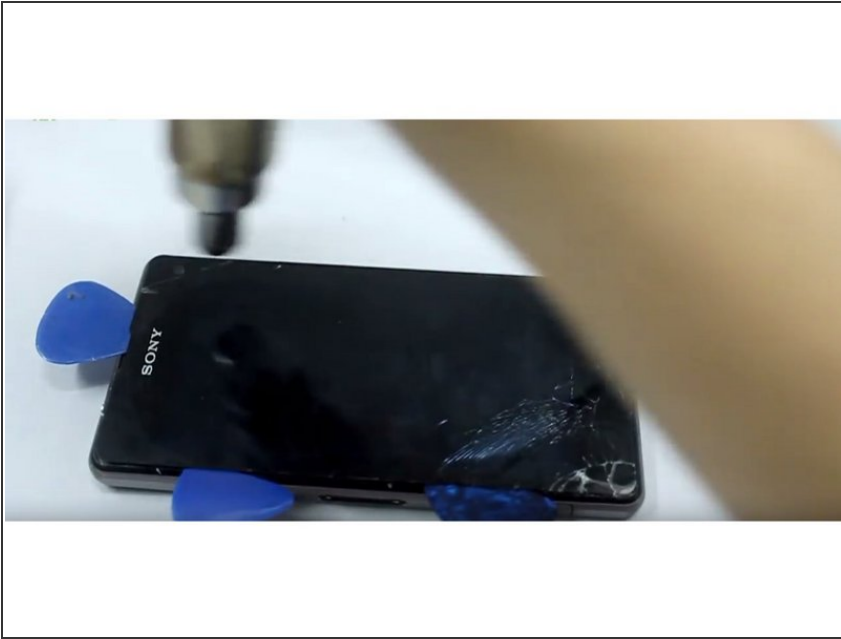

- If the glue is cooled down heat more. Don't force it.

### Step 4 — Cable

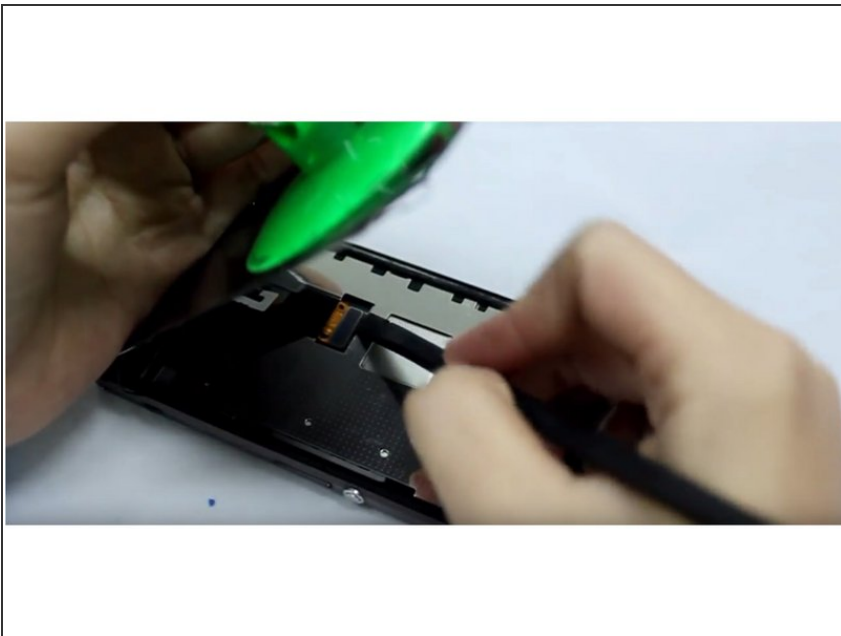

- Remove the data cable from the phones body.

## Step 5 — Testing new screen




- Test if the new screen works properly.

## Step 6 — The tape




- If the screen works, remove the new screen and add the double sided tape

## Step 7 — Connecting new screen

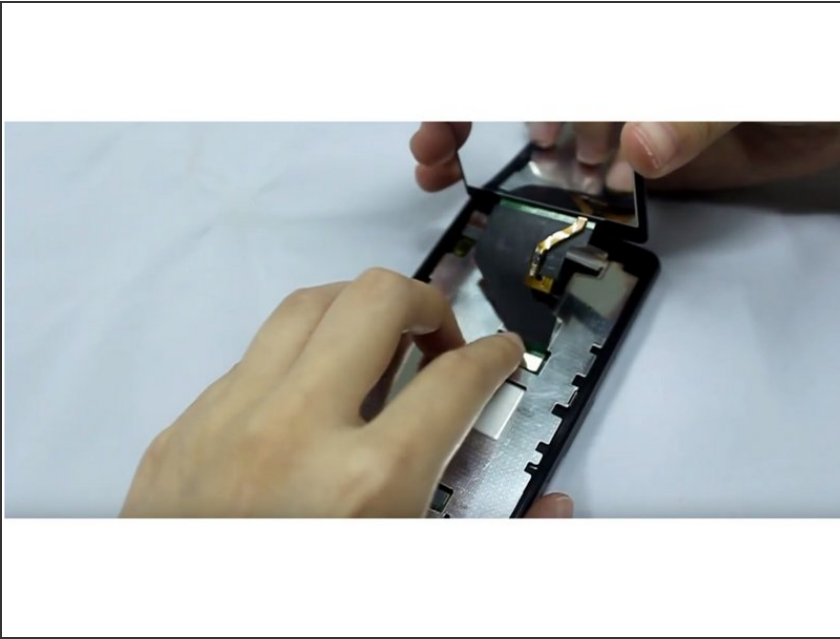

- Connect the new screen to the phone.

## Step 8 — Apply force

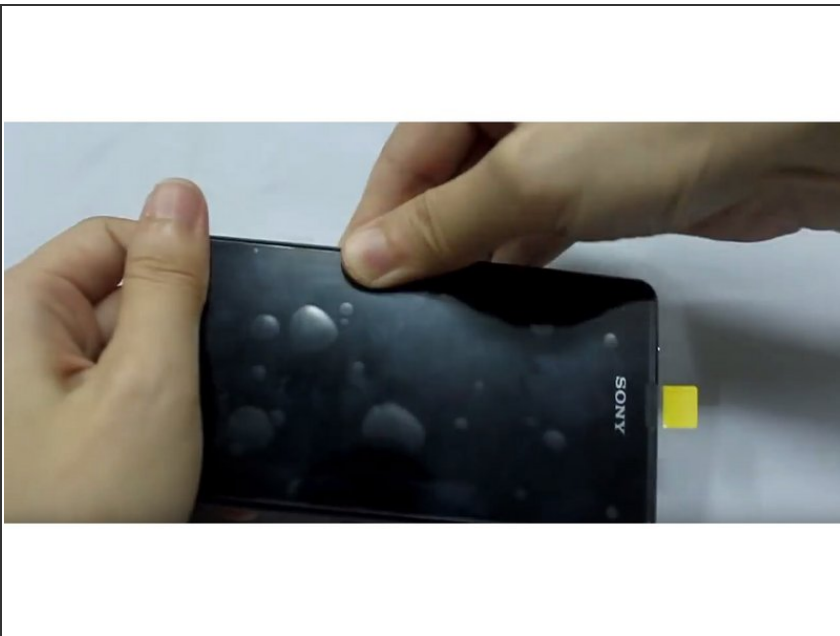

- Now push down not too tight not too softly to the screen.
- And that's it. You finished the screen replacement.

To reassemble your device, follow these instructions in reverse order.