




Canon AE-1 Light Filter Foam Replacement

The steps to removing old foam and then replacing it with new foam.

Written By: Brad

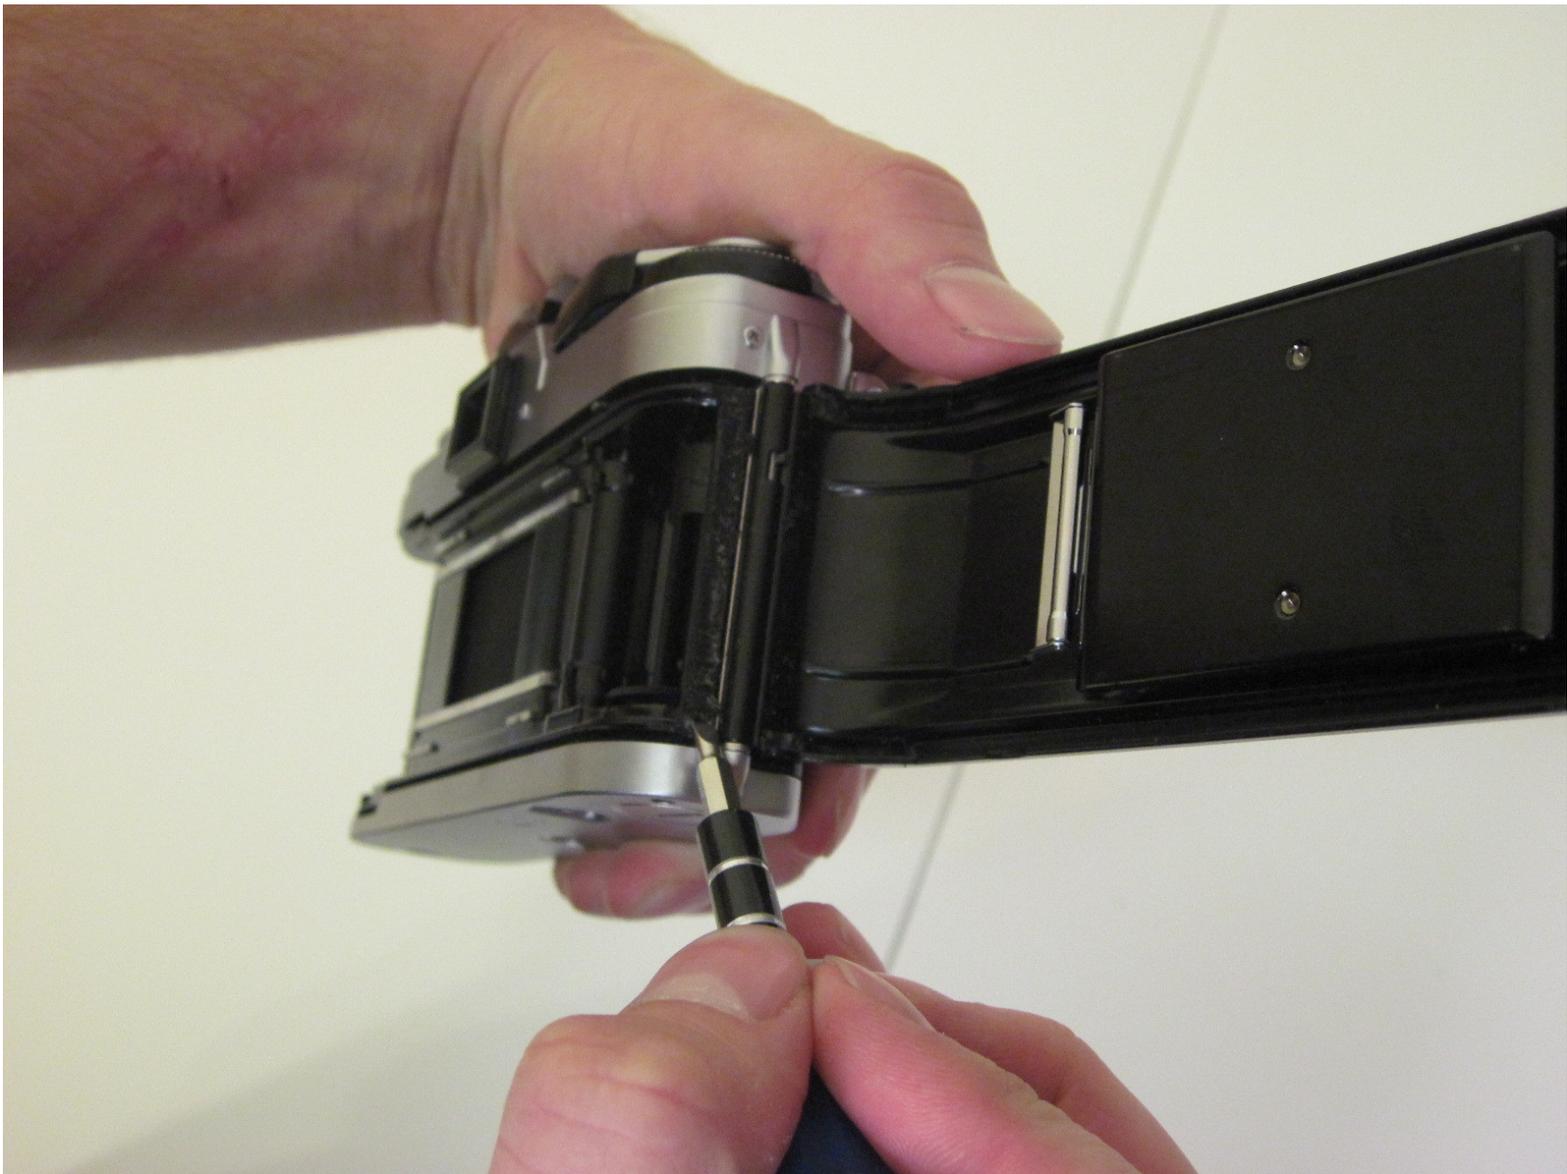

INTRODUCTION

We are removing the old light filter foam and replacing it with new foam. This will help keep light out of the inner case so that it doesn't wreck the film.



TOOLS:


- Flathead 3/32" or 2.5 mm Screwdriver (1)



PARTS:


- Light Filter Foam (1)
-

Step 1 — Light Filter Foam

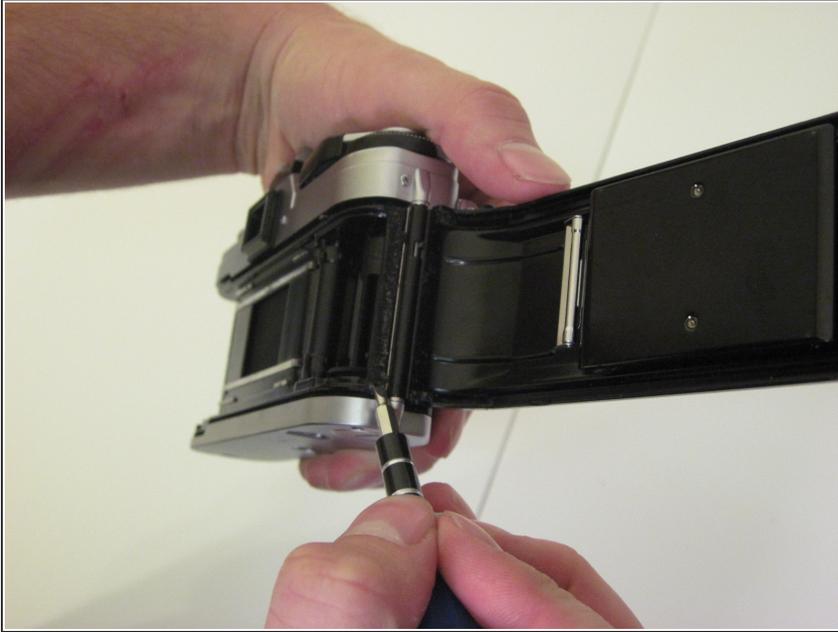

- Open the film compartment
- Use a 3mm slot screw driver to scrape old light filter foam cleanly off

Step 2

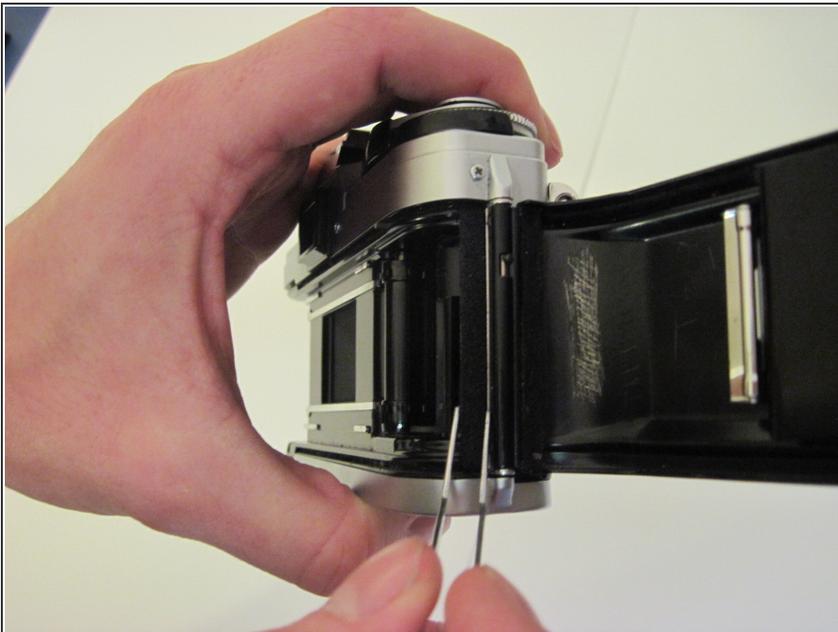

- ⚠ Placing light filter foam improperly could result in light exposure on film.
- Place new strip of light filter foam over old foams location.

To reassemble your device, follow these instructions.

This document was last generated on 2017-07-04 03:11:01 PM.