




iPad 3 4G Headphone Jack Cable Replacement

Internal prereq.

Written By: Walter Galan

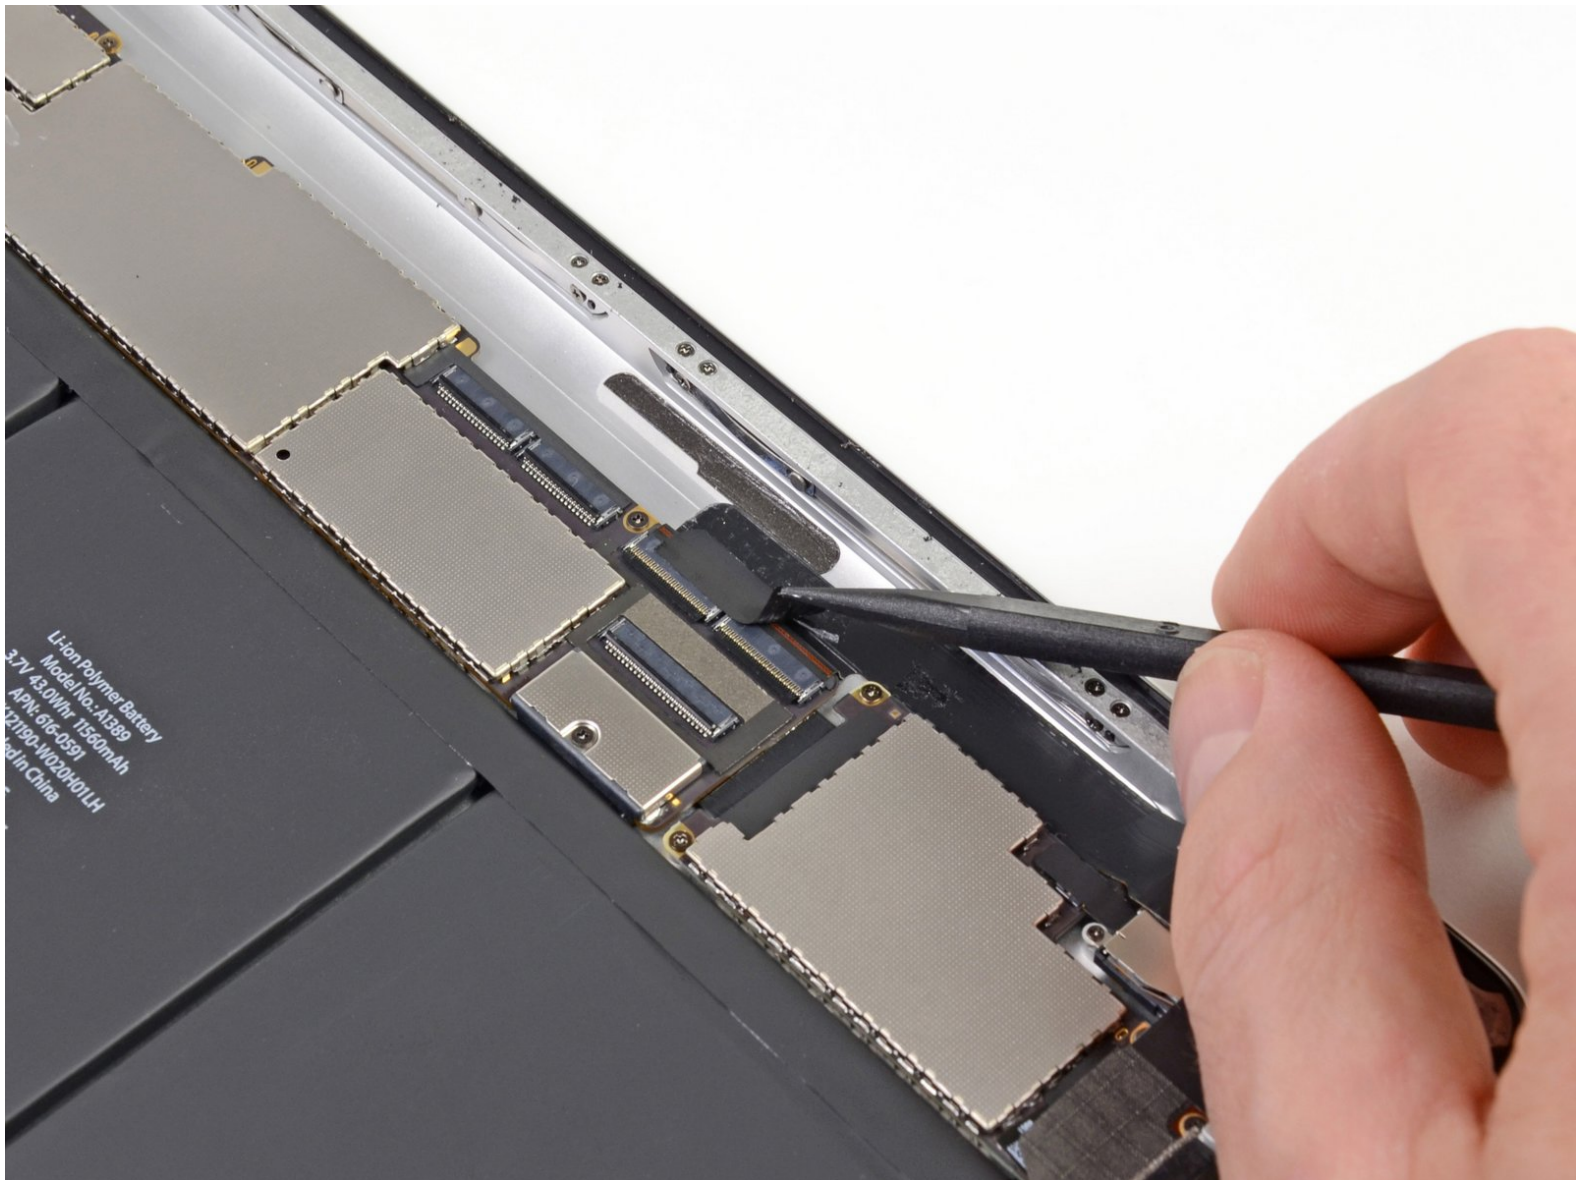


INTRODUCTION

Internal prereq.

TOOLS:

- [Spudger](#) (1)
-

Step 1 — Headphone Jack Cable

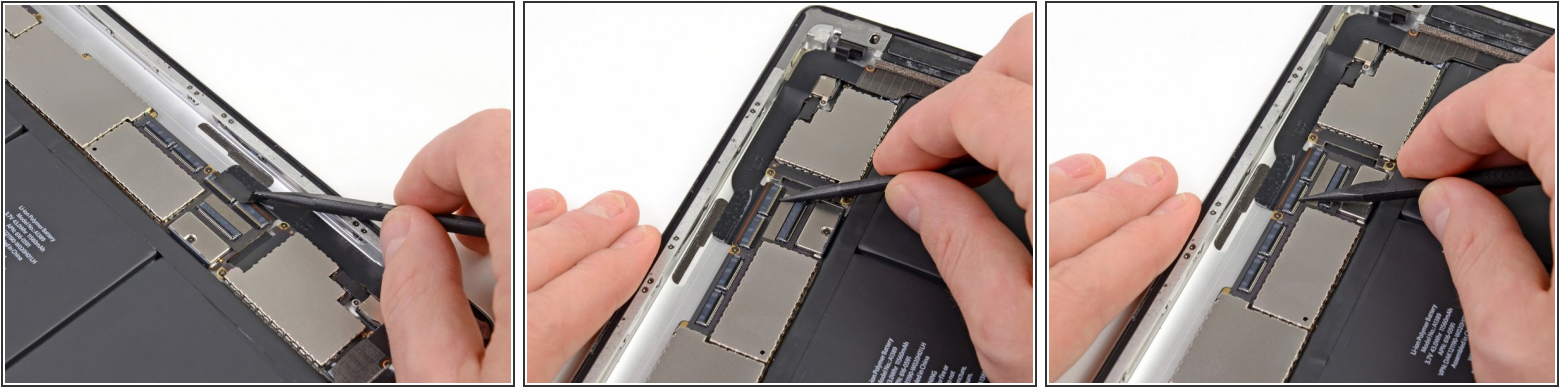

- Peel back and remove the piece of electrical tape covering the headphone jack assembly cable connector.
- Using the tip of a spudger, flip up the retaining flap on both of the ZIF connectors securing the headphone jack cable to the logic board.

Step 2



- Slide the flat end of a spudger underneath the headphone jack assembly cable, releasing the adhesive securing it to the rear aluminum frame.
- Pull the headphone jack assembly cable straight out of its socket on the logic board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-18 10:12:23 AM.