




Sony Ericsson W518a The keypad Replacement

This guide will show you how to install the keypad.

Written By: Leo

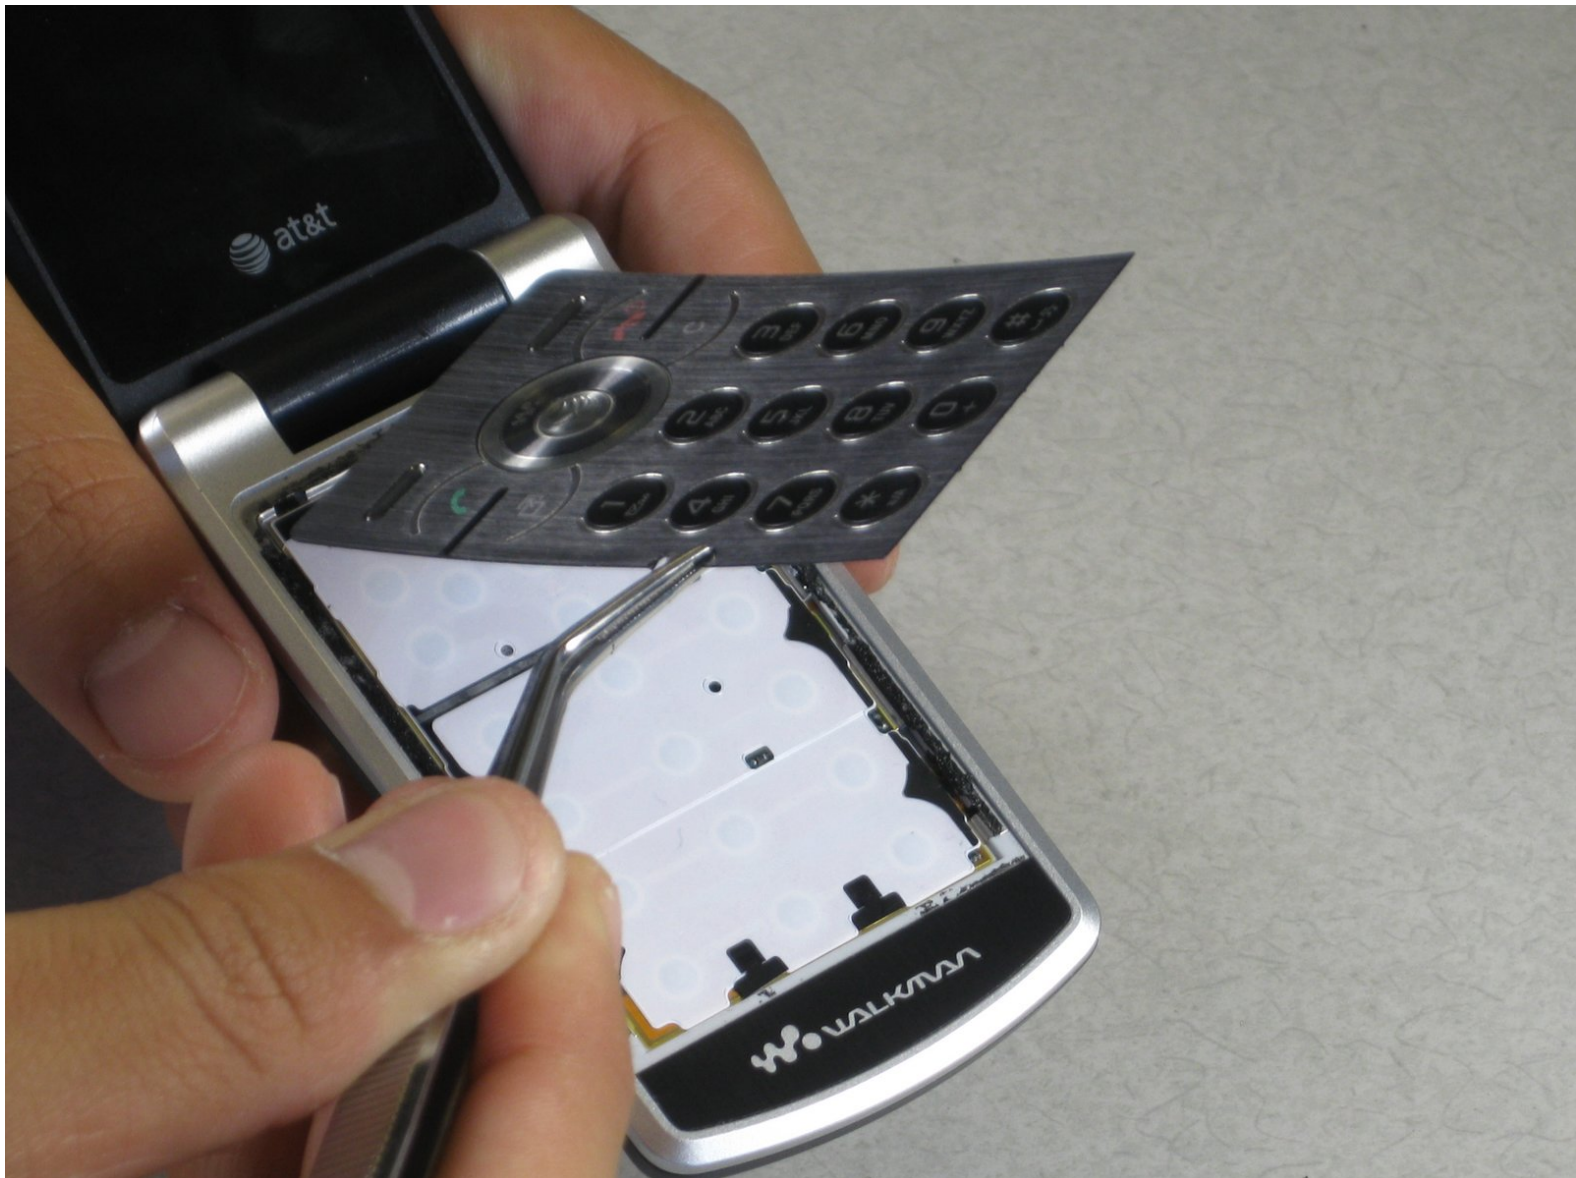

 **TOOLS:**

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — The keypad



- Insert one side of the tweezers into the hole located to the left of the "4" key as shown.

Step 2



- Use the tweezers to pry under the keypad.
- Detach the rest of the keypad by pulling it away from the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-23 08:43:10 AM.