



# Asus Chromebook C202SA-YS02 Palm Rest Replacement

This step-by-step guide will show how to replace the entire palm rest, which is the contraption that includes the keyboard and touch pad.

Written By: Beau Hansen



This document was generated on 2020-01-24 08:06:13 AM (MST).

---

## INTRODUCTION

Removal of the palm rest is a preliminary step in many replacement guides for this device. Also, if your keyboard is damaged and needs replaced, it might be easiest to replace the entire palm rest.

---

### TOOLS:


- [Phillips Head Screwdriver: Size PH1](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Palm Rest




- Turn device over. Unscrew and remove the ten Phillips #1 8.0 mm screws.

## Step 2

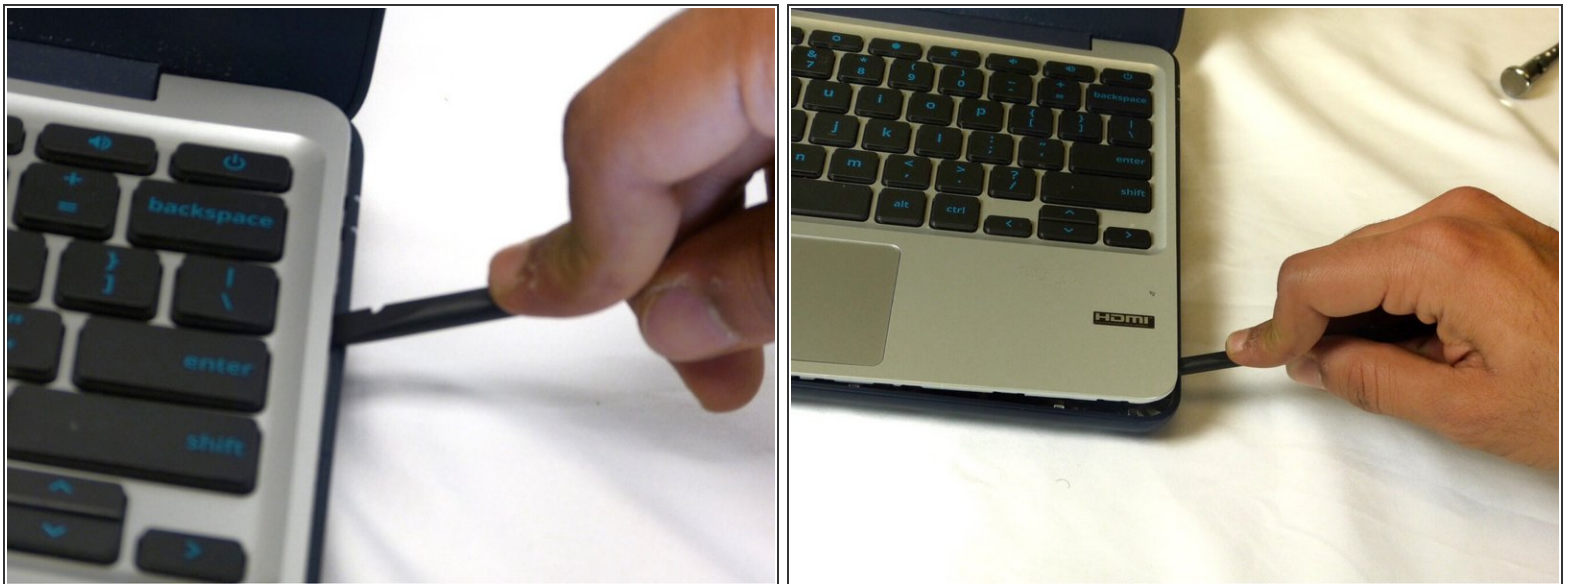

- Carefully use the plastic opening tool to pry palm rest apart from bottom cover. Start from one spot and systematically work your way around until the whole palm rest is detached.

## Step 3

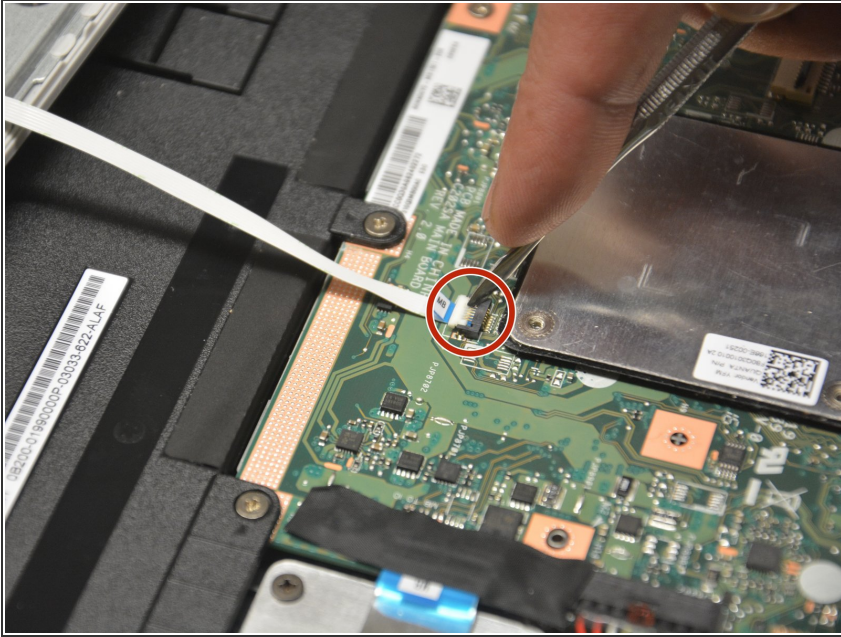

- Disconnect the two cables that run from the keyboard to the motherboard and from the touch pad to the motherboard. You may have to use a thin blade or spudger to lift open the respective latches.

To reassemble your device, follow these instructions in reverse order.