



HP Stream 13-c002dx Battery Replacement

This guide will show you how to replace the battery in a HP Stream 13-c002dx to bring power back to your laptop.

Written By: Matthew Dodge



INTRODUCTION

This guide includes laptop disassembly to gain access to the internal components and battery replacement.

TOOLS:

- [Metal Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

PARTS:

- [HP Stream 13-c002dx Replacement Battery](#) (1)

Step 1 — Keyboard




- Begin by placing your laptop on a clean surface such as a table and away from any liquids which may spill and damage components.
- Flip the laptop over so the bottom is facing up and use your Philips #0 screwdriver to remove the 11 visible 5mm screws on the back.
- Remove the rubber feet on the bottom of the laptop closest to the screen hinge to gain access to the remaining 2 5mm screws. Keep these screws separate from the first 11.

Step 2




- Flip the laptop back over onto its normal side up and raise the screen. Using the metal spudger, separate the keyboard surface from the bottom of the laptop.
- While lifting the keyboard surface from the bottom, you will notice 3 cables still attaching them together. Gently unplug each of these cables from the motherboard.
- ⓘ With the screen and keyboard parts of the laptop removed, you have access to the laptops internal components.

Step 3 — Battery

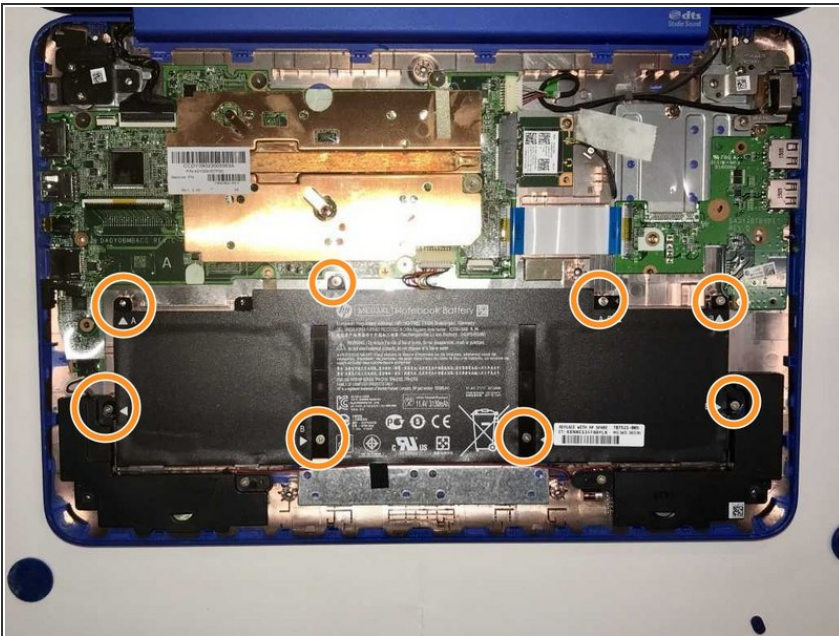

- You will notice various screws in the battery with letters A or B next to them. Using your Philips screwdriver, remove each of these 5mm screws and keep the A and B screws separate for reassembly.

Step 4

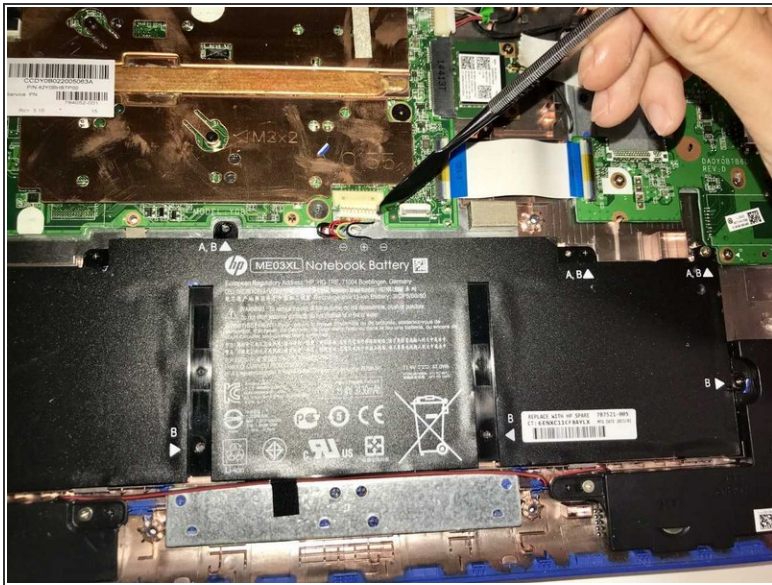

- Coming from the upper middle of the battery, there are cables which connect the battery to the motherboard. Gently remove this group of cables from the socket that it is in on the motherboard.
- Now lift the battery out and are ready to insert the replacement battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-17 01:43:57 AM.