



# Acer Aspire 5534-1146 Screen Replacement

Screen Replacement on Acer Aspire 5534-1146.

Written By: Trysten buckley



## INTRODUCTION



This repair guide will give you a step-by-step procedure on how to replace the screen on your Acer Aspire 5534-1146 device.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Screen

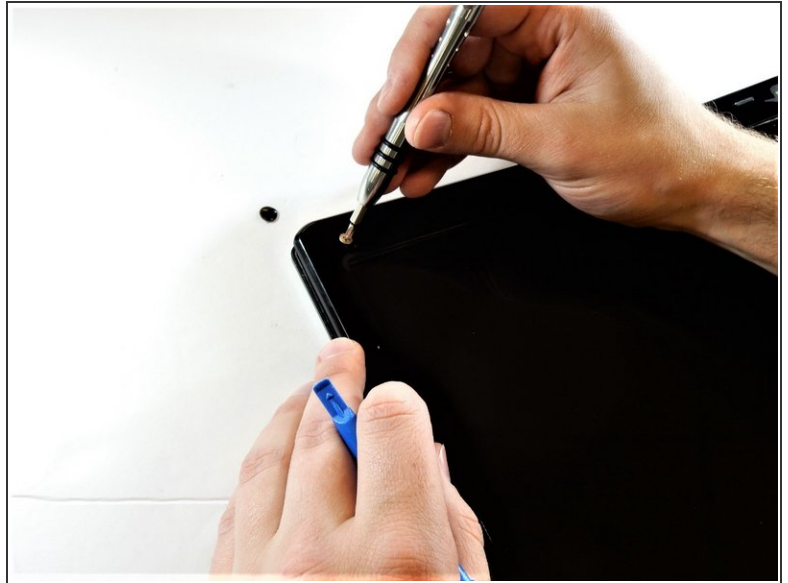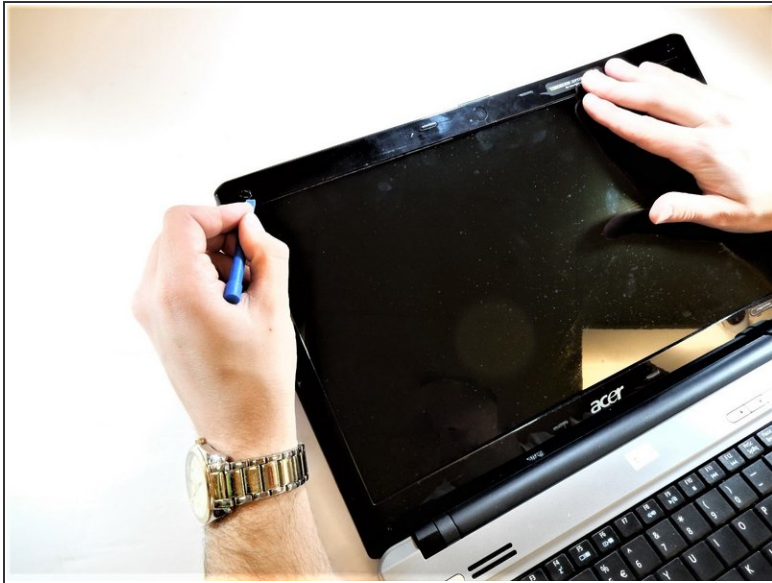


- Use the blue spudger to remove the 4 rubber supports from each corner of the screen.
- After use a PH0 screw bit to remove the corresponding screws underneath.

## Step 2

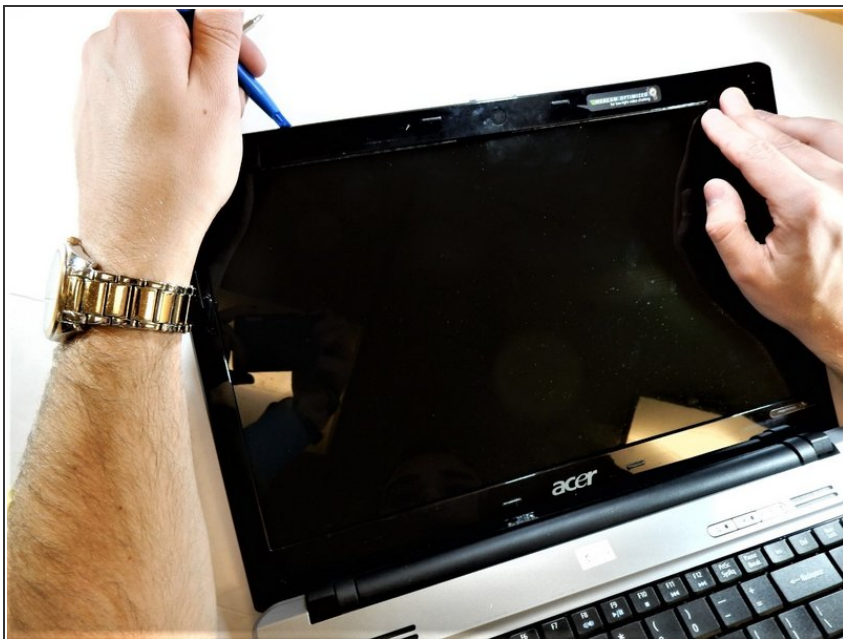

- Use a plastic opening tool to carefully release the plastic clips that hold the plastic frame to the back cover.

 Be careful while handling the bottom, there are cable connections and you don't want to damage them.



### Step 3



- Gently disconnect the camera cable.

### Step 4




- Remove the 4 screws in the corners underneath the plastic frame that was removed. Screen should then be able to come off the frame.

## Step 5



- Take the screen lay it face down on top of the keyboard.
- Unplug the cable that is connected to the video card.
- ⚠ This cable may be taped down to the back of the screen, if necessary lift the tape gently.

## Step 6

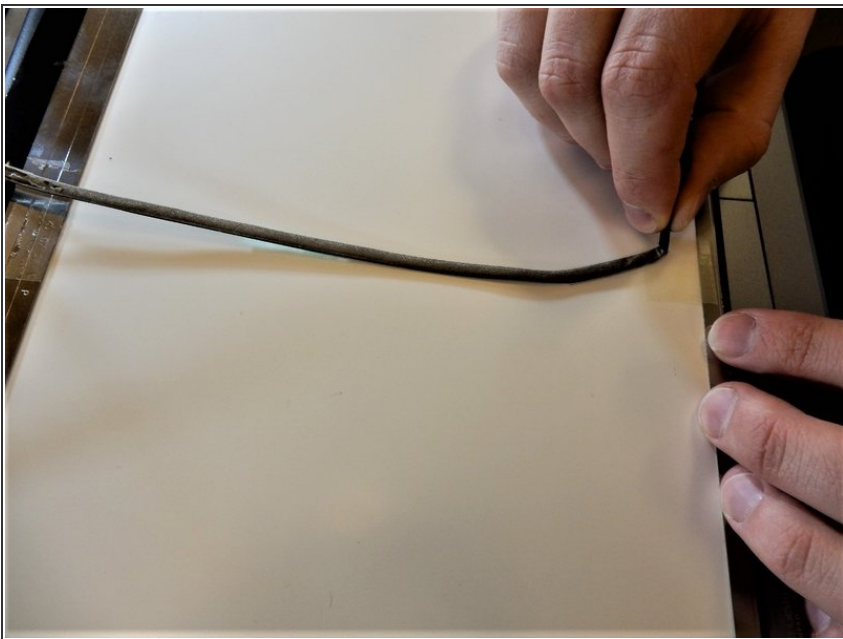

- Remove the tape, and unplug the display cable on the back of the screen.
- Pull the tape off of the cable from the back of the screen, and now the screen should be free to come off. You are now ready to install a new one.

To reassemble your device, follow these instructions in reverse order.