



Lenovo Legion Y530-15ICH Battery Replacement

How to replace the battery in a Lenovo Legion Y530-15ICH.

Written By: Kaylie Klausing



INTRODUCTION

If your Lenovo Legion Y530-15ICH isn't powering on or holding a charge then you should use this guide to replace the battery.

The battery provides power to the rest of the computer. If your computer won't power on, you may [have a faulty power cord or just need to restart your computer](#). Your problem may be due to a faulty battery or your battery may also be [swollen](#).

Please make sure the laptop is powered off completely and unplugged before beginning.



TOOLS:

- [iFixit Opening Picks set of 6](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Lenovo Legion Y530 Replacement Battery](#) (1)

Step 1 — Back Cover




- ⚠️ Ensure the device is powered off.
- Use a PZ00 screwdriver bit to remove the eleven screws securing the back cover.
 - Five 7 mm screws
 - Six 4 mm screws

Step 2



- Carefully pry the back cover off the computer using an opening pick.
- ⓘ Start at the corner of the laptop and work your way around the side. Gently pull up on the cover until it detaches.

Step 3 — Battery

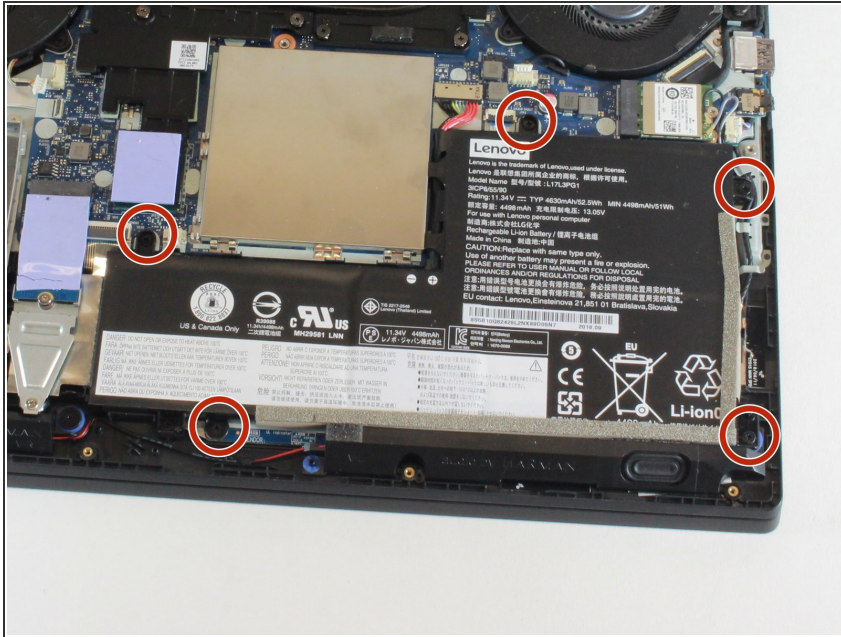

- Use a Phillips screwdriver to remove the five 4 mm screws holding the battery in place.

Step 4



- Disconnect the battery cable from its motherboard socket by gently pulling it towards the battery.
 - ⚠ Pull parallel to the battery, not straight up.
- ⓘ Now you can safely remove the battery.

To reassemble your device, follow these instructions in reverse order.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.