



# iBook G3 14" Keyboard Replacement

Written By: iRobot



## INTRODUCTION

Replacing this keyboard is easy and takes only a few minutes.



### TOOLS:

- [Coin](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)



### PARTS:

- [iBook G3 12" Keyboard \(Short tab\)](#) (1)

## Step 1 — Battery




- Use a coin to rotate the battery locking screw 90 degrees clockwise.
- Lift the battery out of the computer.

## Step 2 — Keyboard




- Pull the keyboard release tabs (highlighted in red) toward you and lift up on the keyboard until it pops free.
- If the keyboard does not come free, use a small flathead screwdriver to turn the keyboard locking screw 180 degrees in either direction and try again.
- Flip the keyboard over, away from the screen, and rest it face-down on the trackpad area.

### Step 3

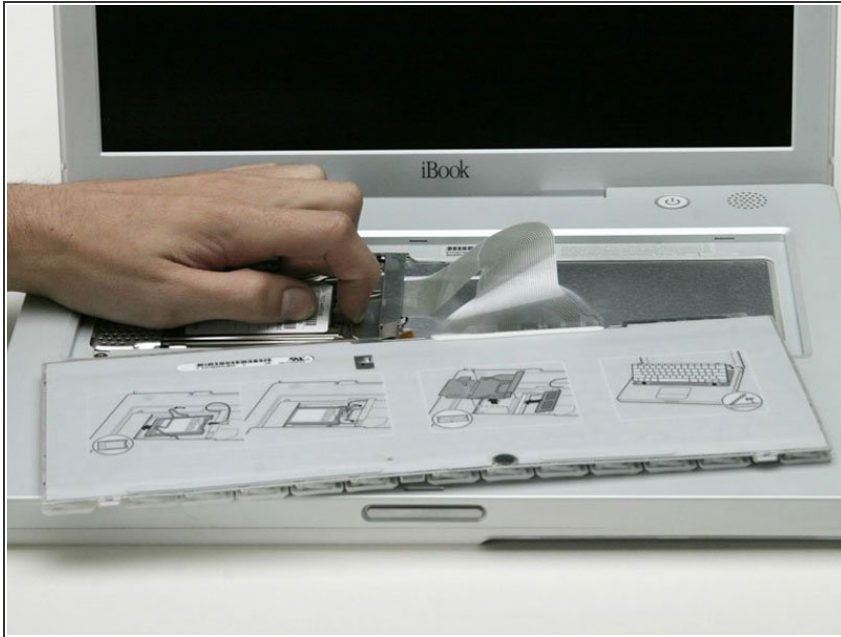


- **i** If your computer does not have an AirPort card installed, skip to the RAM shield removal step.
- Push the wire clasp toward the AirPort card and pull it up to free it from the RAM shield.

### Step 4

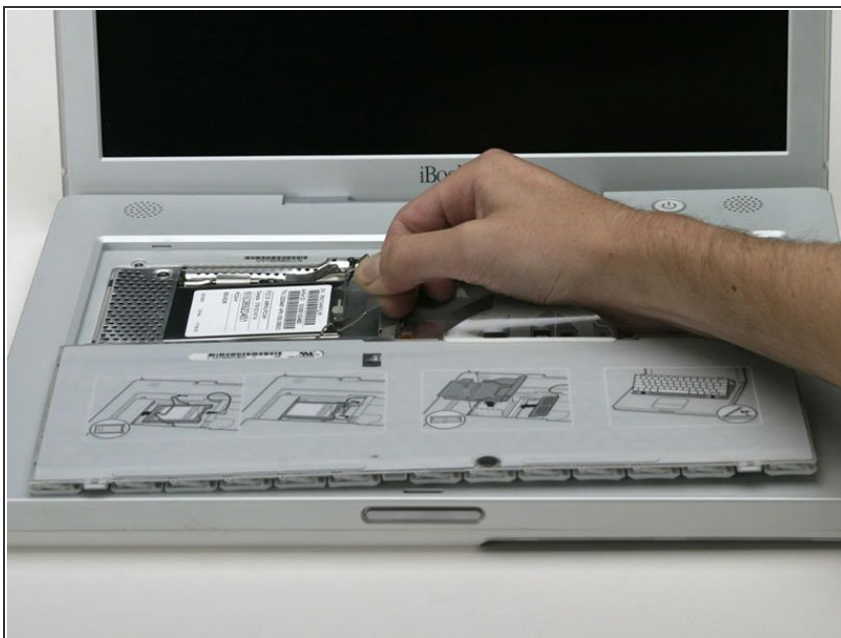


- Grasp the clear plastic tab on the AirPort card and pull toward the right.

## Step 5

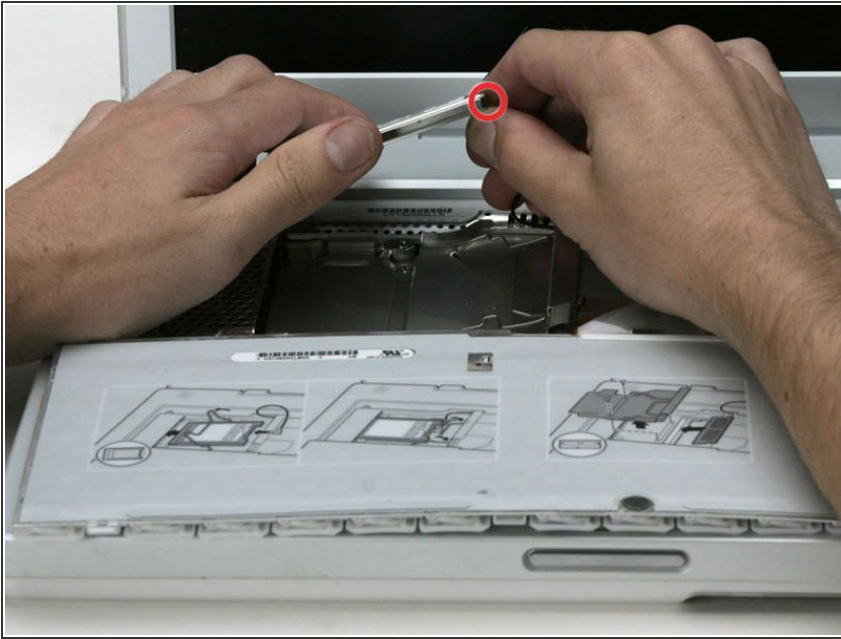

- Hold the AirPort card in one hand and use your other hand to remove the antenna cable.


## Step 6

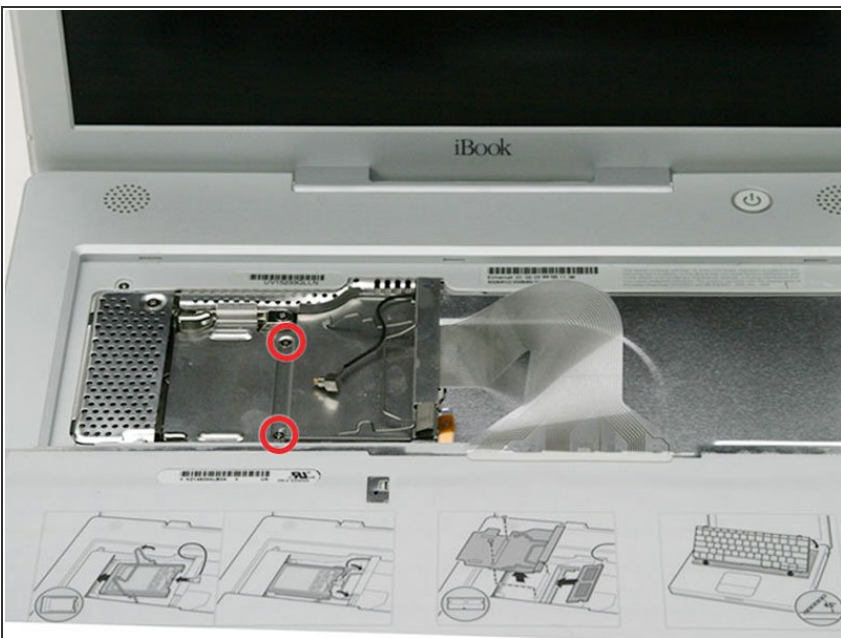

- Remove the two Phillips screws that secure the RAM shield.




## Step 7

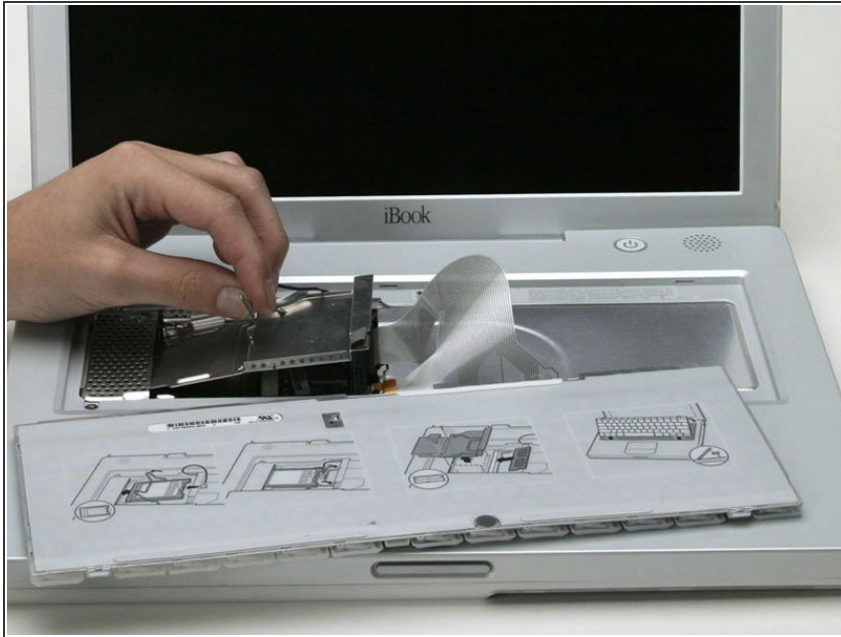

- Grasp the metal bracket on top of the RAM shield and pull upward to remove the shield.

## Step 8

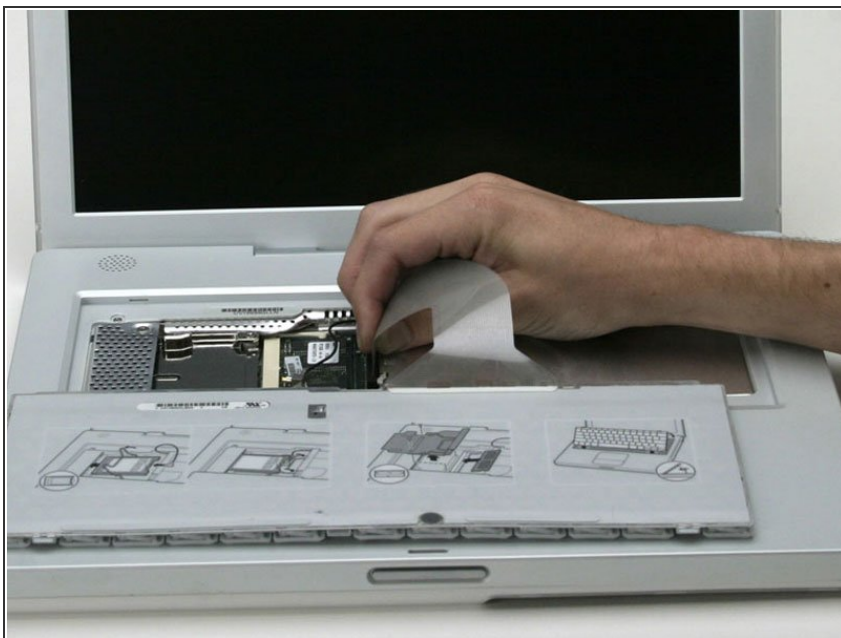

- Pull the keyboard cable up from the logic board, holding the cable as close to the connector as possible.

To reassemble your device, follow these instructions in reverse order.