



Nokero N222-Huron Colored Lens Replacement

Changing the colored lens adapts the solar light to various situations.

Written By: Vinny Capone



INTRODUCTION

Follow this guide to replace or change the colored lens inside of your Nokero N222-Huron in order to adapt the solar light to various situations.

Step 1 — Clear Cover



- Grasp the clear cover and the white housing and twist the cover counter-clockwise.
- ⓘ The lid may hold fast, but it will come off with some firm twisting.

Step 2




- Lift the lid from the device
- ⓘ It may be helpful to use a spudger to pry under the lid if there is difficulty in getting a good grip on the smooth plastic.

Step 3 — Colored Lens



- Turn the lens until the slots line up with the retaining clips on the device.
- Lift the lens off of the device. It should come off easily.

Step 4

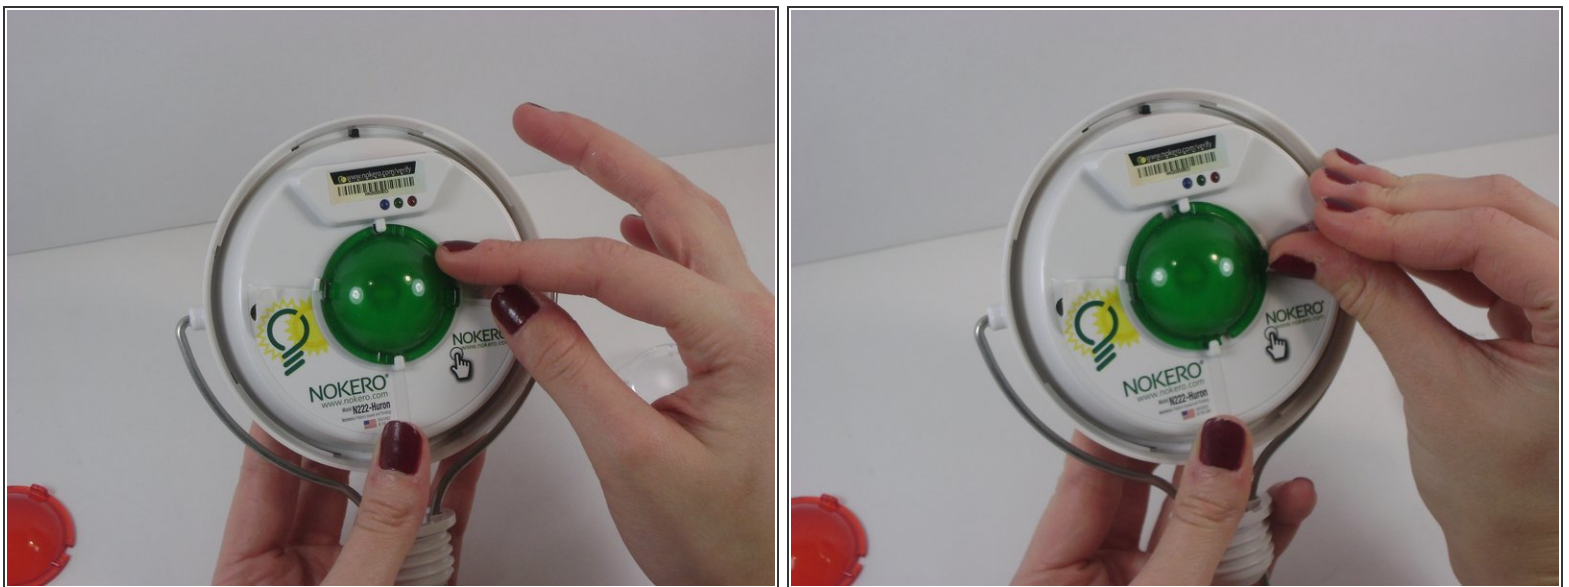

- ☑ When reinstalling the lenses, line up the slots of the new lens with the retaining clips, and rotate the lens counter-clockwise.
- ⓘ You will hear an audible click when the lens is locked in place.

To reassemble your device, follow the instructions for the first two steps in reverse order.

