



4Sight 9 Cover Replacement

Prerequisite Guide-Only. This guide will demonstrate how to remove the cover of the tablet.

Written By: Hali Ramirez



INTRODUCTION

To remove the cover of the tablet you will need a plastic prying tool and 1mm Phillips Screwdriver. Be sure to allot roughly 2-3 minutes for the process. If you don't have a plastic prying tool, your fingers should suffice.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Cover




- Take tablet and rotate on its side, so that the two screws are facing upward.
- Use Phillips #00 Screwdriver to remove two 1mm screws on the left side of the tablet.

Step 2



- Insert plastic prying tool and pry back case away from the device slowly moving the plastic prying tool along the device.
- ⓘ Once loosened, use hands to help separate case from device.

Step 3

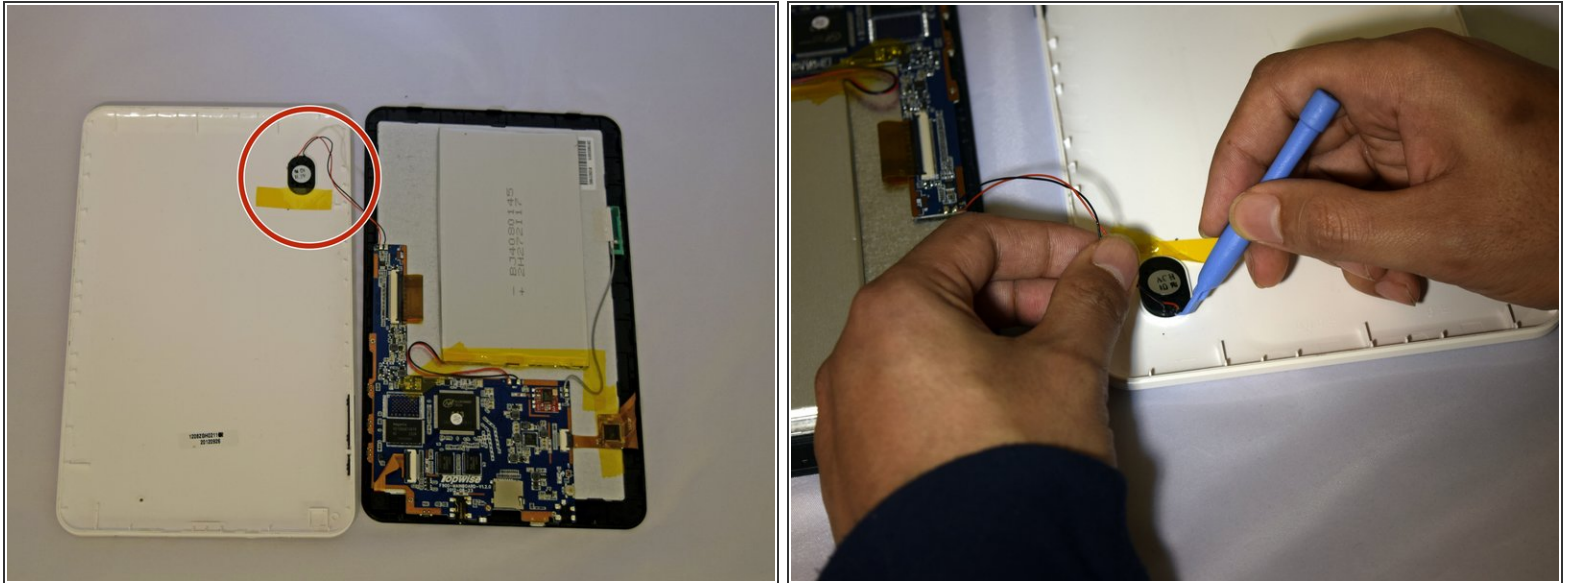

- Hold positive and negative wires as close as possible to the speaker.
 - Use plastic prying tool and fingers to simultaneously lift speaker from cover.
- i** Set cover aside.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-12 12:48:34 PM.