



Braun Cruzer 6 Type 5417 Battery Replacement

Disassemble trimmer and change batteries in the Braun Cruzer 6 - Model: 5417


Written By: Zweikeks



INTRODUCTION


Use this guide to remove and replace the batteries in the Braun Cruzer 6 - Beard and Hair Trimmer, Model: 5417

Step 1 — Braun Cruzer 6 Type 5417 Battery Replacement

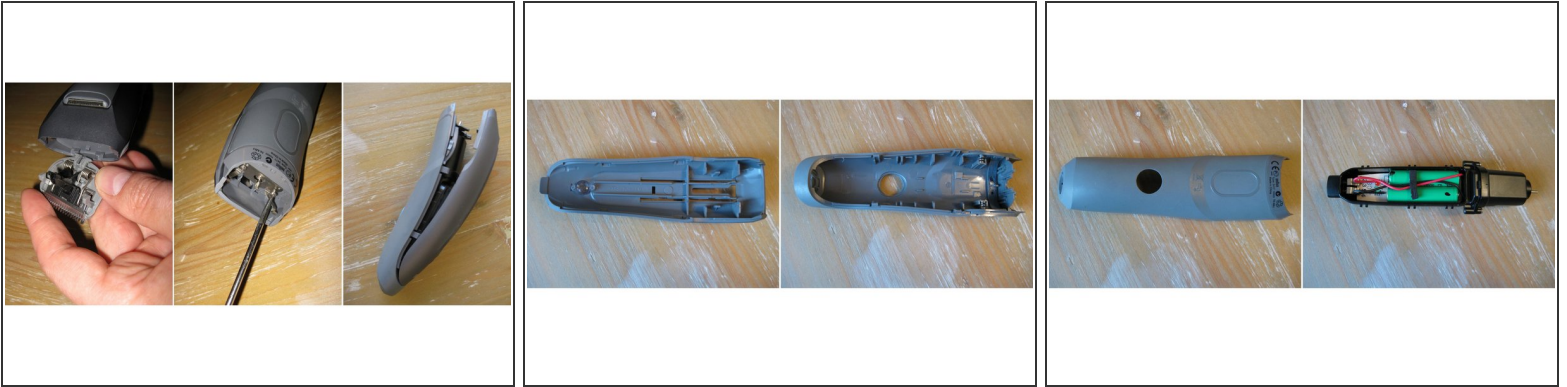

- Remove the trimmer head.
- Remove the two screws with a Torx T5 or slotted screwdriver with which the cover is attached to the handpiece.
- Remove the cover.
- Now is a good opportunity to clean the inside of the device. Hair can interfere with the contacts of the battery.

Step 2

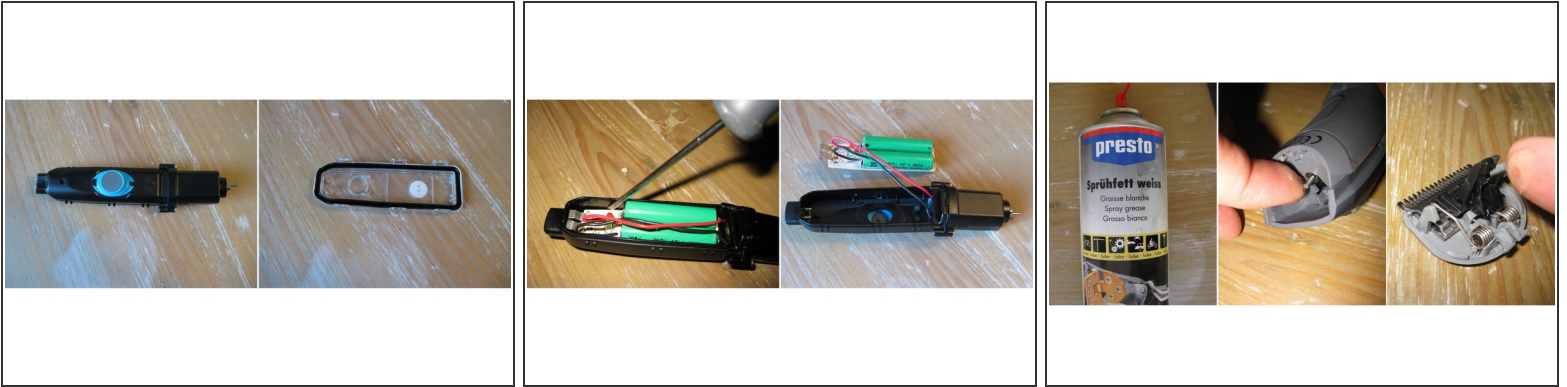

- Remove the back cover.
- Using a flat head screw driver, remove the screw holding the power board in place.
- Use compressed air to clean the motor. *Take this opportunity to lubricate the trimmer with an anti-rust spray or WD-40.*
- Remove the two AAA batteries by soldering them with soldering iron and des soldering pump.
- Bend the terminals of the new batteries and solder them back in the right direction
- If the batteries are already slightly charged, you can briefly press the power button to check if the motor is working
- Insert the board again, with the side towards the motor first

Step 3



- *This step shows the removal of the upper cover. This area also can benefit from cleaning and lubrication to help improve the performance of the beard trimmer.*

To reassemble your device, follow the above steps in reverse order.