




Samsung Galaxy Tab E 9.6 Verizon Front Panel Replacement

Prerequisite Only

Written By: Dave Dorzback

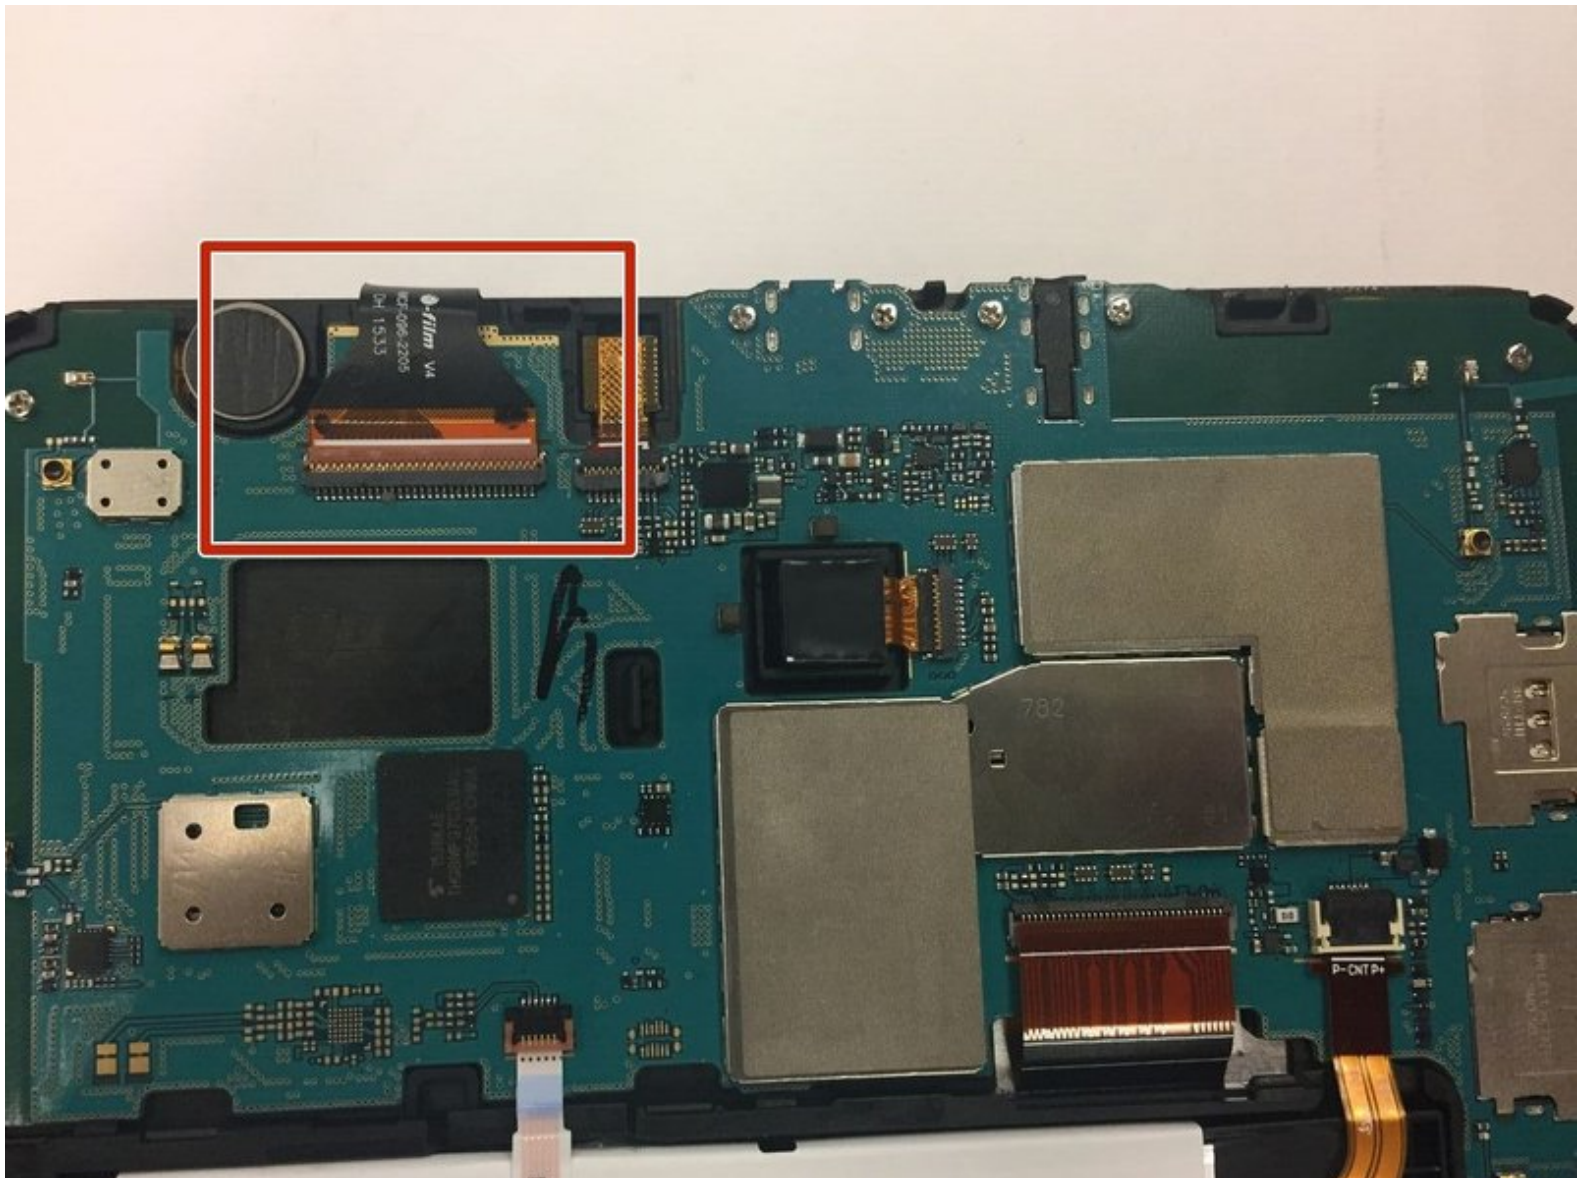

INTRODUCTION


Front panel removal for the Samsung Galaxy Tab E Verizon.


TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Suction Handle](#) (1)
 - [Tweezers](#) (1)
-


Step 1 — Back Casing




 If the device has a micro-SD or SIM card inserted, remove them from the device before continuing.


 Verify your device is turned OFF after removing all external peripherals from it. Power down the device if it's turned on.

Step 2

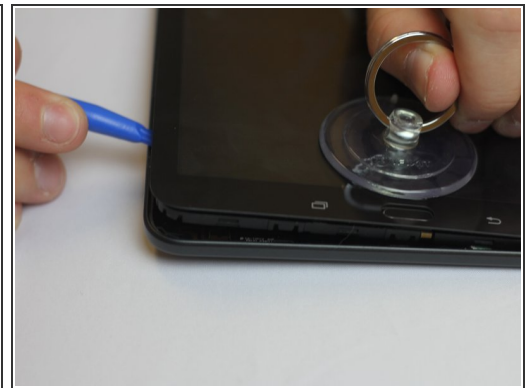


- Insert a plastic opening tool in between the edge of the device's screen and its back cover. Once the tool is wedged between the glass and back casing, move the tool around the edges of the device to undo the plastic clips holding the casing attached.
-  Inserting the tool and prying off the back casing requires a good deal of force. If you're having trouble undoing the clips, try using a suction cup on the screen to increase separation with the back casing.

Step 3

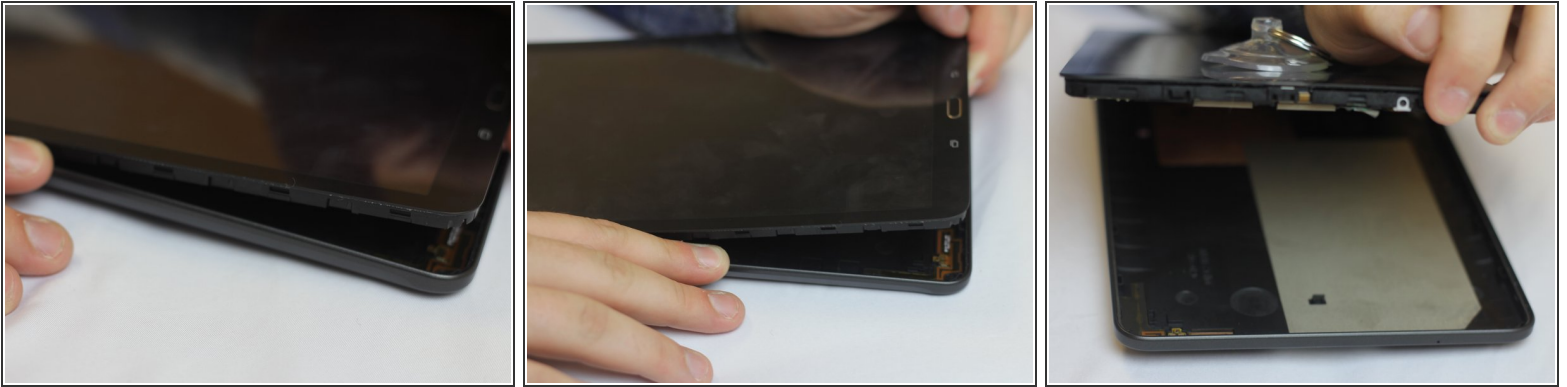


- As more clips are undone, it will become easier to further separate the device from its casing. Once you're able to separate roughly half of the device from the back casing, use your hands to gently pull the back cover off of the device.
- ☑ Don't forget: after creating some separation between the device and back case, you can use a suction cup attached to the screen to aid in pulling the device apart.

Step 4 — Front Panel

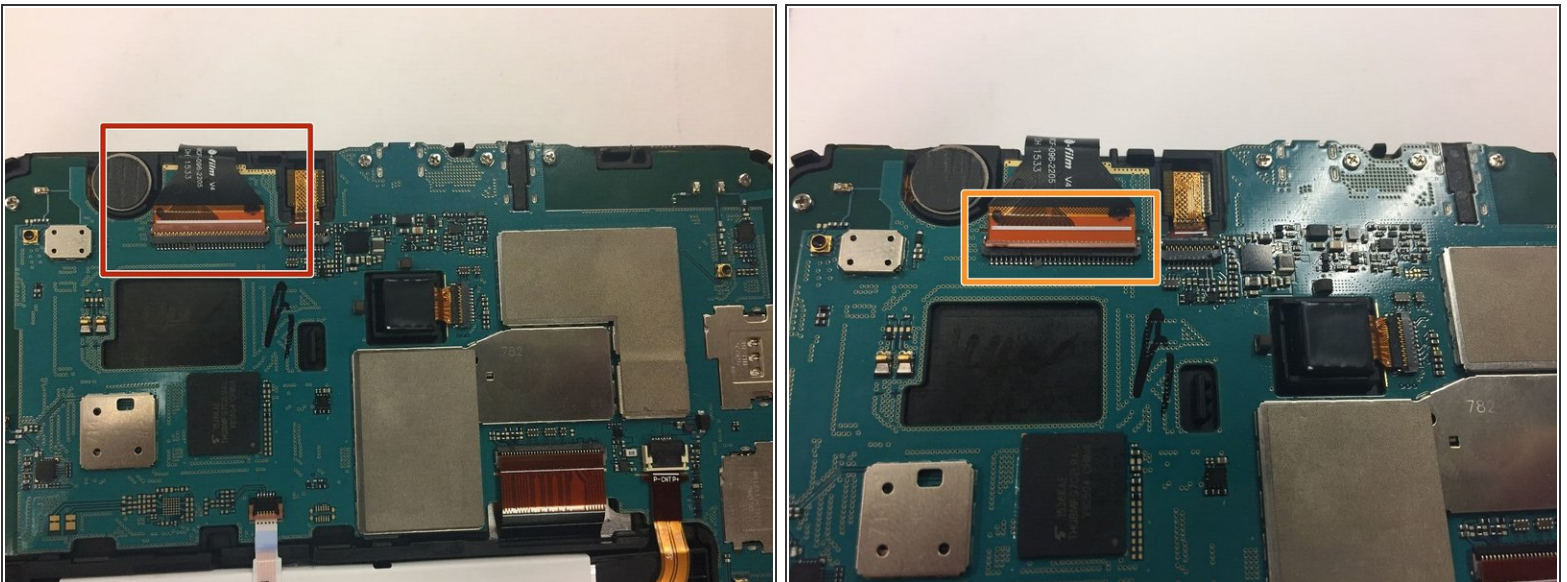

- Turn the device over so the screen is facing down. Locate the front panel assembly connector at the top left corner of the motherboard.
- To remove the connector, first use a pair of tweezers and flip the connector lock upwards towards the battery.

Step 5

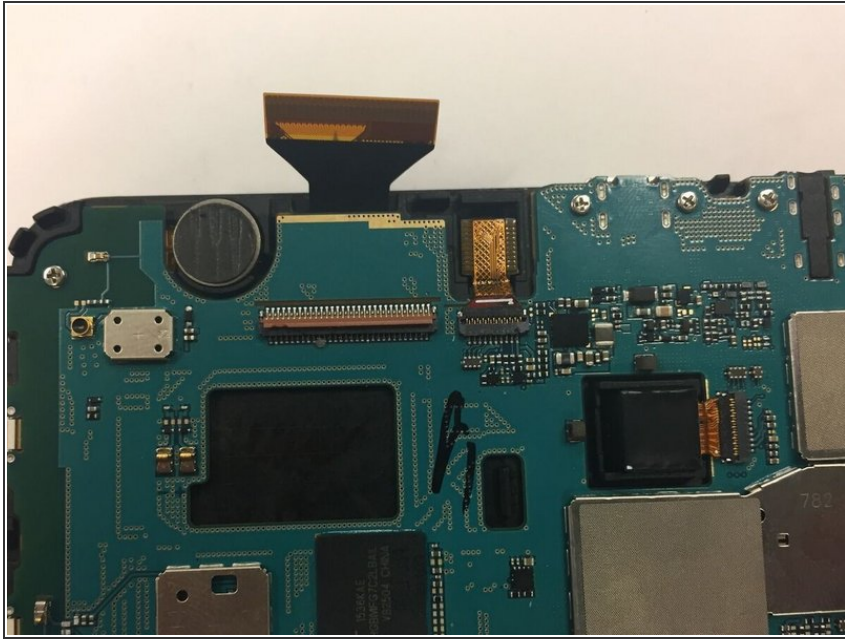

- Once you've undone the connector lock, use a pair of tweezers to pull the cable from its housing.

Step 6



- Turn the device back over and use a plastic opening tool to detach the adhesive glue securing the front casing.
- You will need to wedge a plastic opening tool in between the front casing and the screen. Then move the tool around the perimeter of the device to break the adhesive.
- Once you've loosened the front panel enough with the prying tool, you can use your hands to pull the front panel off of the device.

To reassemble your device, follow these instructions in reverse order.

