



# Resealing Procedure

How to close and reseal the Apple Watch Series 4 after disassembly.

Written By: Dominik Schnabelrauch



---

## INTRODUCTION

Use this guide to close and reseal your Apple Watch Series 4 after disassembly.

---

### TOOLS:


- [ESD Safe Tweezers Blunt Nose](#) (1)
  - [iOpener](#) (1)
-

## Step 1 — Resealing Procedure



- Remove the blue protective film from the adhesive.
- ⓘ To simplify the removal you can lift and cut the blue protective film at one point. Avoid cutting the force touch gasket.

## Step 2

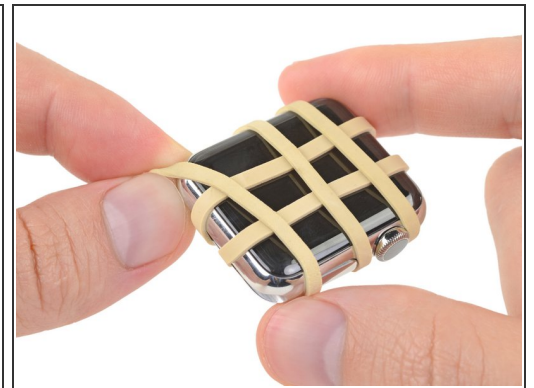

- Align the screen and press it down firmly onto the adhesive.
- For best results, apply heat from your iOpener, heat gun, or hair dryer to help set the adhesive.
- After the screen sits in place apply some pressure for a few hours by wrapping the watch with a couple rubber bands, or placing it under a heavy book or two.
- As a final check, power on your watch and make sure Force Touch works correctly—a hard press on the screen should cause the watch to vibrate, and the press should register on the display.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Check out our [Answers community](#) for troubleshooting help.