



Ceiva LF2003 Exterior Frame and Matting Replacement

Change out a broken frame, or swap in new one for a change in color.

Written By: Casey Glasgow



INTRODUCTION

Replacing the frame on the Ceiva LF2003 is very easy. No tools are required, and it only takes a few seconds.

Step 1 — Exterior Frame and Matting




- Lay the device on its back, and rotate so the base is facing away from you.

Step 2



- Grip the frame with your fingers under the edge of the frame, and thumbs pushing down on the front of the device.

Step 3

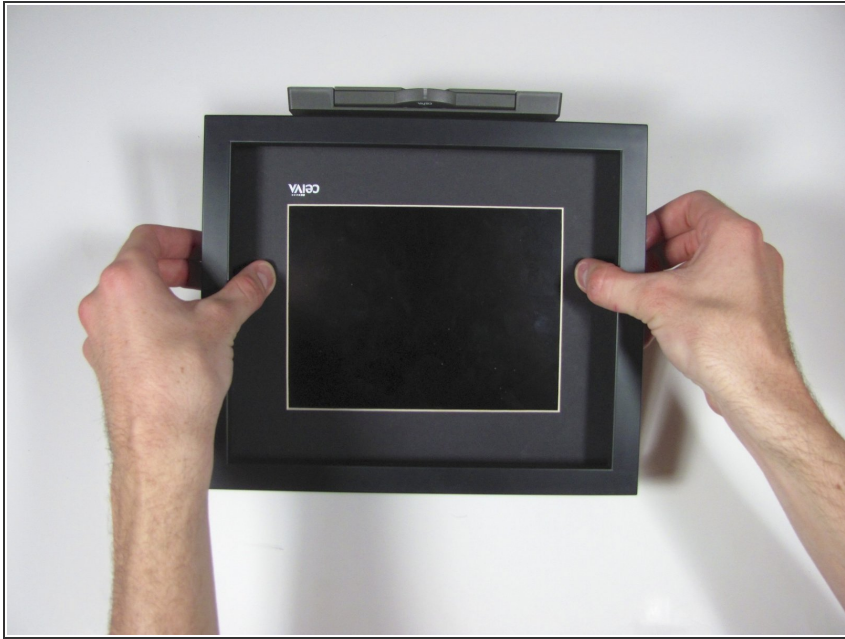

- Lift up the frame with your fingers and push down the rest of the device with your thumbs.

Step 4



- Remove the frame and mat from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 05:34:37 AM.