


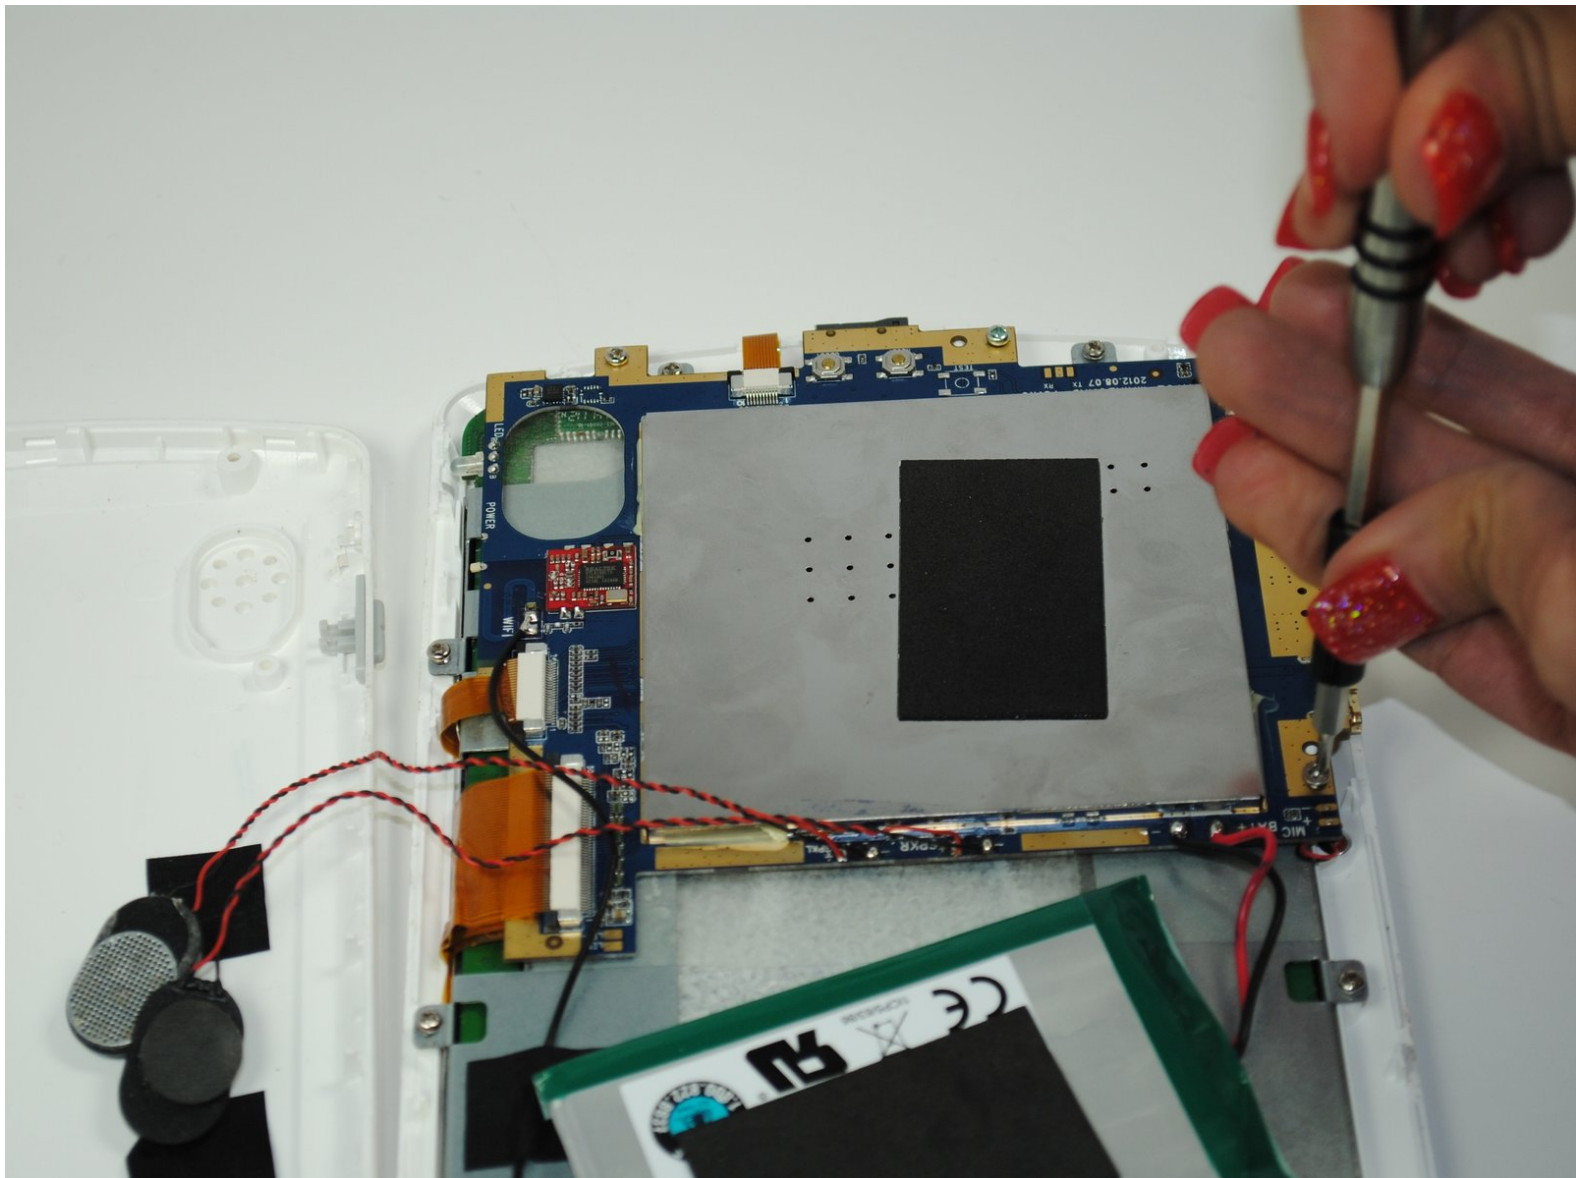

# Oregon Scientific Meep! 4.0 Microphone Replacement

Use this guide to replace the microphone of your Oregon Scientific Meep! 4.0 tablet.

Written By: Jess Forte



---

## INTRODUCTION


Follow the steps in this guide to replace the broken microphone of your Oregon Scientific Meep! 4.0 tablet.

---

### TOOLS:

- [Screwdriver](#) (1)
  - [Soldering Iron](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Oregon Scientific Meep! 4.0 Disassembly

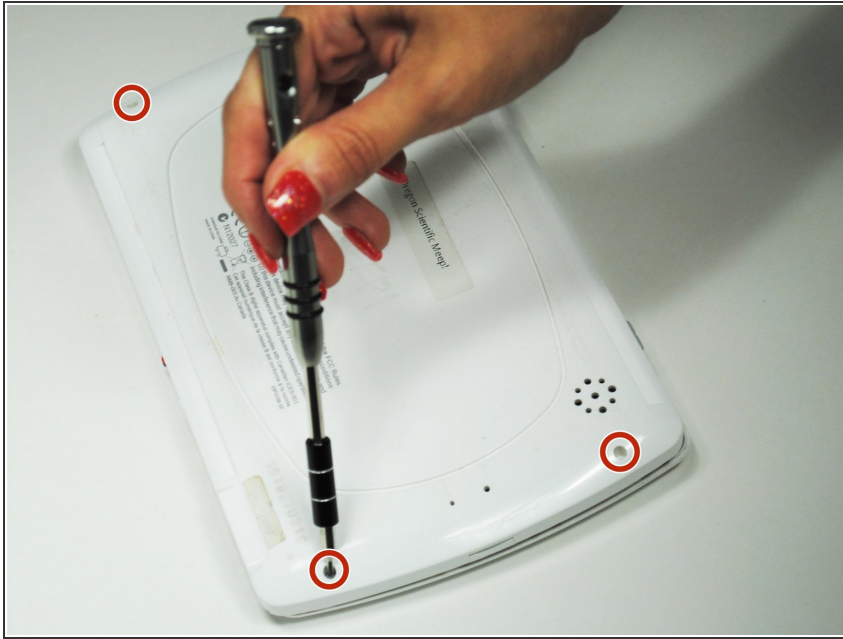


- Use a screwdriver to remove the four 7.0 mm Philips #00 screws from the back of the device.

## Step 2




- Use a plastic opening tool to detach the clips on the inside of the device.

### Step 3 — Microphone

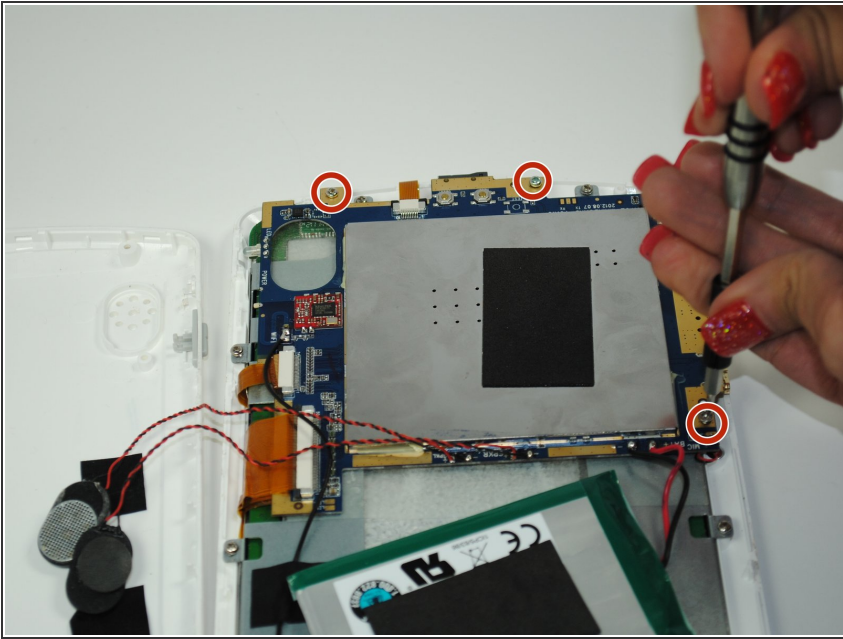



- Use a screwdriver to remove the three 7.0 mm Philips #00 screws and unscrew the motherboard.

### Step 4

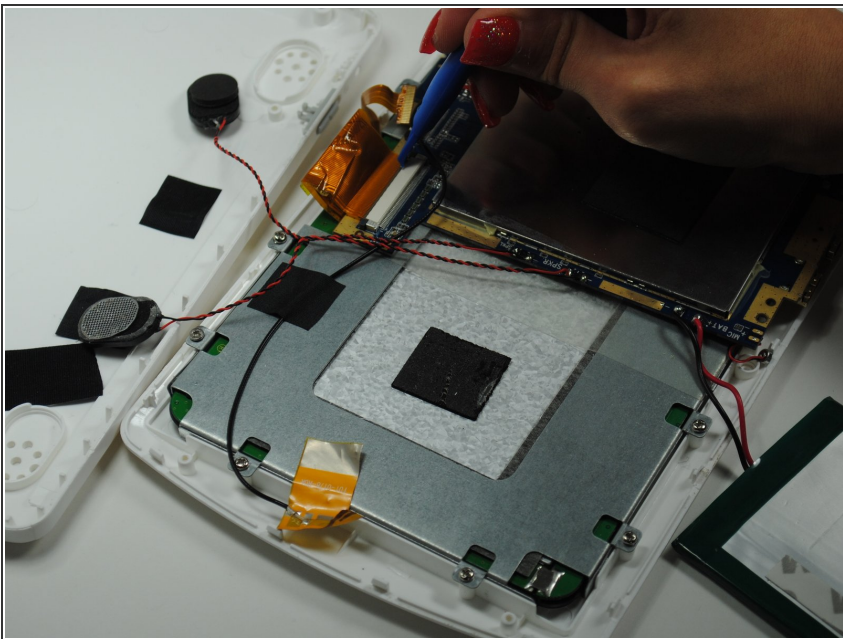

- Use a plastic opening tool to release the three ribbon cables attached to the motherboard.

## Step 5

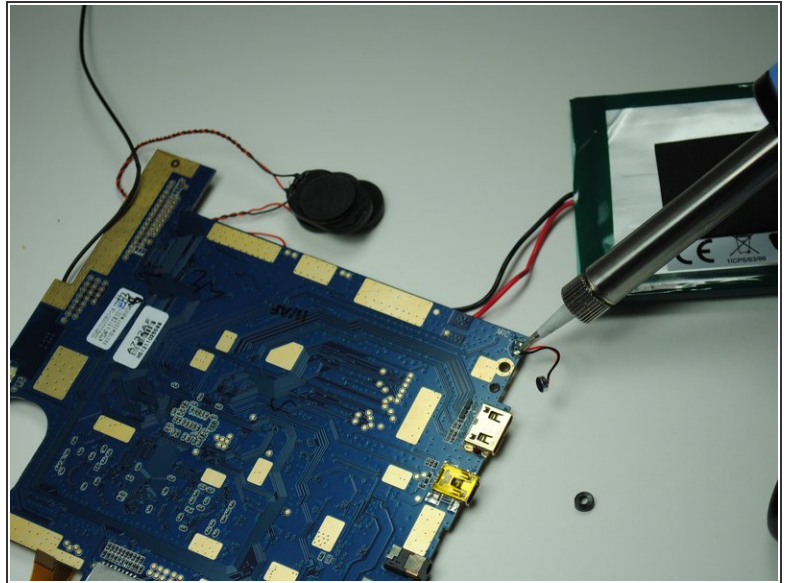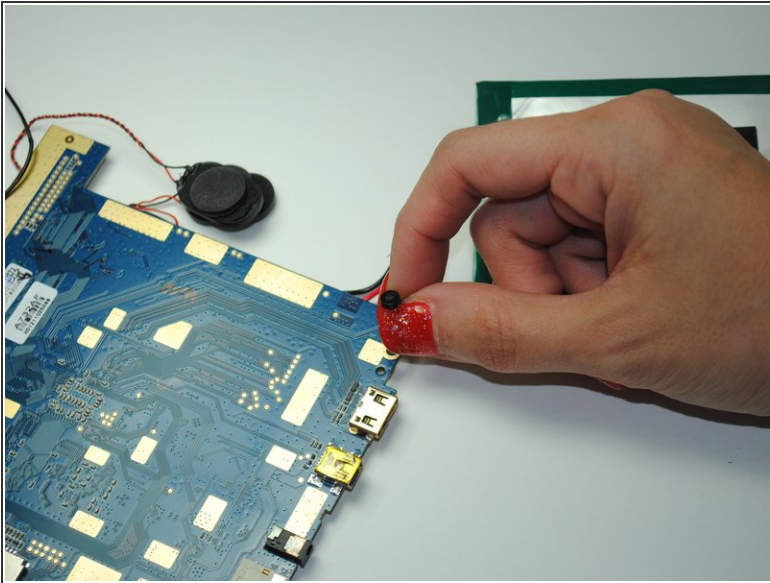

- Lift up the motherboard and use a soldering station to remove the microphone from its wires.

To reassemble your device, follow these instructions in reverse order.