



# Installing MacBook Pro 15" Core 2 Duo Models A1226 and A1260 Keyboard

Author: Walter Galan

## Tools used in this guide

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)

## Parts relevant to this guide

- [MacBook Pro 15" \(Model A1260\) Keyboard](#) (1)
- [MacBook Pro 15" \(Model A1226\) Keyboard](#) (1)

This guide shows the hidden screws you must remove when replacing the keyboard.



### Step 1 — Battery

- Use your fingers to push both battery release tabs away from the battery, and lift the battery out of the computer.



### Step 2 — RAM Shield

- Remove the three identical 2mm Phillips screws from the memory door.
- Lift the memory door up enough to grip it and slide it toward you, pulling it away from the casing.



## Step 3 — Upper Case

- Remove the two 2.8 mm Phillips screws in the battery compartment near the latch.



## Step 4

- Remove the following 6 screws:
  - Two 10 mm T6 Torx screws on either side of the RAM slot.
  - Four 14.5 mm Phillips screws along the hinge.



## Step 5

- Remove the four 3.2 mm Phillips screws on the port side of the computer.



## Step 6

- Rotate the computer 90 degrees and remove the two 3.2 mm Phillips screws from the rear of the computer.




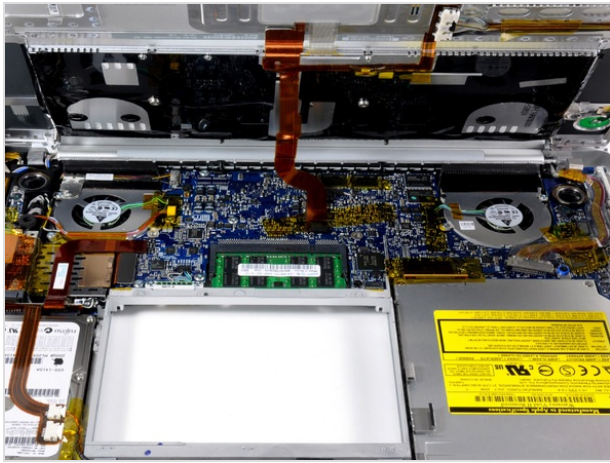
## Step 7

- Rotate the computer 90 degrees again and remove the four 3.2 mm Phillips screws from the side of the computer.




## Step 8

- Do not yank the upper case off quickly. The case is attached to the logic board via a ribbon cable. 
- Lift up at the rear of the case and work your fingers along the sides, freeing the case as you go. Once you have freed the sides, you may need to rock the case up and down to free the front of the upper case.
- There are four plastic clips above the DVD slot, and another above and to the left of the IR sensor. These clips can be very difficult to disengage without prying. They can also be difficult to re-engage during reassembly.




## Step 9

- Disconnect the trackpad and keyboard ribbon cable from the logic board, removing tape as necessary.
- Note: It is possible to replace the hard drive without disconnecting the keyboard from the chassis, but it will need to be held upright to keep it out of the way, while still allowing you both hands to work on the drive removal. Be careful when removing the keyboard-trackpad ribbon cable to ensure that the rear of the upper case is disengaged from the area near the hinge. It is easy to accidentally bend the screw receivers on either side of the keyboard.
- Remove the upper case.

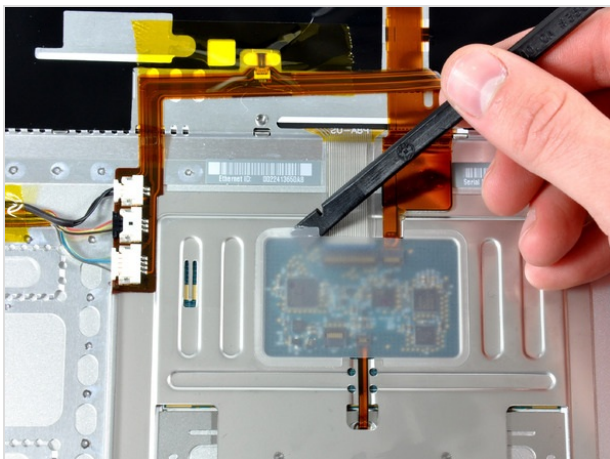


## Step 10 — Keyboard

- Use a spudger to pry up the translucent plastic sheath covering the keyboard connector.

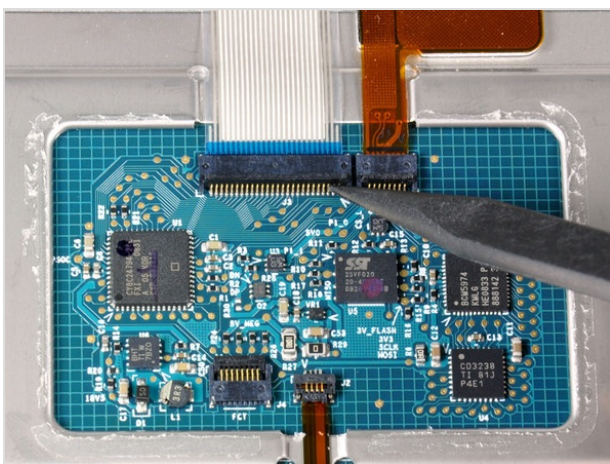


## Step 11

- Use the tip of a spudger to flip up the black plastic flap locking down the keyboard ribbon cable.

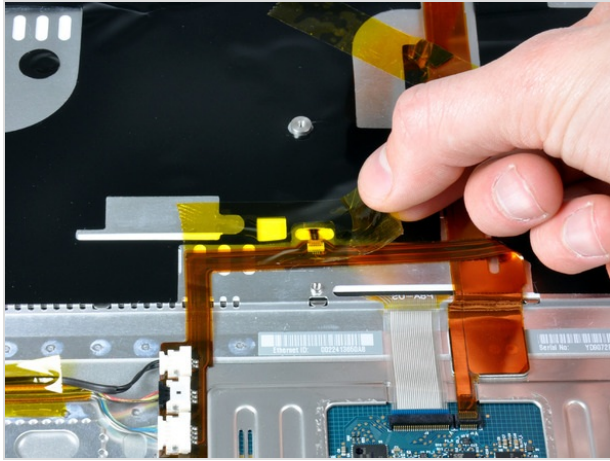

## Step 12

- Peel up the orange tape covering the keyboard backlight connector.

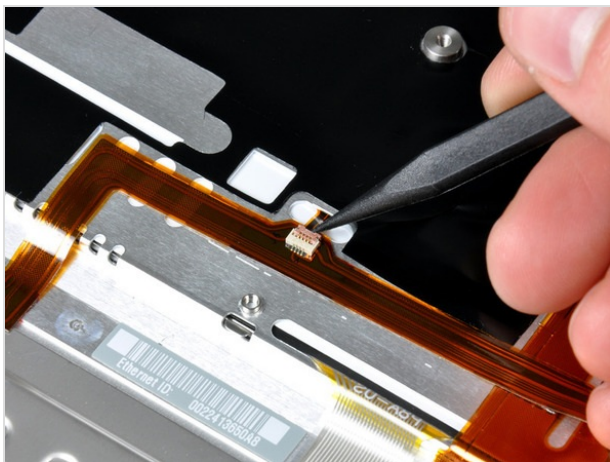

## Step 13

- Use the tip of a spudger to flip up the brown plastic flap locking down the keyboard backlight ribbon cable.




## Step 14

- Use a spudger or your finger to slide the keyboard backlight ribbon out of its connector.




## Step 15

- Peel back the black protective sheath on the right side of the upper case. It is not necessary to fully remove this shield. Simply peel it back enough to access the screws beneath.

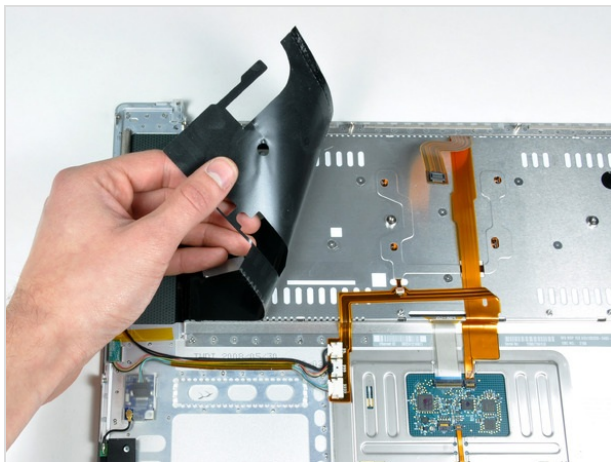


## Step 16

- Peel back the black protective sheath on the left side of the upper case. It is not necessary to fully remove this shield. Simply peel it back enough to access the screws beneath.

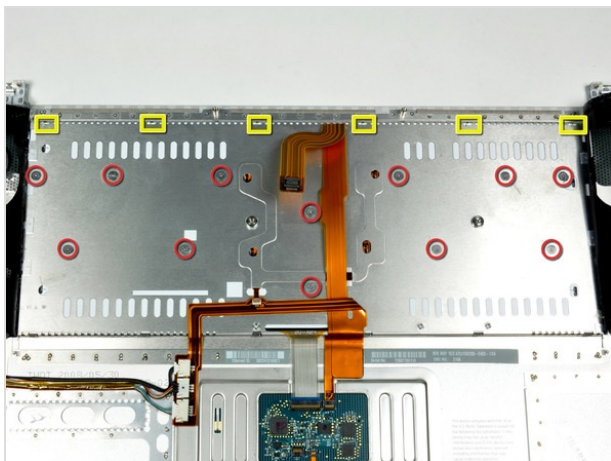


## Step 17

- Remove the 12 identical Phillips screws attaching the keyboard to the casing.
- There are six locking tabs along the back edge of the keyboard holding it in place. These tabs must be straightened before you can remove the keyboard.

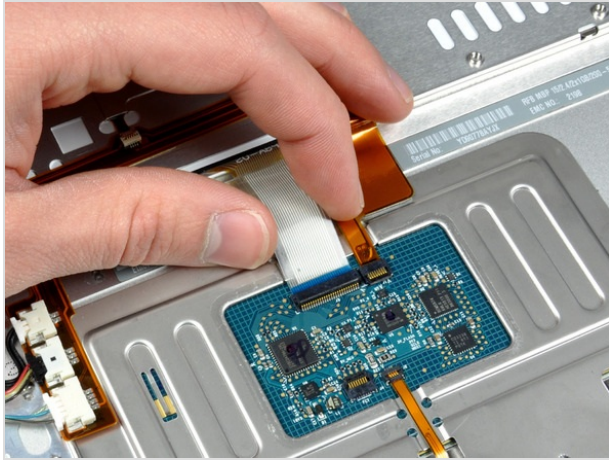

## Step 18

- Slide the keyboard ribbon out of its connector.
- If the keyboard ribbon won't slide out, make sure that the black plastic flap holding the ribbon in place is vertical.

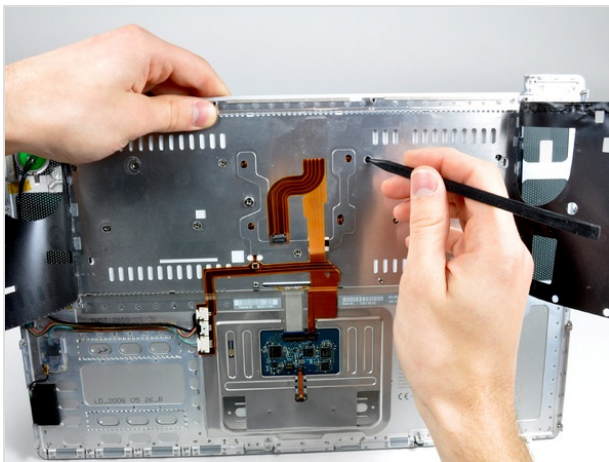

## Step 19

- Place the upper casing on its edge and use a spudger to push the keyboard away from the casing, poking the spudger through the central keyboard screw hole. Grasp the keyboard as it separates from the casing.
- Maintaining your hold on the keyboard, lay the casing flat and gently bow the keyboard until the two tabs on either side of the keyboard come free.
- Slide the keyboard away from the trackpad and out of the upper case.
- When installing the new keyboard, remember to slip the keyboard backlight ribbon cable through the slot in the top casing.



To reassemble your device, follow these instructions in reverse order.

This document was last generated on Feb 24, 2012.