




# Meizu MX3 Rear Facing Camera Replacement

This guide shows how to replace the Camera in the 5.1 inch Meizu MX3.

Written By: Mandela Robin

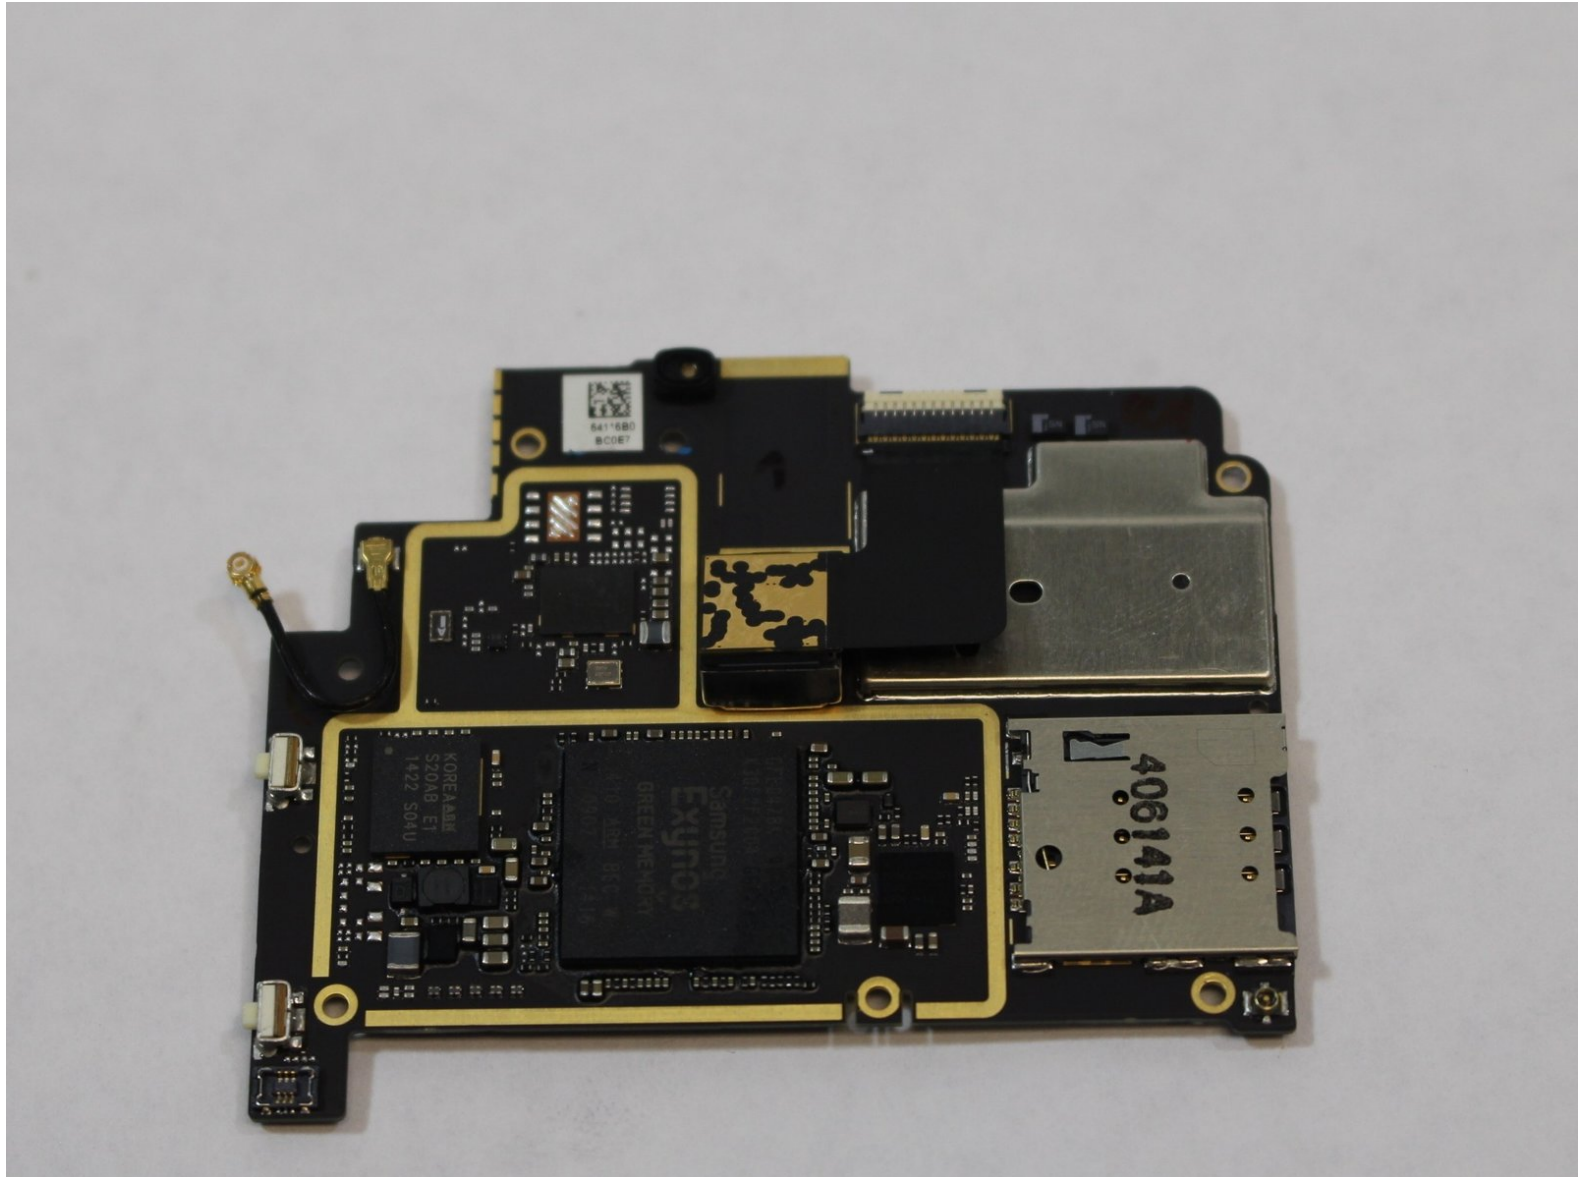

---

## INTRODUCTION

If your camera seems broken, and you're sure that it is not a software problem, then you may need to replace the whole unit. Luckily, there is no heavy-duty work involved. Follow this guide to learn how to replace your Meizu MX3's camera by removing some screws and cables.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [64 Bit Driver Kit](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Removing the Back Cover




- Insert the plastic opening tool in between the charging port and the back case of the device. Slowly move the tool to the left until you come to the top by the power button.
- Using a paper clip or pointed edge spudger push in the pin located in the bottom right hand corner of the back of the phone.

## Step 2 — Removing the Screws in the Internal Casing

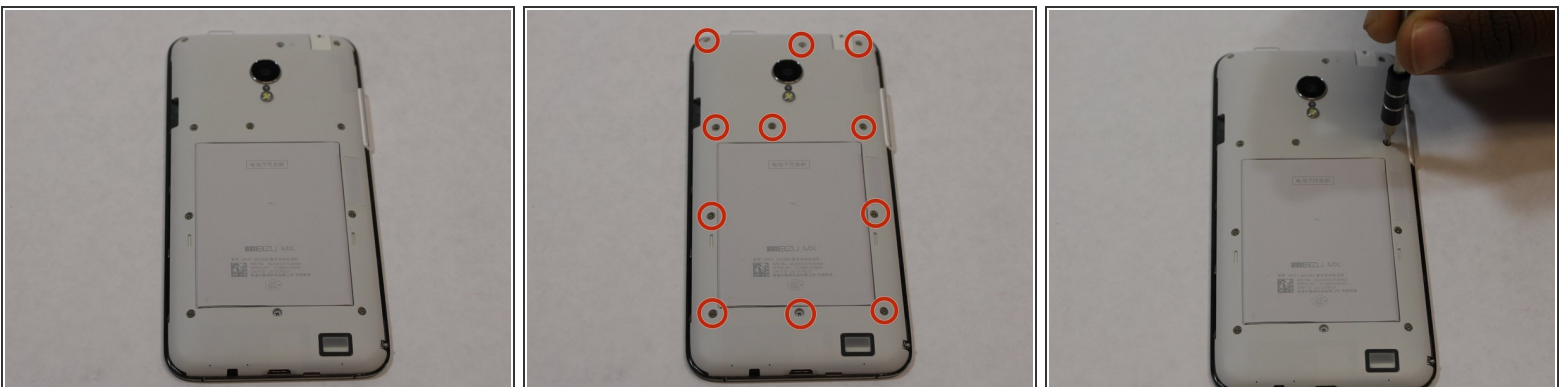


- Using one of the small Phillips screwdriver bits provided unscrew the 11 screws present on the protective plastic plate under the device case.

### Step 3 — Removing the Battery

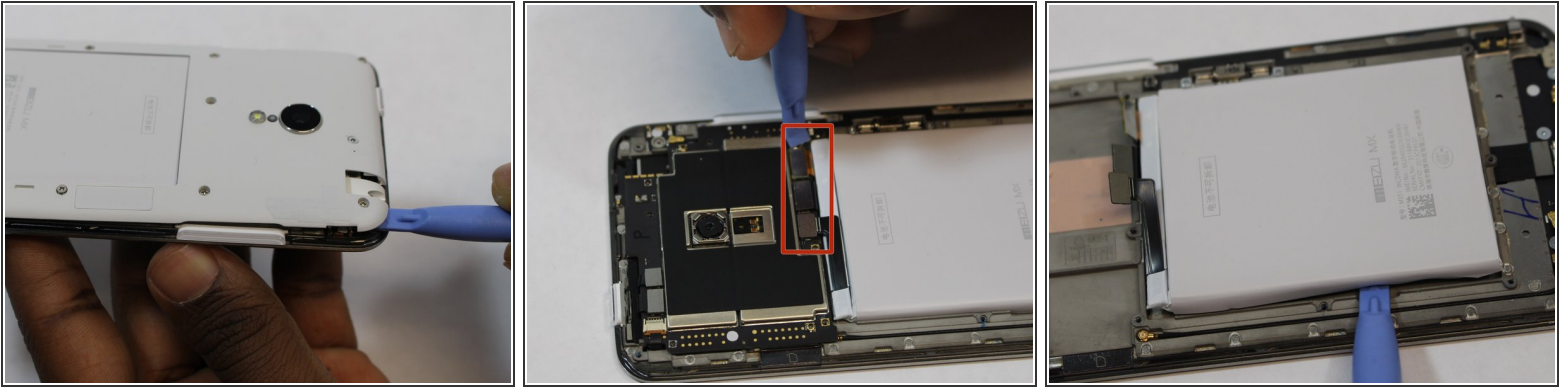


- After the 11 screws are loosened use the plastic opening tool and gently pry the protective plate from the back of the device.
- Once the plate is off, use the same tool to gently remove the 3 ribbon cables located directly above the battery.
- On the left side of the battery on the phone case, there is a groove where the plastic opening tool can be inserted to pry the battery up and out. The battery might be glued to the phone so exercise caution.

## Step 4 — Removing Extra Components

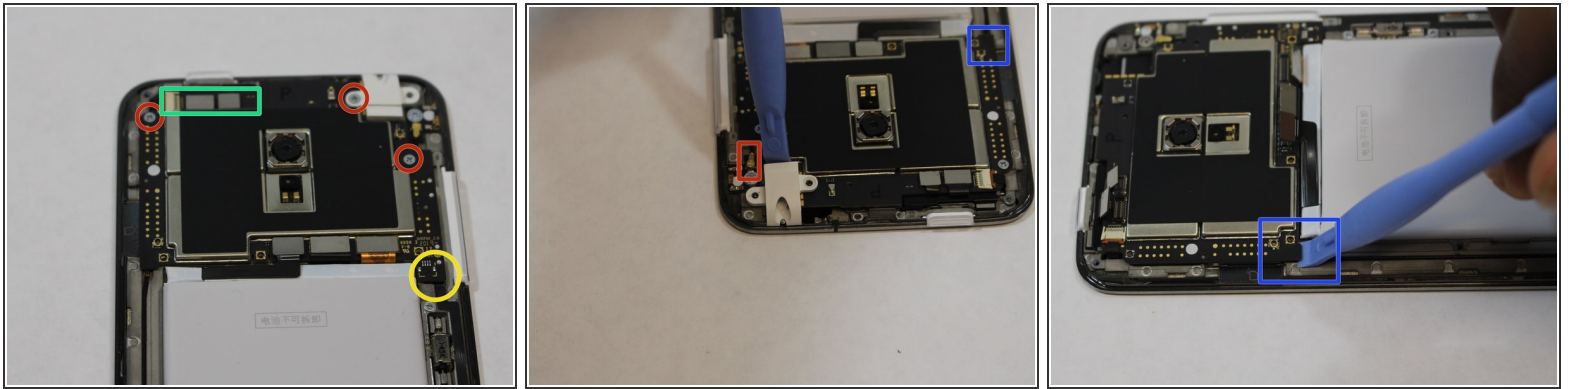

- Remove the screws in the three red circles. Two of the three ribbon cables in the turquoise box will need to be removed like those above the battery. Use the pointed edge spudger to pull the third cable out to the left.
- Insert the plastic opening tool on top the ribbon cable but below the circuit board in the yellow circle, and pry that ribbon cable free. Remove the headphone jack as see in the picture.
- Use tweezers to disconnect the wire connector in the red box. As seen in the picture gently insert the plastic opening tool and unhook that cable and begin to lift the circuit board.

## Step 5 — Removing the Camera

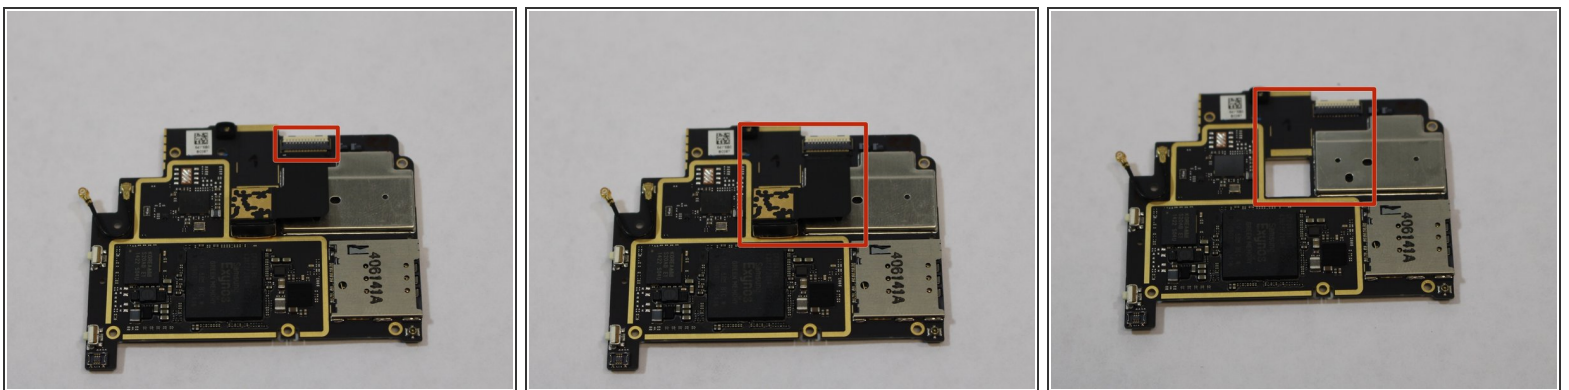

- Use the pointed edge spudger, remove the cable in the box by prying the left side and right side of the cable repeatedly. Then remove the camera.
- Once the camera is removed, the circuit board should look like the board in the last picture.

To reassemble your device, follow these instructions in reverse order.