



# Microsoft Surface Pro 4 Display Replacement

Display removal instructions for Surface Pro 4

Written By: Andrew Prater



## INTRODUCTION

Here's how to remove the display for the Surface Pro 4. This is the first step to replacement and to many other repairs on this device.

---

### TOOLS:



- [Suction Handle](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [iFixit Opening Tools](#) (1)
- [Small Plastic Spudger](#) (1)
- [Tesa 61395 Tape](#) (1)
- [Microfiber Cleaning Cloths](#) (1)
- [Heat Gun](#) (1)
- [Isopropyl Alcohol](#) (1)

### PARTS:

- [Surface Pro 4 Screen](#) (1)



## Step 1 — Display



-  Before you begin, discharge the Surface Pro's battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally damaged during the repair.
-  Make sure the device is turned off before you start working on it.
- If your display is cracked, cover it with strips of packing tape to contain any glass shards and prevent injury.

## Step 2



-  The display is strongly glued to the frame of the device.
- To remove the display, first soften the adhesive by applying heat. You can use a heat pad, heat gun, or iOpener. In a pinch, a hair dryer can also work.
-  Be careful when using a heat gun, as too much heat can permanently damage the display.
- Steadily and evenly heat the perimeter of the display until it's too hot to touch, and try to maintain that temperature for several minutes—but don't overheat it, or you may damage the display.

## Step 3




- Use a suction cup or an iSclack to pull up on the glass and create a slight gap between the glass and the metal frame.
  - ⓘ If your display is badly cracked, a suction cup may not adhere. It may help to first cover the display with a layer of packing tape. Alternatively, you can superglue your suction cup to the display.
- Insert an opening pick into the gap.
  - There are tabs on the upper right side and upper left side where it is easier to get a tool under the display.
- Slide an opening pick around the sides and bottom of the display to cut the adhesive. Apply more heat as needed.
  - ⚠ The tape is much thinner on the bottom edge than the other three sides. Do not push the tool in too far or you will damage the screen permanently.
  - ⚠ Work carefully—the glass is thin and will crack easily if you try to force it.
- Separate the top edge last. There are antennas on both sides, so be careful not to damage them. If needed, you can use a bit of isopropyl alcohol to help weaken the adhesive.

## Step 4




- Attach a suction cup to the front of the display.
  - Using the suction cup, pull the display and base apart. You may need to hold the base in position with your hands.
- i** It is usually better to place the suction cup on the left or right side of the screen, rather than in the center. This provides more leverage when removing the screen.

## Step 5

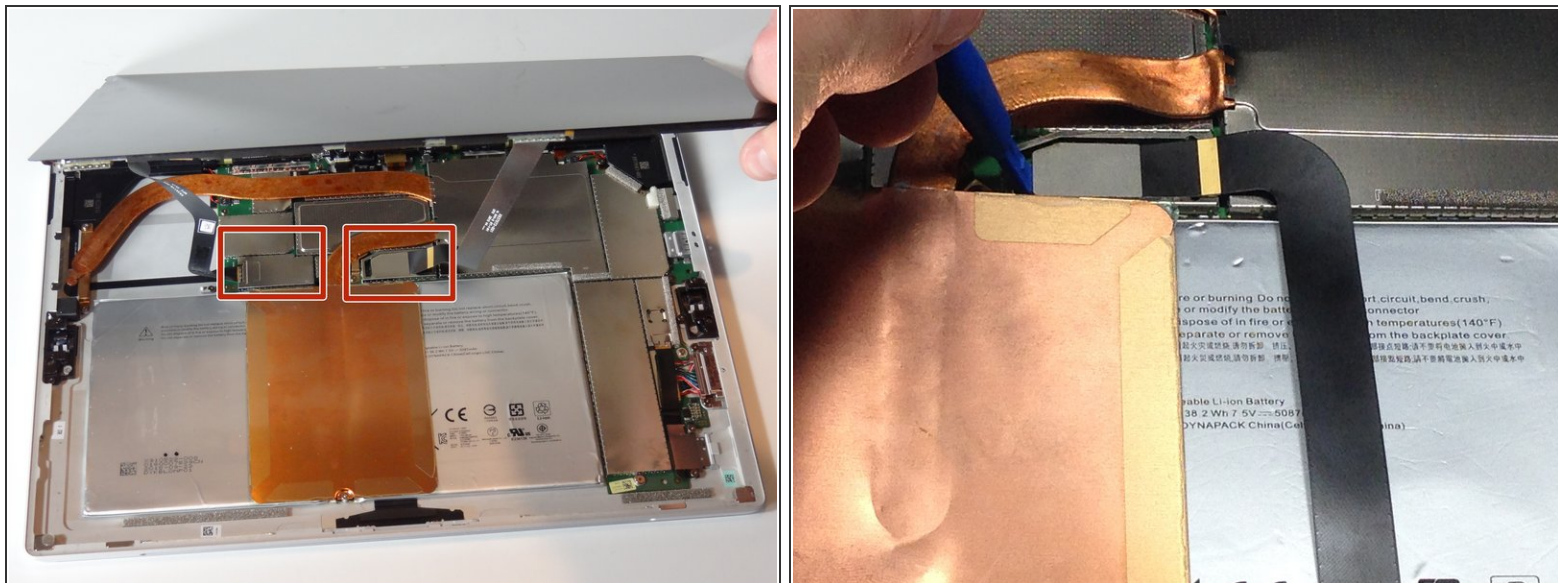

- There are two display cables connecting the body to the display.
- Disconnect the cable on the right by putting a plastic opening tool under the edge of the connector and prying it up.

## Step 6

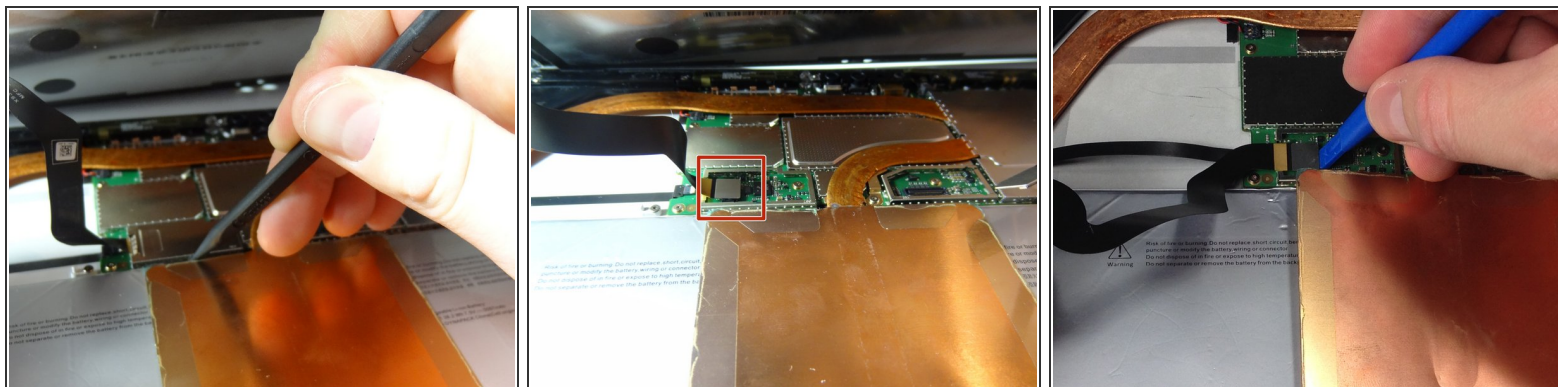

- The connection for the strip on the left is covered by a lightweight metal casing. Pry around the edges of this case with a plastic spudger. Once it is loose, pull it off.
- Unplug the connection with a plastic opening tool.

## Step 7



- The display should now be free of the body of the Surface Pro. Lift it up and away from the rest of the device.
- ☞ Before installing a new display, check it carefully to see if any parts need to be transferred over from the back of the old display to the new display. In particular, you may need to transfer over the [NTrig board in the corner](#) by disconnecting the two attached ribbon cables and using heat and gentle prying to carefully separate the glue securing the board.
- ☞ To replace the adhesive securing the display, carefully remove any old adhesive from both the device and the back of the display. Clean and prep the surface with isopropyl alcohol and a lint-free cloth, swiping the cloth in one direction (not back and forth). Apply a strong double-sided tape, such as 2 mm [Tesa 61395](#).

To reassemble your device, follow these instructions in reverse order.