



Graco Literider Classic Connect Handle Cover Replacement

This guide will show you how to remove the handle cover.

Written By: Tyler Laird



INTRODUCTION

This guide shows how to locate the screws on the handle cover and remove them to allow the handle cover to come off. This is only necessary if there is a problem in collapsing the stroller.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Handle Cover




- Flip the stroller over so that the screws on the handle are facing upwards.
- Locate the four 22 mm Phillips screws on the underside of the handle.

Step 2




- Using a Phillips #1 screwdriver, remove the four 22 mm screws and set them aside.

Step 3

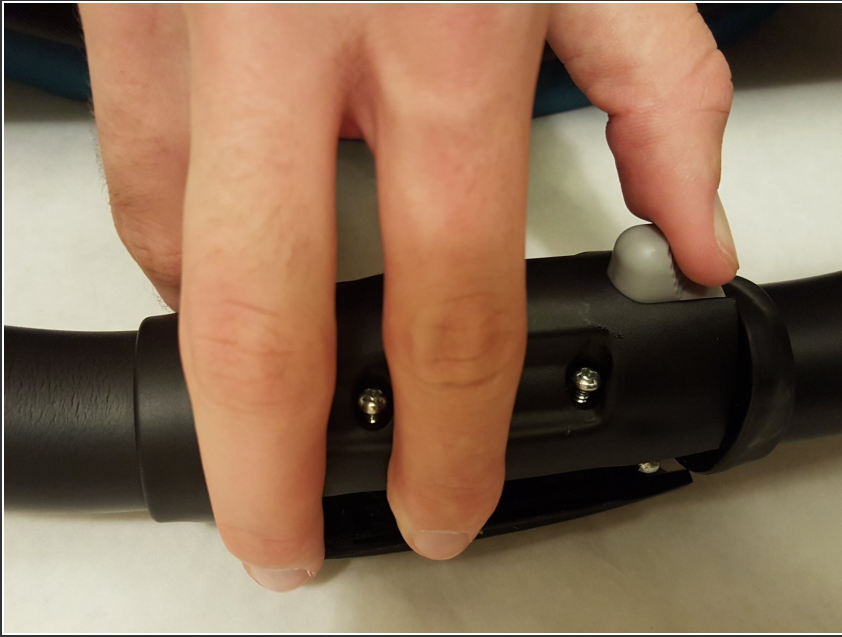

- Push the switch in to allow the handle cover to come free.

Step 4

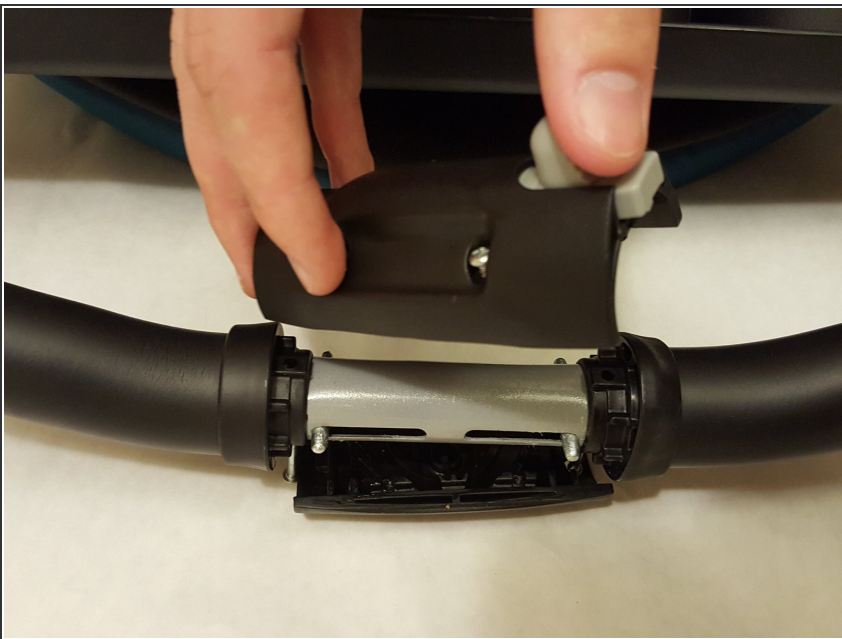

- Remove the handle cover from the handle.
- ⚠️ Avoid pushing the two rods fully into the slots on the handle, as they can be very difficult to remove.

To reassemble your device, follow these instructions in reverse order.