




Removing the Logitech MBJ58 Scroll Wheel from its Mount

Removing the scroll wheel from the wheel mount will allow you to access the resistance spring.

Written By: Conor Whatley

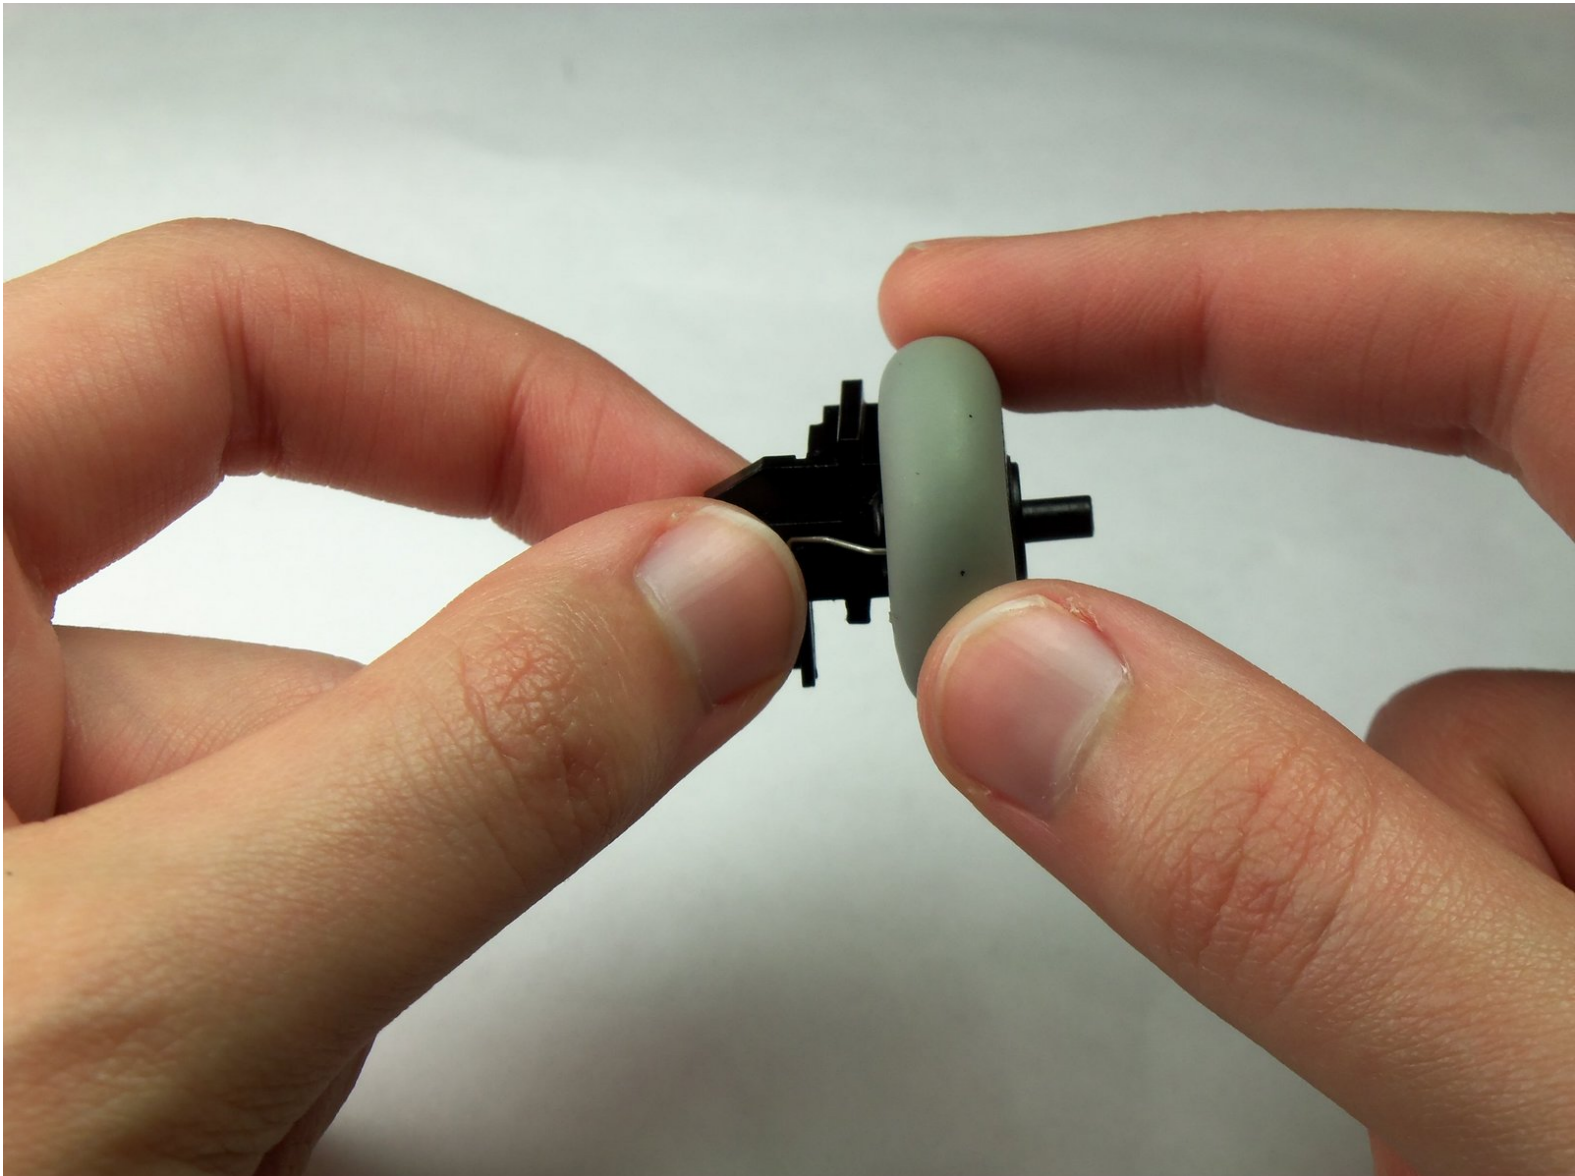

INTRODUCTION

You will learn how to remove scroll wheel from the wheel mount.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top cover




- Hold the mouse so that the bottom is facing up.
- Locate the #1 screw towards the bottom half of the mouse.
- Take the 4.76 mm Phillips screwdriver and unscrew the #1 screw.

Step 2




- Place the mouse so that the bottom is resting against a hard surface .
- Gently lift the top cover of the mouse and remove.

Step 3 — Scroll Wheel

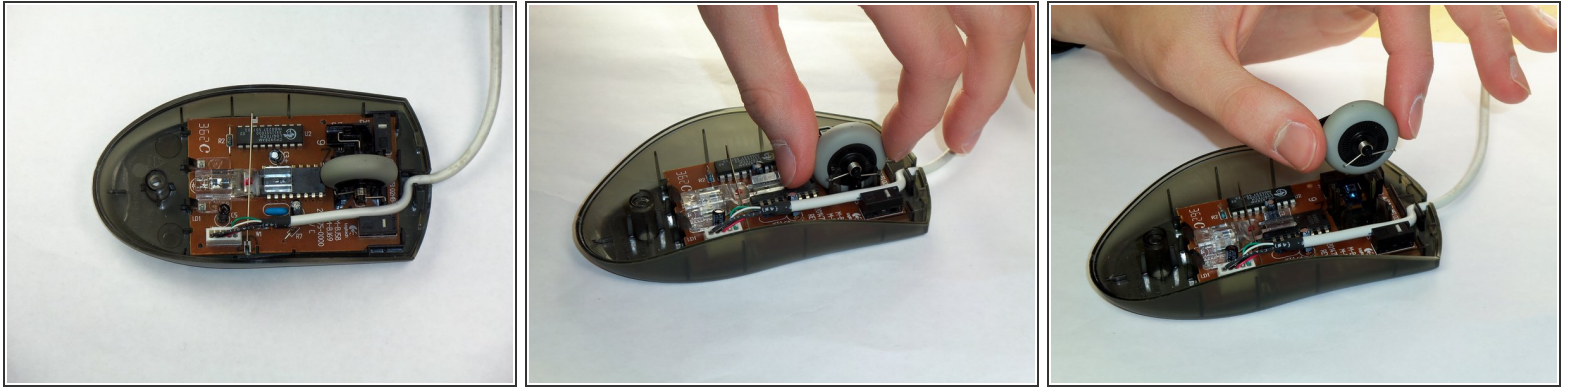


- Locate the scroll wheel on the mouse.
- Grab the scroll wheel with your thumb and index finger.
- Gently lift up to remove the scroll wheel from the mouse.

Step 4 — Support Spring

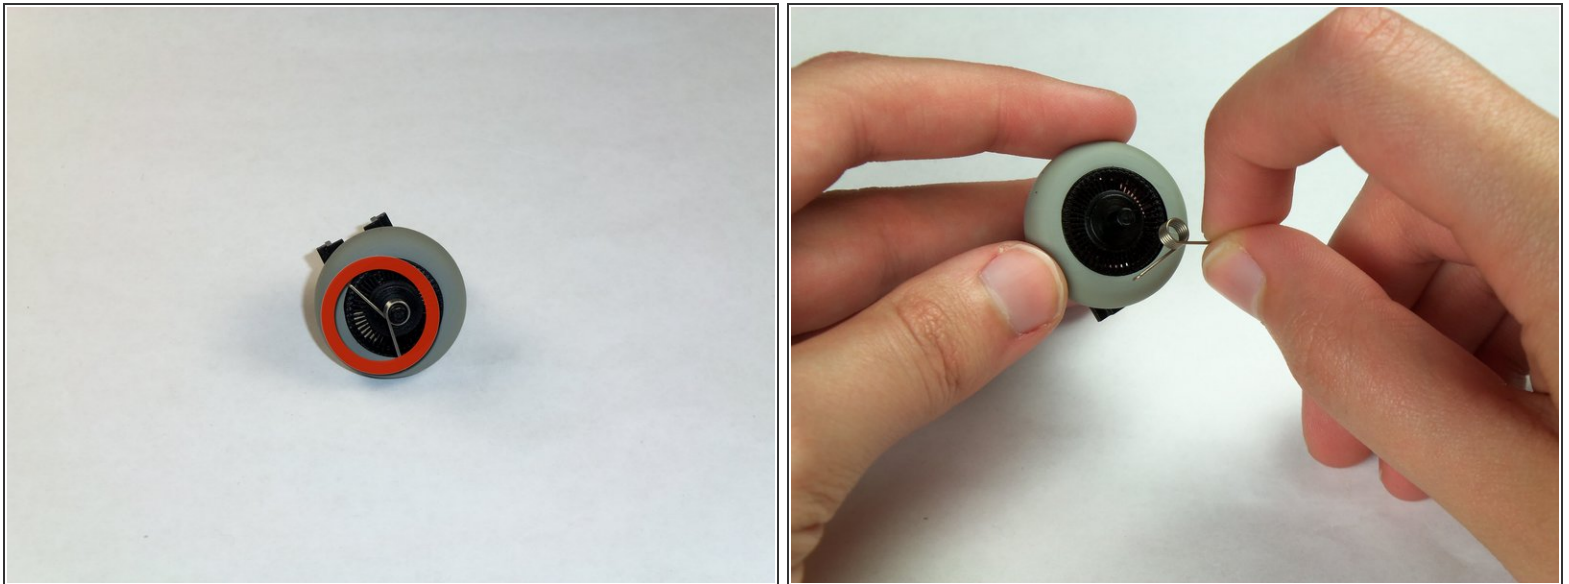


- Locate the spring on the scroll wheel. The spring is a small piece of metal wire coiled in the middle.
- Carefully remove the spring from the wheel scroll.

Step 5 — Attaching the New Spring

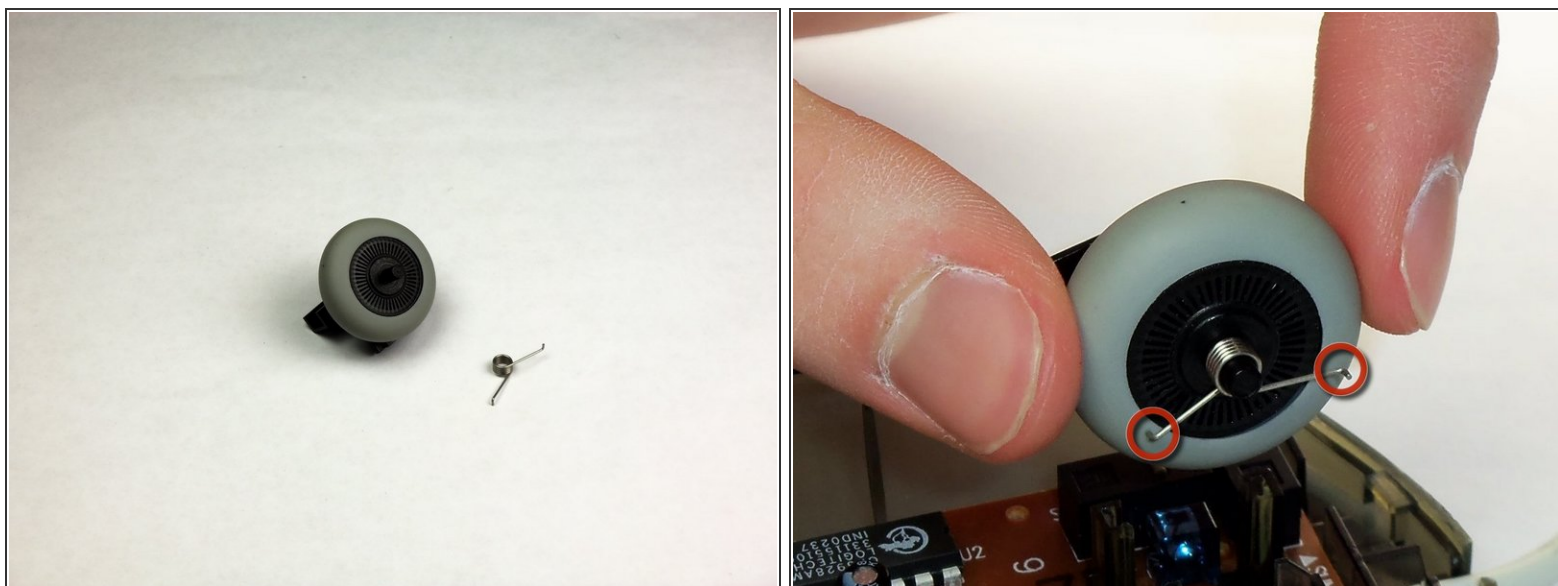

- Replace the spring, place it on the correct side of the wheel with the prongs pointing down.
- ⓘ The correct side is the side without the black plastic square, as shown in the photos.

Step 6 — Wheel Mount

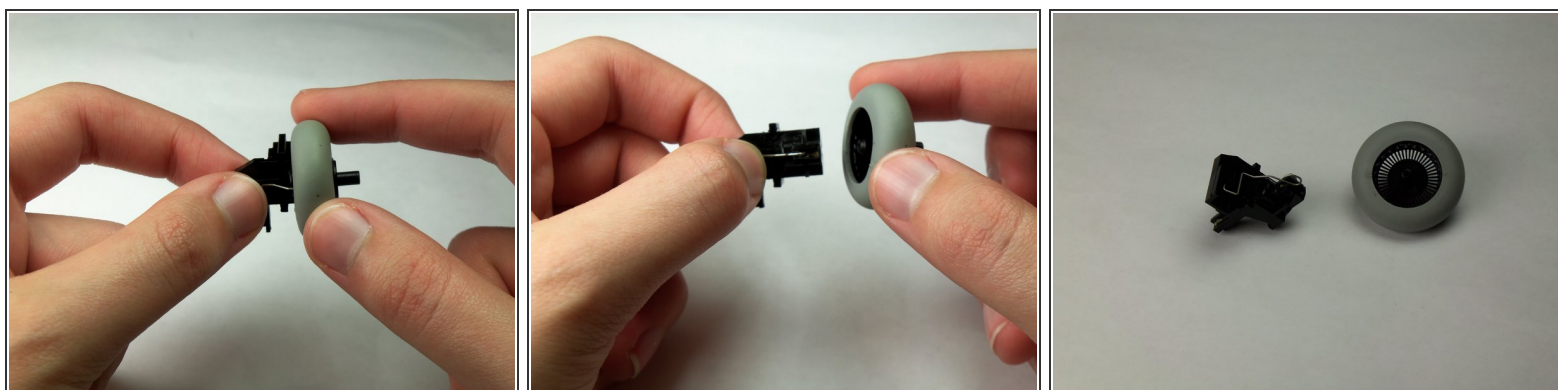

- Locate the black wheel mount.
- ⓘ Note: Make sure that the spring hidden in the mount does not fall out.
- Separate the wheel from its mount.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 06:08:18 PM.